CDX-C910/C910RDS

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

Refer to RM-X2S/X3S Service Manual (9-960-039-□□) issued previously for information of remote commander (RM-X2S) supplied with this set.

Photo: CDX-C910RDS

Model Name Using Similar Mechanism	NEW
CD Drive Mechanism Type	MG-333D-121
Optical Pick-Up Name	KSS-520A

SPECIFICATIONS

CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	105 dB
Frequency response	5 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 µW*

* *This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.*

Tuner section

FM

Tuning range	FM tuning interval: 50 kHz/200 kHz switchable 87.5–108.0 MHz (at 50 kHz step) (AEP, UK, German, E) 87.5–107.9 MHz (at 200 kHz step) (US, Canadian, E)
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	62 dB (stereo), 65 dB (mono)
Harmonic distortion at 1 kHz	0.9 % (stereo), 0.5 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	2 dB

AM (CDX-C910)

Tuning range	AM tuning interval: 9 kHz/10 kHz switchable 531–1,602 kHz (at 9 kHz step) (E) 530–1,710 kHz (at 10 kHz step) (US, Canadian, E)
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 µV

MW/LW (SW) (CDX-C910RDS)

Tuning range	MW: 531 – 1,602 kHz LW: 153 – 281 kHz (AEP, UK) SW: 5,950 – 6,205 kHz (German)
Aerial terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	MW: 30 µV LW: 50 µV (AEP, UK) SW: 50 µV (German)

Preamplifier section

Line outs	FRONT/REAR
Line out impedance	200 ohm
Bus input impedance	10 kohm
Distortion	0.005 % (1 kHz Bus Input)
Line out level	4 V rms

General

Output lead	Power antenna relay control lead Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 × 50 × 176.5 mm (7 1/8 × 2 × 7 in.) (w/h/d)
Mounting dimensions	Approx. 178 × 50 × 164.5 mm (7 1/8 × 2 × 6 1/2 in.) (w/h/d)
Mass	Approx. 1.8 kg (3 lb. 15 oz.)
Supplied accessories	Rotary remote RM-X2S (1) Parts for installation and connections (1 set) Front panel case (1)

Design and specifications are subject to change without notice.

MICROFILM

CDX-C910
FM/AM COMPACT DISC PLAYER
CDX-C910RDS
FM/MW/LW (SW) COMPACT DISC PLAYER

SONY®

TABLE OF CONTENTS

1. GENERAL

Location of Controls 3
Installation 4
Connections 6

2. DISASSEMBLY 8

3. TEST MODE 14

4. ELECTRICAL ADJUSTMENTS

CD Section 14
Tuner Section 14

5. DIAGRAMS

5-1. Block Diagram 17
5-2. Printed Wiring Boards
– Mechanism Deck Section – 21
5-3. Schematic Diagram
– Mechanism Deck Section – 25
5-4. Schematic Diagram – Main Section – 30
5-5. Printed Wiring Boards – Main Section – 35
5-6. Printed Wiring Board – Key Section – 40
5-7. Schematic Diagram – Key Section – 43
5-8. IC Pin Function Description 50

6. EXPLODED VIEWS 56

7. ELECTRICAL PARTS LIST 62

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

Laser Diode Properites
- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output Power: less than 44.6 μW*

  * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1
GENERAL

Location of controls

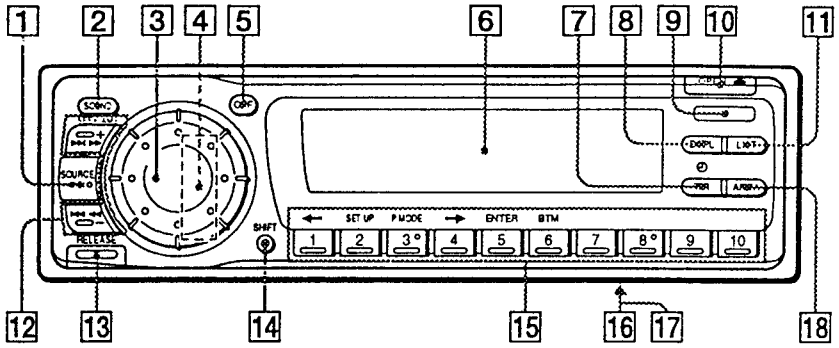

Refer to the pages for details.

1 SOURCE (source select) button 6, 9, 12, 17, 18, 20, 22, 23, 25

2 SOUND button 15, 22, 23, 24, 25, 26

3 Dial (volume/bass/treble/balance/fader control) buttons 5, 12, 15, 20, 21, 22, 23, 24 25

4 RESET button (located on the front side of the unit hidden by the front panel) 4

5 OFF button 4, 6

6 Display window

7 TIR button 12, 13

8 DSPL (display mode change) button 6, 9, 10, 17, 20 **(CDX-C910RDS)**

9 Receptor for the optional wireless remote

10 OPEN/⏏ (eject) button 6

11 LIST button

Disc Memo 20

DSP Custom File 23

List-up 21

RDS Programme 13, 14

12 SEEK/AMS (seek/Automatic Music Sensor/manual search) button 6, 7, 8, 9, 12, 13, 14, 17, 18, 19, 21

13 RELEASE (front panel release) button 4, 27

14 SHIFT button

BTM 9

P.MODE 7, 8, 9, 11, 17, 18, 19, 20, 21, 22, 23

SET UP 5, 14, 16, 17, 26

15 During radio reception:
Number buttons 9

During CD/MD playback:
Direct disc selection buttons 17

16 POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.

17 DIGITAL/ANALOG switch (located on the bottom of the unit)
See "DIGITAL/ANALOG Switch" in the Installation/Connections manual.

18 AF/TA button 10, 11, 12 **(CDX-C910RDS)**

When the positions of switches 16 and 17 have been changed, be sure to press the reset button after connecting power.

Installation

Precautions

- Do not tamper with the four holes on the upper surface of the unit. They are for tuner adjustments to be done only by service technicians.
- There must be a distance of at least 5 cm between the unit and the car's shift lever to open and close the front panel. Install the unit so that it does not interfere with gear shifting and other driving operations.
- Choose the mounting location carefully so that the unit does not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 20°.

How to detach and attach the front panel

Be sure to detach the front panel before you start installing the unit.

To detach

Before detaching the front panel, be sure to press (OFF) first. Press (RELEASE) to open up the front panel. Then slide the front panel a little to the left, and pull it off towards you.

To attach

Align part Ⓐ of the front panel to part Ⓑ of the unit as illustrated, and push until it clicks.

Instalación

Precauciones

- No toque los cuatro orificios de la superficie superior de la unidad. Estos orificios son para ajustes del sintonizador que solamente deberán realizar técnicos de reparación.
- Debe haber una distancia de al menos 5 cm entre la unidad y la palanca de cambios del automóvil para posibilitar la apertura y cierre del panel frontal. Instale la unidad de forma que no interfiera con la caja de cambios ni con otras operaciones de conducción.
- Elija cuidadosamente el lugar de montaje de forma que la unidad no interfiera las funciones normales de conducción.
- Evite instalar la unidad donde pueda quedar sometida a altas temperaturas, como a la luz solar directa o al aire calienete de calefacción, o a polvo, suciedad o vibraciones excesivas.
- Para realizar una instalación segura y firme, emplee solamente la ferretería de montaje suministrada.

Ajuste del ángulo de montaje

Ajuste el ángulo de montaje a menos de 20°.

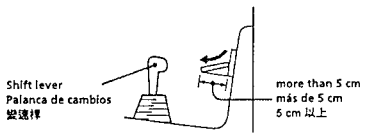

Forma de extraer e instalar el panel frontal

Antes de instalar la unidad, extraiga el panel frontal.

Para extraerlo

Antes de extraer el panel frontal, ceriórese de presionar (OFF). Pulse (RELEASE) para abrir el panel frontal. A continuación, deslícelo ligeramente hacia la izquierda y extráigalo tirándo hacia fuera.

Para instalarlo

Alinee la parte Ⓐ del panel con la parte Ⓑ de la unidad como muestra la ilustración y, a continuación, ejerza presión hasta ofr un chasquido.

安裝

使用前須知事項

- 請勿擅自觸動本機頂部的四個小孔。該孔只供專業人員調整調諧機時之用。
- 本機和變速桿之間的距離至少要大於 5 cm，以便於開／關前面板。妥善選擇安裝位置，使裝置不影響換檔及其他駕駛操作。
- 本機請放在不妨礙司機駕駛之處。
- 避免把本機放在高溫之處，如陽光直射照射、暖氣機前、或灰塵及多、顛簸強易受震動等地方。
- 為了安全起見，安裝時請使用附屬的安裝道具。

安裝角度之調整

請在 20 度以內調整安裝角度。

前板之裝卸

開始安裝以前，請先拆下前板。

要拆卸時

要拆卸前板之前，請先按壓 (OFF)。按壓 (RELEASE) 以打開前板，然後將前板稍向左滑動，並向前拉出。

要安裝時

將前板的 Ⓐ 部分如圖所示對準裝置的 Ⓑ 部分，然後一直推至聽"卡搭"聲。

Mounting example

Installation in the dashboard

Ejemplo de montaje

Instalación en el salpicadero

安裝例子

安裝於儀表板上

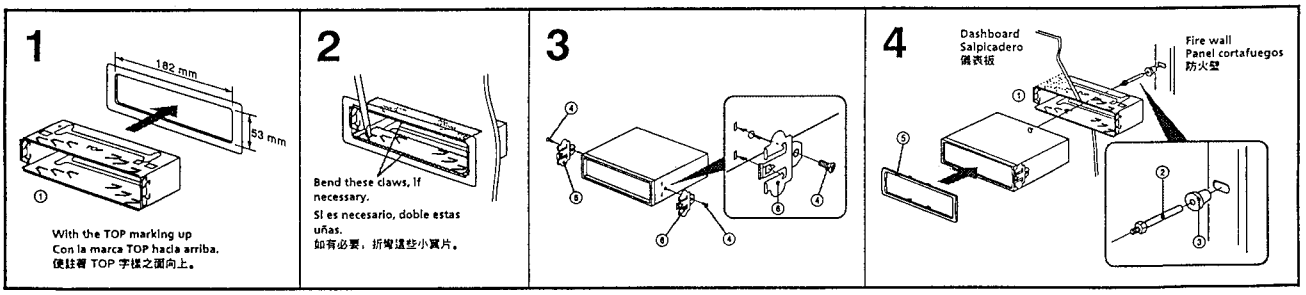

Mounting the unit in a japanese car

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

Montaje de la unidad en un automóvil japonés

Usted no podrá instalar esta unidad en algunos sutomóviles japoneses. En tal caso, consulte a su proveedor Sony.

要安裝於日本汽車裡

有的汽車不能安裝本機，此時，請向離貨地最近的 Sony 經銷店查詢。

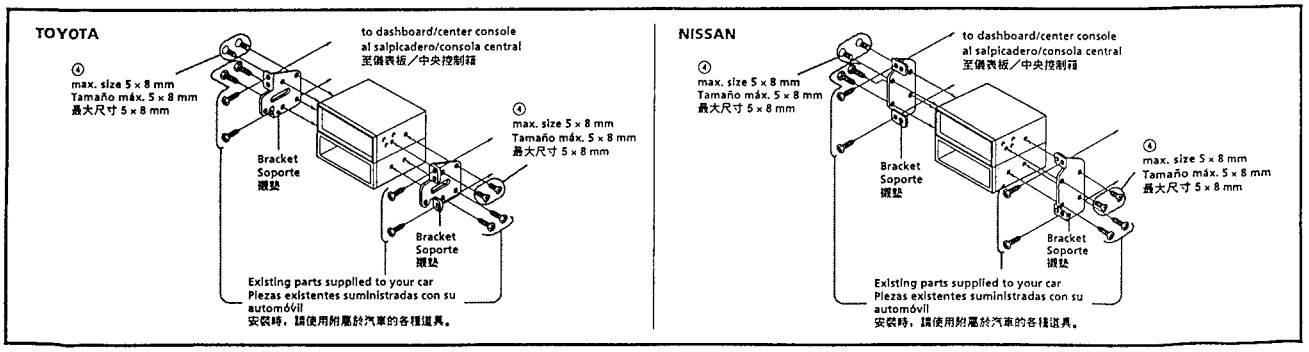

Note

To prevent malfunction, install only with the supplied screws ④ and use existing parts supplied to your car.

Nota

Para evitar que se produzcan fallos, realice la instalación solamente con los tornillos suministrados ④ y utilice los componentes suministrados para el automóvil.

註

為防止發生意外事故，安裝時只能使用附屬的螺絲 ④ 及汽車所附屬的部件。

Installing the rotary remote

Notes

- *Choose the mounting location carefully so that the rotary remote will not interfere with operating the car.*
- *Do not install the rotary remote in a place where it may jeopardize the safety of the (front) passenger in anyway.*
- *When installing the rotary remote, be sure not to damage the electrical cables etc. on the other side of the mounting surface.*
- *Avoid installing the rotary remote where it may be subject to high temperatures, such as from direct sunlight or hot air from the heater etc.*

Instalación del mando rotativo

Notas

- *Elija cuidadosamente el lugar de montaje de forma que el mando rotativo no dificulte la conducción del coche.*
- *No instale el mando rotativo en un lugar donde pueda poner en peligro la seguridad del pasajero acompañante.*
- *Al instalar el mando rotativo, asegúrese de no dañar los cables de electricidad, etc., del otro lado de la superficie de montaje.*
- *Procure no instalar el mando rotativo en un lugar expuesto a altas temperaturas, como a la luz solar directa o al aire caliente de la calefacción, etc.*

安裝旋轉型遙控器

註

- *旋轉型遙控器請與在不妨礙汽車駕駛之處。*
- *不可把旋轉型遙控器與在對乘客有危險的地方。*
- *按裝遙控器時，請注意不要損傷絲釘面及按裝面反面的電線等。*
- *避免把遙控器安裝在高溫，如直射陽光底下或受熱氣體熱流吹襲的地方。*

Example of a mounting location
Ejemplo de un lugar de montaje
安裝例子

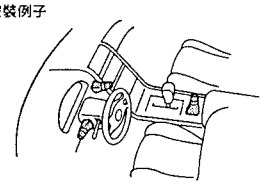

1 **Choose the exact location for the rotary remote to be mounted, then clean the mounting surface.**
Dirt or oil impair the adhesive strength of the double-sided adhesive tape.

Una vez elegido el lugar de montaje del mando rotativo, limpie previamente la superficie de montaje.
La suciedad o la grasa dañan la intensidad adhesiva de la tira adhesiva por las dos caras.

選擇一個適合安裝旋轉型遙控器的地方。
表面肌膚或有油污會減低兩面膠帶的黏貼力。

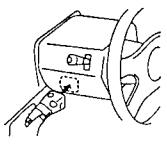

2 **Mark two positions for the supplied screws.**
Use the screw holes on the mounting hardware ⑨ to mark the positions.

Marque dos posiciones para los tornillos suministrados.
Para ello, utilice los orificios para tornillos de la ferretería de montaje ⑨.

畫 2 個供螺絲釘鑽孔之處。
按照安裝道具 ⑨ 的螺絲釘孔位置作記號。

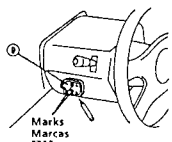

3 **Remove the steering wheel column cover, and drill 2 mm diameter holes where you have marked.**

Extraiga la cubierta de la columna de la dirección y haga orificios de 2 mm. de diámetro en los lugares marcados.

取下轉向柱外殼，並在所作記號之處 開 2mm 大小的釘孔。



4 **Warm the mounting surface and the double-sided adhesive tape on the mounting hardware ⑨ to the temperature of 20°C to 30°C, and attach the mounting hardware onto the mounting surface by applying even pressure. Then screw it down with the supplied screws ⑧.**
Attach a piece of heavy duty tape etc. on the other side of the mounting surface to cover the protruding tips of the screws so that they will not interfere with the electrical cables etc. inside the steering wheel column.

Caliente la superficie de montaje y la cinta adhesiva de doble cara de la ferretería de montaje ⑨ a una temperatura entre 20°C y 30°C, y ajuste la ferretería de montaje a la superficie de montaje ejerciendo una presión uniforme. A continuación, apriete los tornillos ⑧ suministrados.
Adhiera un trozo de cinta adhesiva resistente, etc. en el otro lado de la superficie de montaje para cubrir los extremos de los tornillos que sobresalgan, de forma que no interfieran con los cables de electricidad, etc., del interior de la columna de dirección.

把安裝面及安裝道具 ⑨ 的兩面膠帶加熱至 20°C 到 30°C 程度，然後把安裝道具貼在轉向柱外殼，貼時所施加壓力須均等。以附屬的螺絲釘 ⑧ 把安裝道具釘緊。
在安裝面的反面之螺絲釘尖端部分，貼張強力膠帶等，以免損害轉向柱裡面的電線等。

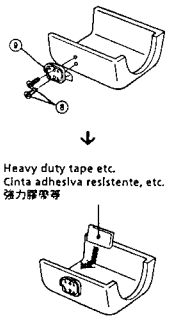

5 **After installing the steering wheel column cover, attach the rotary remote to the mounting hardware by aligning the four holes on the bottom of the rotary remote to the four catches on the mounting hardware and sliding the rotary remote until it locks into place as illustrated.**

Note
If you are mounting the rotary remote to the steering wheel column, make sure that the protruding tips of the screws on the inner surface of the column do not in anyway hinder or interfere with the movement of the rotating shaft, operative parts of the switches or the electrical cables etc. inside the column.

Una vez instalada la cubierta de la columna de dirección, fije el mando rotativo a la ferretería de montaje alineando los cuatro orificios de la parte inferior del mando con los cuatro enganches de la ferretería de montaje. A continuación, deslice el mando hasta que encaje en su sitio como se muestra en la ilustración.

Nota
Si monta el mando rotativo en la columna de dirección, asegúrese de que los extremos de los tornillos que sobresalgan de la superficie interior de la columna no dificulten el movimiento del eje de rotación ni los componentes operativos de los conmutadores o los cables de electricidad, etc., del interior de la columna.

在轉向柱外殼重新裝上以後，把遙控器裝在安裝道具裡。裝時請把遙控器底部的 4 個小孔對準安裝道具的 4 個小鈎，然後按照插圖所示，把遙控器插入道具裡。

註
在把遙控器裝在轉向柱外殼時，必須注意轉向柱裡的螺絲釘之尖端，不可倒到或傷害到轉向柱殼裡面的轉軸、開關的操作部分或電線等。

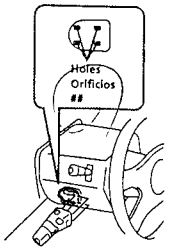

Reset button

When the installation and connections are over, be sure to press the reset button with a ballpoint pen etc.

Botón de reposición

Cuando haya finalizado la instalación y las conexiones, cerciórese de presionar el botón de reposición con un bolígrafo, etc.

重調鍵

安裝和線路之連接完畢以後，請以原子筆等按壓重調鍵。

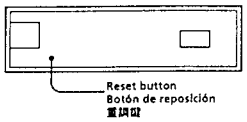

Inverter

- Install the inverter far away from the unit using double-sided adhesive tape or something similar.
- Do not bundle the inverter's cord with a pincord or other connecting cord.
- Be sure not to mount the inverter under a mat or in a place exposed to splashing water of air conditioner. It may cause electric shock or damage to the unit.

Note
If the inverter's cord is pinched, the display indications may not appear.

(US, Canadian model)

Note for Connecting

If there is alternator noise (a whining sound when raising engine speed), ground the master unit by connecting it to a metal point of the car with the supplied chassis ground cord ⑫. Connect the ground cord to the master unit with part ③ or ⑬ as shown in the illustration.
In the case of connections for a Japanese car, use only the supplied part ③ or ⑬.

Remarque sur le raccordement

Si l'alternateur génère des interférences (pleurage lorsque le régime moteur augmente), reliez l'appareil principal à la masse en le raccordant à un point métallique de la voiture au moyen du fil de masse pour châssis ⑫ fourni. Raccordez le fil de masse à l'appareil principal au moyen de la pièce ③ ou ⑬ comme indiqué dans l'illustration.
Dans le cas d'un raccordement sur une voiture japonaise, utilisez uniquement la pièce ③ ou ⑬ fournie.

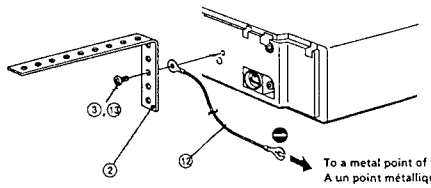

(AEP, UK, German, E model)

Note for Connecting

If there is alternator noise (a whining sound when raising engine speed), earth the master unit by connecting it to a metal point of the car with the supplied chassis earth cord ⑪. Connect the earth cord to the master unit with part ② as shown in the illustration.

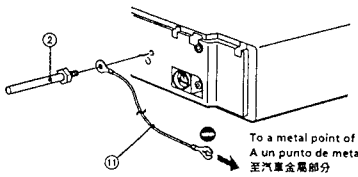

Connections

Caution

- This unit is designed for negative earth 12 V DC operation only.
- Before making connections, disconnect the earth terminal of the car battery to avoid short circuits.
- Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all earth wires to a common earth point.

If your car has no accessory position on the ignition key switch — POWER SELECT switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, **set the POWER SELECT switch located on the bottom of the unit to the ❶ position, then press the reset button.** The illumination is reset to stay off while the unit is not being played.

Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the ❶ position.

Frequency select switch (E model)

The AM (FM) tuning interval is factory-set to the 9K (50 K) position. If the frequency allocation system of your country is based on 10 kHz (200 kHz) interval, set the switch on the bottom of the unit to the 10 K (200 K) position before making connections.

When making a digital connection — DIGITAL/ANALOG Switch

To connect a unit with an optical cable, connect the optical cable (optional) to the optical adapter (optional), and plug the adapter into the special socket on the rear of the unit. Then set the DIGITAL/ANALOG switch located at the bottom of the unit to DIGITAL.

Note

- *The DIGITAL/ANALOG switch is factory-set to ANALOG.*
- *After changing the switch position, make sure to press the Reset button.*
- *If the switch is not correctly set, the unit will work without producing a sound.*

When you change the position of the switch, be sure to press the reset button after the connections are completed.

Connection diagram

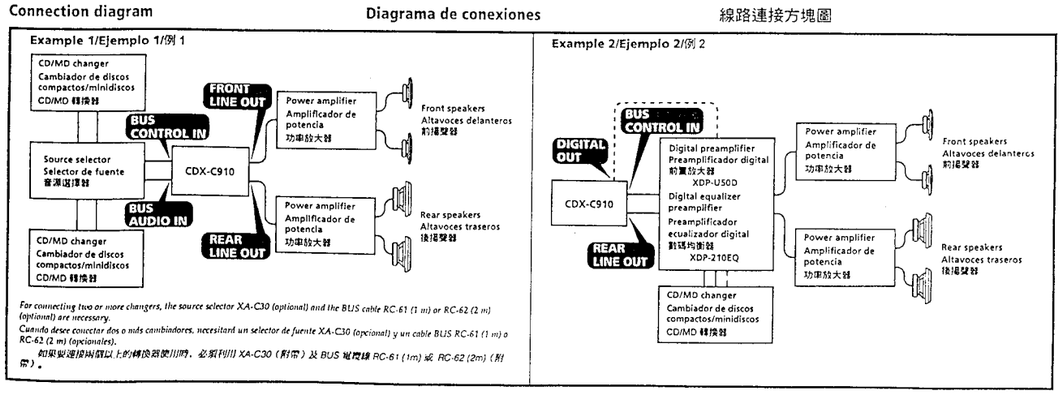

For connecting two or more changers, the source selector XA-C30 (optional) and the BUS cable RC-61 (1 m) or RC-62 (2 m) (optional) are necessary.

Cuando desee conectar dos o más cambiadores, necesitará un selector de fuente XA-C30 (opcional) y un cable BUS RC-61 (1 m) o RC-62 (2 m) (opcionales).

如果要連接兩個以上的轉換器便用時，必須利用 XA-C30（附帶）及 BUS 電纜線 RC-61 (1m) 或 RC-62 (2m)（附帶）。

Conexiones

Precauciones

- Esta unidad ha sido diseñada para alimentarse con 12 V CC, negativo a masa, solamente.
- Antes de realizar las conexiones, desconecte el terminal de puesta a masa de la batería del automóvil a fin de evitar cortocircuitos.
- Conecte los cables conectores de alimentación amarillo y rojo solamente después de haber conectado los demás.
- Cerciórese de conectar el cable conector de alimentación rojo a un terminal de 12 V positivo que se energice al poner la llave de encendido en la posición para accesorios.
- Conecte todos los conductores de puesta a masa a un punto común.

Si el automóvil no dispone de posición para accesorios en la llave de encendido — Selector POWER SELECT

La iluminación del panel frontal ha sido ajustada en fábrica para que esté activada aunque la unidad no se encuentre en reproducción. Sin embargo, este ajuste puede provocar cierta descarga de la batería del automóvil si éste no dispone de posición para accesorios en la llave de encendido. Para evitar esto, **ponga el selector POWER SELECT, situado en la base de la unidad, en la posición ❶ y, después, presione el botón de reposición.** La iluminación estará desactivada cuando la unidad no se encuentre en reproducción.

Nota

La alarma de precaución del panel frontal no se activará cuando el selector POWER SELECT se encuentre en la posición ❶.

Selector de frecuencia

El intervalo de sintonía de AM (FM) ha sido ajustado en fábrica a la posición 9 K (50 K). Si el sistema de asignación de frecuencias de su país se basa en el intervalo de 10 kHz (200 kHz), ponga este selector, situado en la base de la unidad, en la posición 10 K (200 K) antes de realizar las conexiones.


Change the position with a jeweler's screwdriver, etc.
Cambie la posición con un destornillador de relojero, etc.
以珠寶行用的先端尖細的螺絲起子等改變開關位置。

Para realizar una conexión digital — Selector DIGITAL/ANALOG

Para conectar una unidad con un cable óptico, conecte un cable óptico (opcional) a un adaptador óptico (opcional), y enchufe el adaptador en el receptáculo especial del panel posterior de la unidad. Después ponga el selector DIGITAL/ANALOG en la base de la unidad en DIGITAL.

Notas

- *El selector DIGITAL/ANALOG ha sido ajustado en fábrica a ANALOG.*
- *Después de haber cambiado la posición del selector, cerciórese de presionar el botón de reposición.*
- *Si el selector no está correctamente ajustado, la unidad funcionará sin producir sonido.*

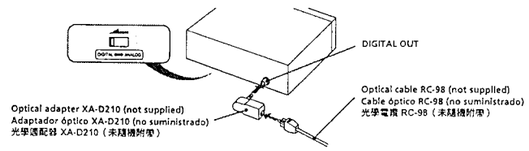

Cuando haya cambiado la posición del selector, cerciórese de presionar uno de el botoón de reposición después de haber finalizado las conexiones.

Diagrama de conexiones

線路之連接

注意

- 本機只能使用負極接地 12 V 直流電源。
- 連接以前，先拔取汽車電池的接地端子，以免發生短路。
- 紅色和黃色電源輸入導線必須等所有電線都連接完畢以後才連接。
- 紅色電源輸入導線請連接到汽車發動機點火鑰匙拔轉在輔助位置時才通電狀態的正 12 V 電源端子。
- 所有地線都必須連接到同一地點才行。

若要在汽車發動機點火鑰匙開關沒具輔助位置的汽車裡使用時 — POWER SELECT 開關

前板的照明燈在未出廠以前，被設定在即使不使用也會發亮的狀態。若要在汽車發動機點火鑰匙開關沒具輔助位置的汽車裡使用本機的話，此照明燈將會一直消耗蓄電的汽車電池電力。因此為了避免在這種狀態下的電池消耗，請把本機底下的 POWER SELECT 開關設定在 ❶ 之處，然後按壓前板的重調鍵。則不使用本機時，照明燈便不發亮。

註

POWER SELECT 開關設定在 ❶ 的話，前板的操作鈕設置告功能便失效。

頻率選擇開關

本裝置的 AM (FM) 調諧區間在出廠以前被設定在 9 K (50 K) 位置上。若貴地的頻率區間為 10 kHz (200 kHz)，連接以前請先把本機機底的選擇開關設定在 10 K (200 K) 之處。

數碼連接 — DIGTAL／ANALOG（數碼／模擬）開關

要用光學電機連接裝置、請將光學電纜（選購件）連接至光學適配器（選購件），並將該適配器插入裝置背面的特殊插座中。然後將位於裝置底部的 DIGITAL／ANALOG 開關設於 DIGITAL。

註

- *本裝置出廠時，DIGITAL／ANALOG 開關設於 ANALOG。*
- *改變開關後，務請按一下重調鍵。*
- *若開關設定不正確，本裝置將不能發出聲音。*

改變開關位置時，在連接好機器後請一定按一下重調鍵。

線路連接方塊圖

Connection example — Ejemplo de conexión — 線路之連接圖例

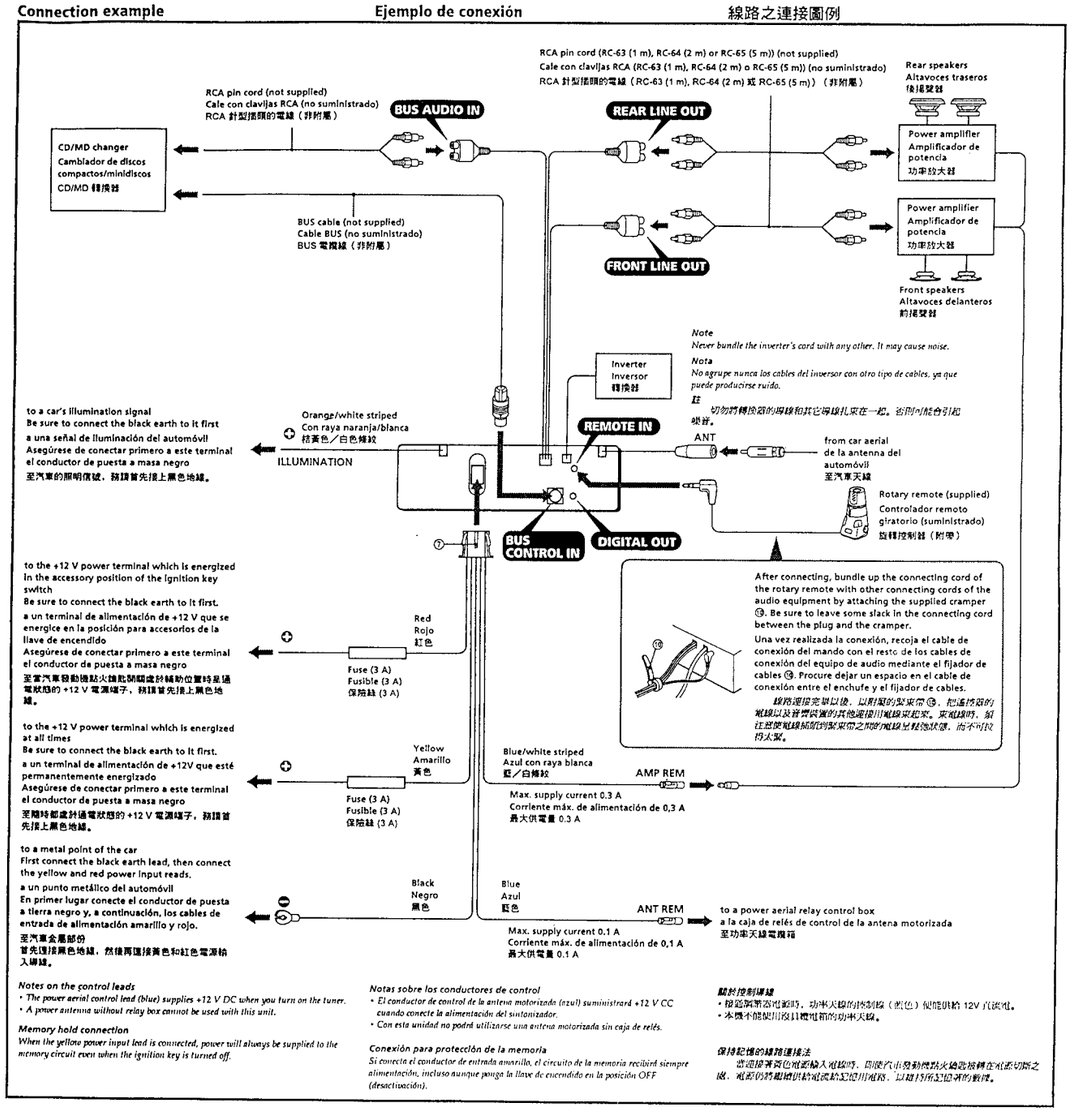
RCA pin cord (RC-63 (1 m), RC-64 (2 m) or RC-65 (5 m)) (not supplied)
Cale con clavijas RCA (RC-63 (1 m), RC-64 (2 m) o RC-65 (5 m)) (no suministrado)
RCA 針型插頭的電線（RC-63 (1 m), RC-64 (2 m) 或 RC-65 (5 m)）（非附屬）
RCA pin cord (not supplied)
Cale con clavijas RCA (no suministrado)
RCA 針型插頭的電線（非附屬）
BUS AUDIO IN
REAR LINE OUT
Rear speakers
Altavoces traseros
後揚聲器
CD/MD changer
Cambiador de discos compactos/minidiscos
CD/MD 轉換器
Power amplifier
Amplificador de potencia
功率放大器
BUS cable (not supplied)
Cable BUS (no suministrado)
BUS 電纜線（非附屬）
FRONT LINE OUT
Power amplifier
Amplificador de potencia
功率放大器
Front speakers
Altavoces delanteros
前揚聲器
Note
Never bundle the inverter's cord with any other. It may cause noise.
Nota
No agrupe nunca los cables del inversor con otro tipo de cables, ya que puede producirse ruido.
註
切勿將轉換器的導線和其它導線扎束在一起。省則可能會引起噪音。
Inverter
Inversor
轉換器
to a car's illumination signal
Be sure to connect the black earth to it first
a una señal de iluminación del automóvil
Asegúrese de conectar primero a este terminal el conductor de puesta a masa negro
至汽車的照明信號，務請首先接上黑色地線。
Orange/white striped
Con raya naranja/blanca
橙黃色／白色條紋
ILLUMINATION
REMOTE IN
ANT
from car aerial
de la antenna del automóvil
至汽車天線
Rotary remote (supplied)
Controlador remoto giratorio (suministrado)
旋轉控制器（附帶）
BUS CONTROL IN
DIGITAL OUT
to the +12 V power terminal which is energized in the accessory position of the ignition key switch
Be sure to connect the black earth to it first.
a un terminal de alimentación de +12 V que se energice en la posición para accesorios de la llave de encendido
Asegúrese de conectar primero a este terminal el conductor de puesta a masa negro
至當汽車發動機點火鑰匙開關處於輔助位置時呈通電狀態的 +12 V 電源端子，務請首先接上黑色地線。
Red
Rojo
紅色
Fuse (3 A)
Fusible (3 A)
保險絲 (3 A)
After connecting, bundle up the connecting cord of the rotary remote with other connecting cords of the audio equipment by attaching the supplied cramper ❸. Be sure to leave some slack in the connecting cord between the plug and the cramper.
Una vez realizada la conexión, recoja el cable de conexión del mando con el resto de los cables de conexión del equipo de audio mediante el fijador de cables ❸. Procure dejar un espacio en el cable de conexión entre el enchufe y el fijador de cables.
線路連接完畢以後，以附屬的緊束帶 ❸，把遙控器的導線以及音響裝置的其他連接用導線束起來。束起時，請注意使導線鬆弛到緊束帶之間的導線呈輕鬆狀態，而不可拉得太緊。
to the +12 V power terminal which is energized at all times
Be sure to connect the black earth to it first.
a un terminal de alimentación de +12V que esté permanentemente energizado
Asegúrese de conectar primero a este terminal el conductor de puesta a masa negro
至隨時都處於通電狀態的 +12 V 電源端子，務請首先接上黑色地線。
Yellow
Amarillo
黃色
Fuse (3 A)
Fusible (3 A)
保險絲 (3 A)
Blue/white striped
Azul con raya blanca
藍／白條紋
AMP REM
Max. supply current 0.3 A
Corriente máx. de alimentación de 0,3 A
最大供電量 0.3 A
to a metal point of the car
First connect the black earth lead, then connect the yellow and red power input reads.
a un punto metálico del automóvil
En primer lugar conecte el conductor de puesta a tierra negro y, a continuación, los cables de entrada de alimentación amarillo y rojo.
至汽車金屬部份
首先連接黑色地線，然後再連接黃色和紅色電源輸入導線。
Black
Negro
黑色
Blue
Azul
藍色
ANT REM
to a power aerial relay control box
a la caja de relés de control de la antena motorizada
至功率天線電機箱
Max. supply current 0.1 A
Corriente máx. de alimentación de 0,1 A
最大供電量 0.1 A

Notes on the control leads

- *The power aerial control lead (blue) supplies +12 V DC when you turn on the tuner.*
- *A power antenna without relay box cannot be used with this unit.*

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

Notas sobre los conductores de control

- *El conductor de control de la antena motorizada (azul) suministrará +12 V CC cuando conecte la alimentación del sintonizador.*
- *Con esta unidad no podrá utilizarse una antena motorizada sin caja de relés.*

Conexión para protección de la memoria

Si conecta el conductor de entrada amarillo, el circuito de la memoria recibirá siempre alimentación, incluso aunque ponga la llave de encendido en la posición OFF (desactivación).

關於控制導線

- *發電所需當它被接入收音機時，功率天線的控制線（藍色）便能供給 12V 直流電。*
- *本機不能使用沒具繼電箱的功率天線。*

保持記憶的線路連接法

當連接黃色電源輸入導線時，即使汽車發動機點火鑰匙被轉在切斷之後，電源仍將繼續供給記憶線路到電源輸入導線呈輕鬆狀態，而不可拉得太緊。

SECTION 2
DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

CHASSIS COVER

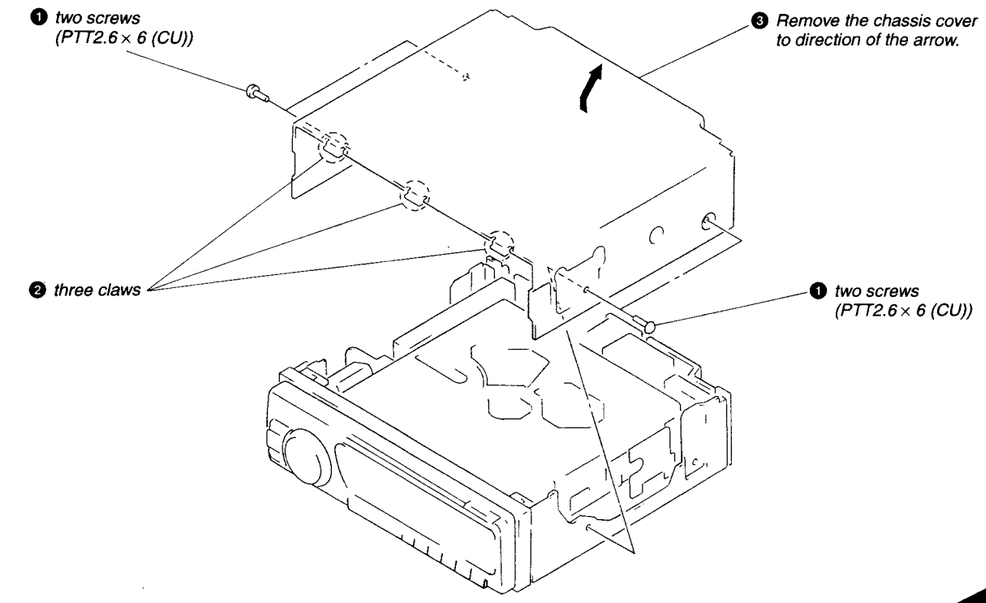

MECHANISM DECK SECTION

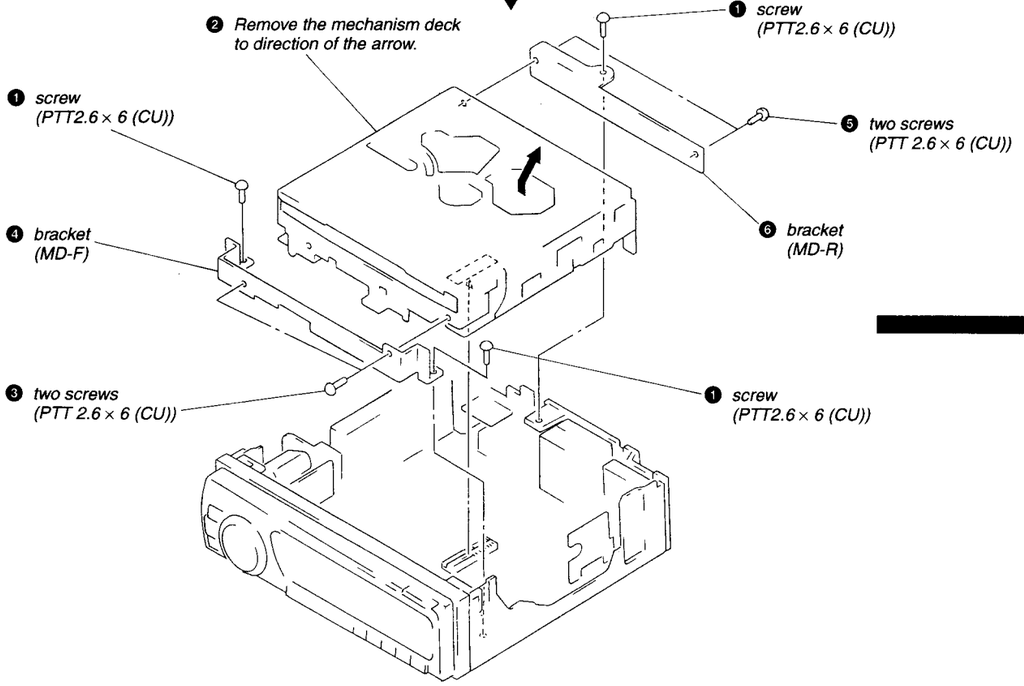
❷ Remove the mechanism deck to direction of the arrow.
❶ screw (PTT2.6 × 6 (CU))
❺ two screws (PTT 2.6 × 6 (CU))
❶ screw (PTT2.6 × 6 (CU))
❹ bracket (MD-F)
❻ bracket (MD-R)
❸ two screws (PTT 2.6 × 6 (CU))
❶ screw (PTT2.6 × 6 (CU))

FRONT PANEL SECTION

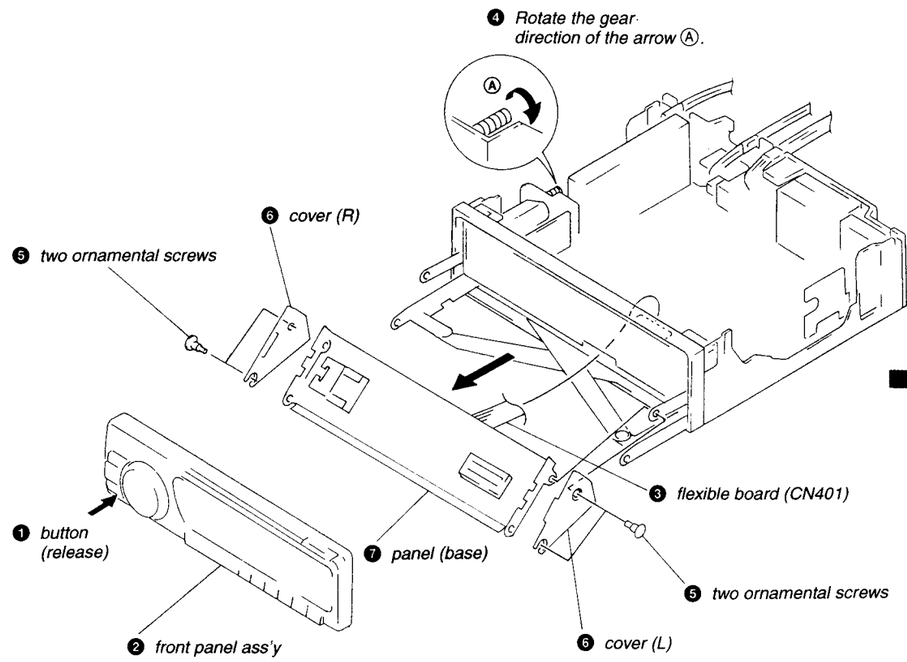

DISC IN SW BOARD, CHASSIS (T) SUB ASS'Y

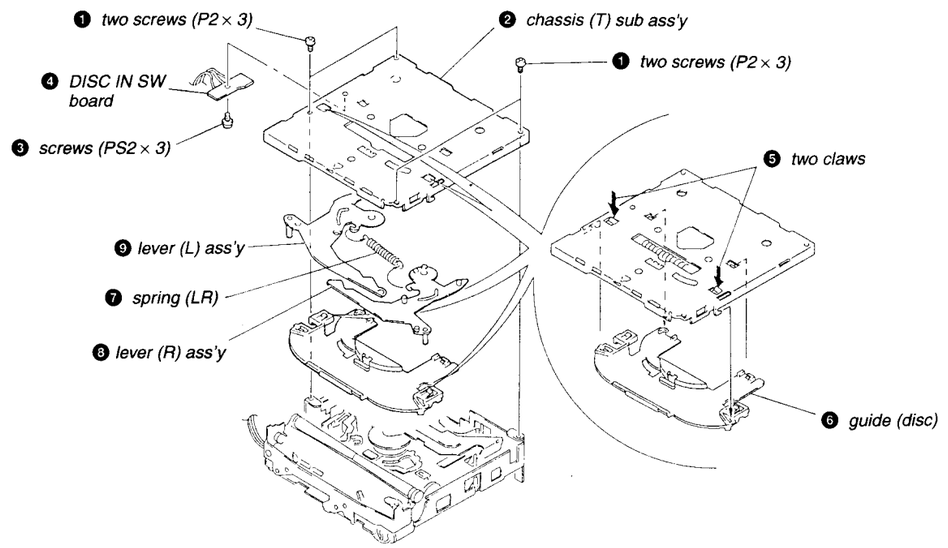
❶ two screws (P2 × 3)
❷ chassis (T) sub ass'y
❶ two screws (P2 × 3)
❹ DISC IN SW board
❸ screws (PS2 × 3)
❺ two claws
❾ lever (L) ass'y
❼ spring (LR)
❽ lever (R) ass'y
❻ guide (disc)

PANEL SUB ASS'Y

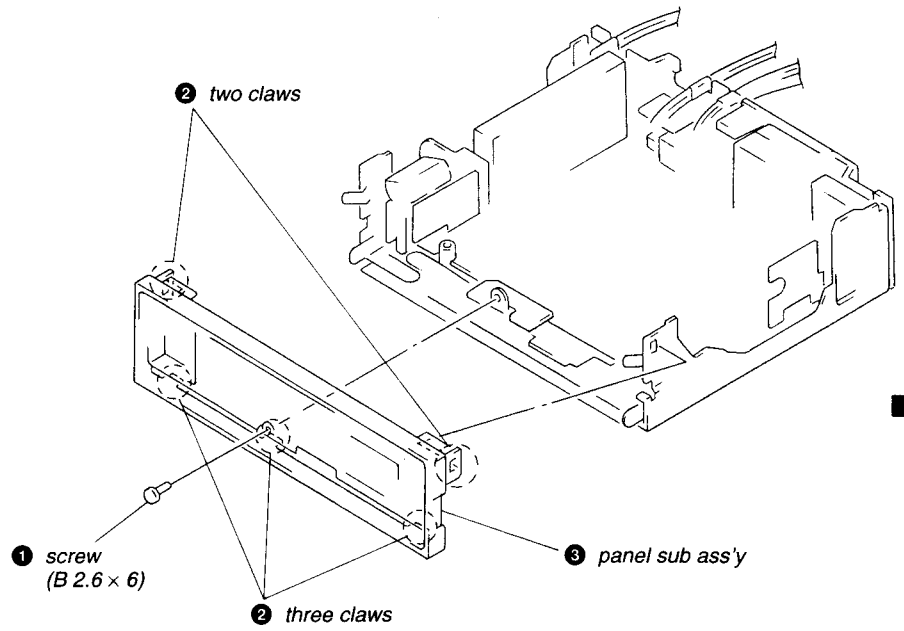

SERVO BOARD, LOADING MOTOR (M903)

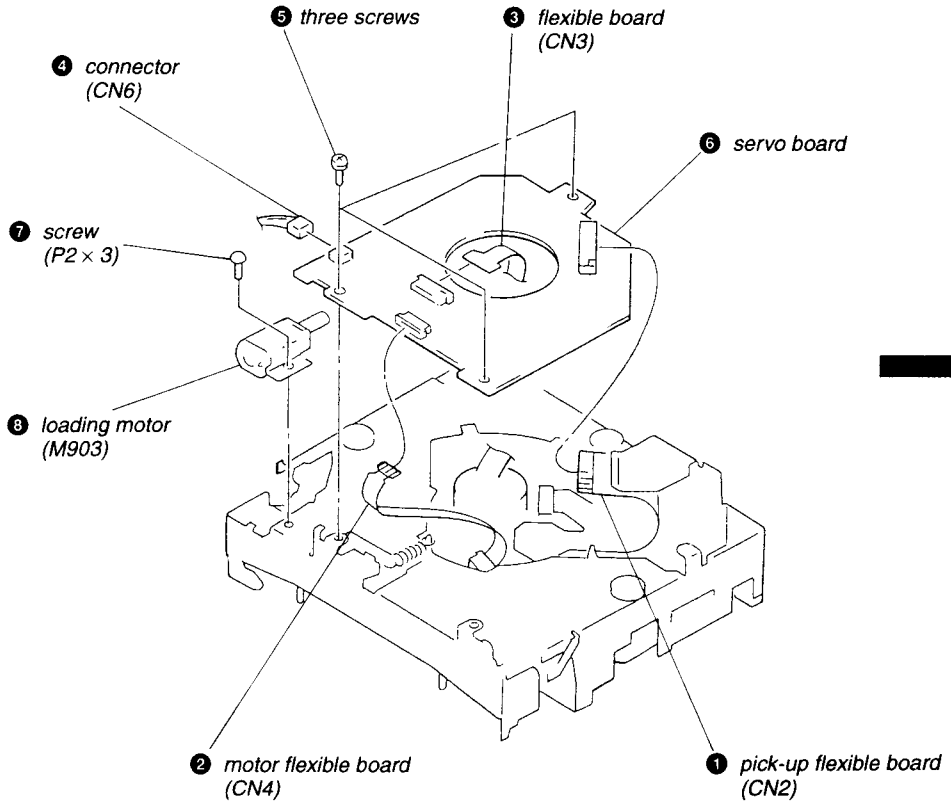

MOTOR ASS'Y (OPEN/CLOSE) (M905)

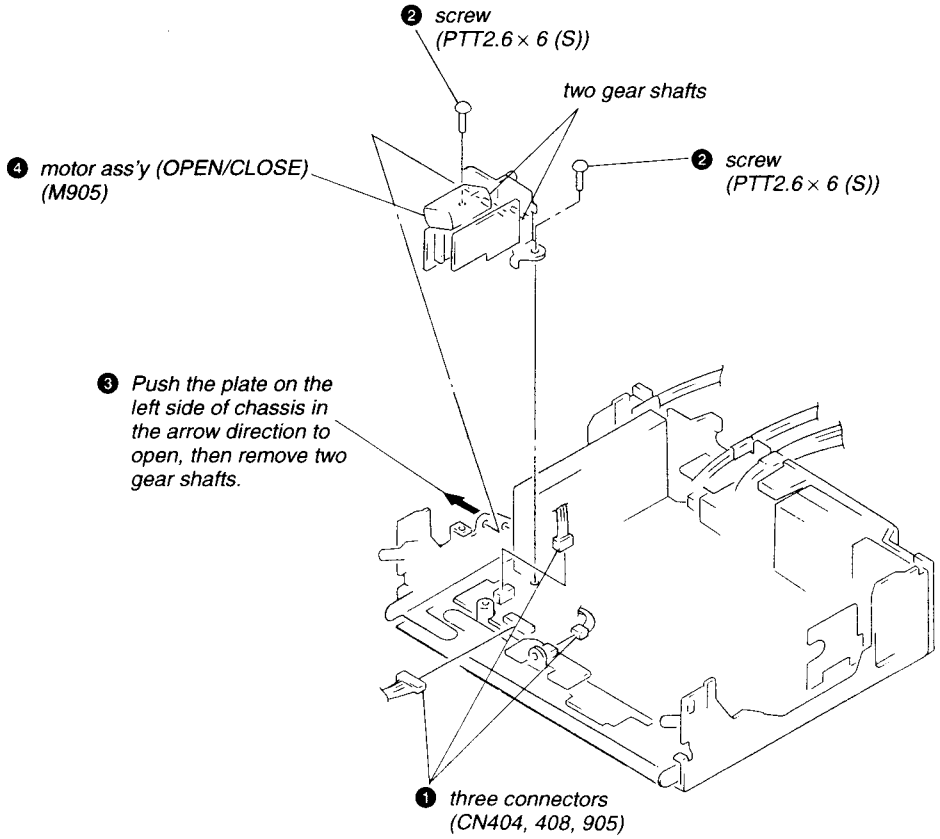
❷ screw
(PTT2.6 × 6 (S))
two gear shafts
❹ motor ass'y (OPEN/CLOSE)
(M905)
❷ screw
(PTT2.6 × 6 (S))
❸ Push the plate on the left side of chassis in the arrow direction to open, then remove two gear shafts.
❶ three connectors
(CN404, 408, 905)

ROLLER ASS'Y, ARM (ROLLER)

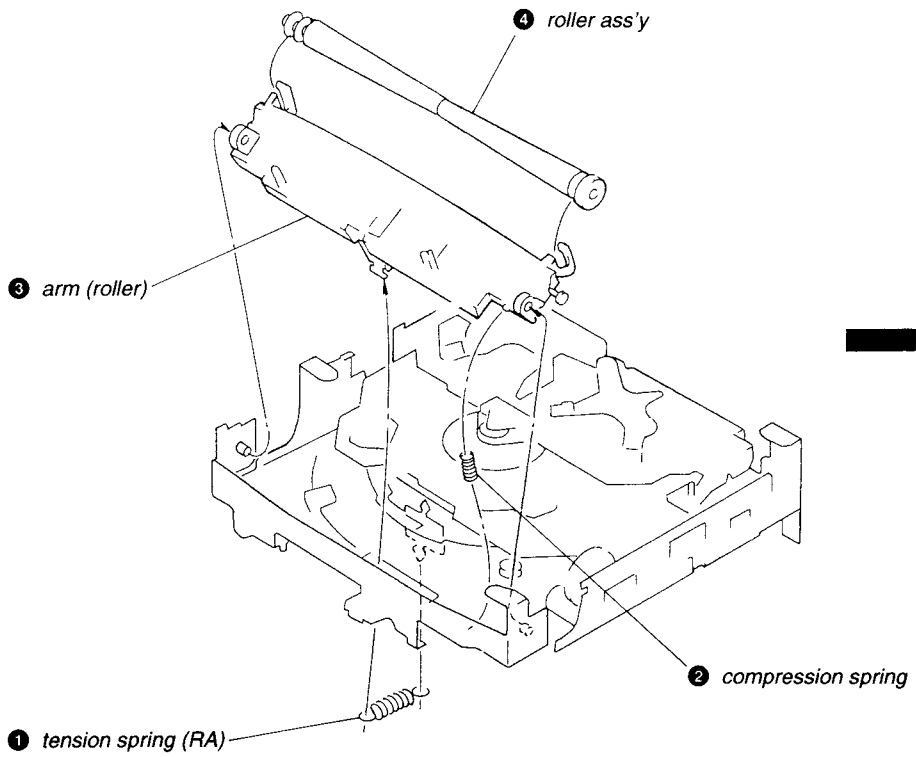

HEAT SINK

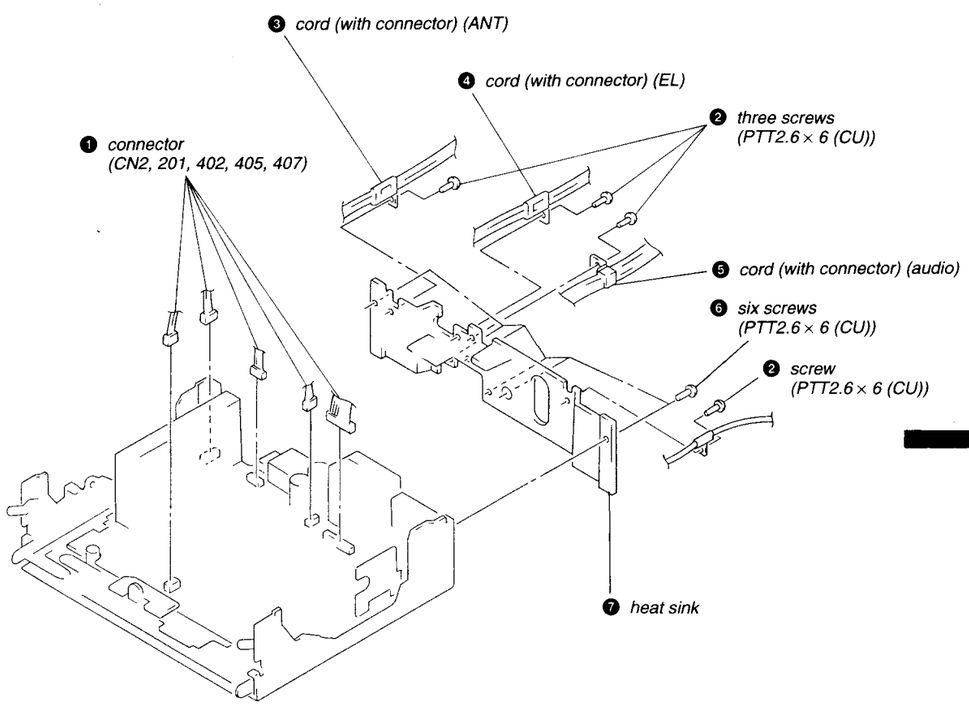
❸ cord (with connector) (ANT)
❹ cord (with connector) (EL)
❷ three screws (PTT2.6 × 6 (CU))
❶ connector (CN2, 201, 402, 405, 407)
❺ cord (with connector) (audio)
❻ six screws (PTT2.6 × 6 (CU))
❷ screw (PTT2.6 × 6 (CU))
❼ heat sink

MAIN BOARD

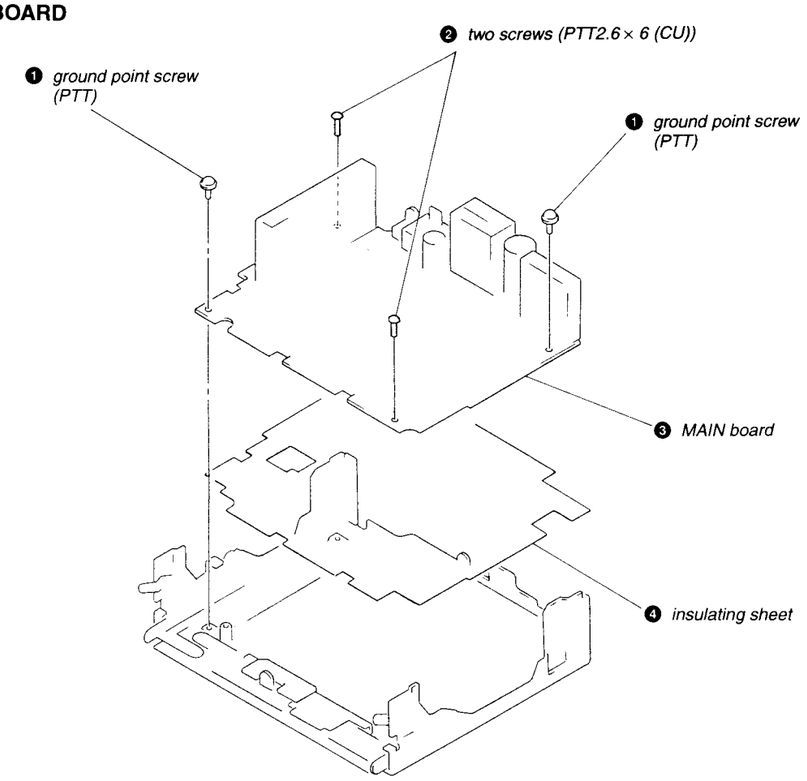

CHASSIS (OP) O/S ASS'Y

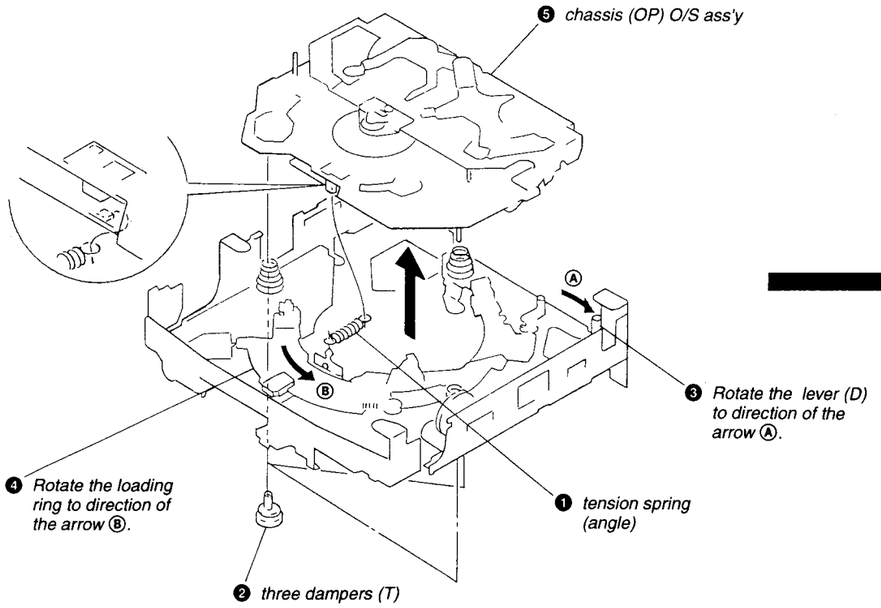
❺ chassis (OP) O/S ass'y
Ⓐ
Ⓑ
❸ Rotate the lever (D) to direction of the arrow Ⓐ.
❹ Rotate the loading ring to direction of the arrow Ⓑ.
❶ tension spring (angle)
❷ three dampers (T)

OPTICAL PICK-UP SECTION

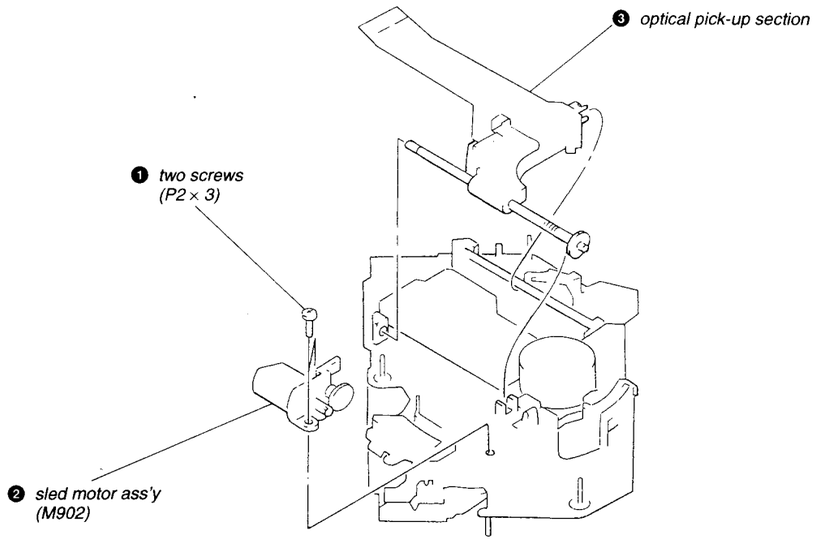

SECTION 3
TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and AM (MW) Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

Set the Test Mode

1. Set the "OFF" mode.
2. Push the preset [4] button.
3. Push the preset [5] button.
4. Press the preset [1] button for two seconds.
5. Then the display indicates all lights, the test mode is set.

Release the Test Mode

1. Push the "OFF" button.

SECTION 4
ELECTRICAL ADJUSTMENTS

CD SECTION

CD section adjustments are done automatically in this set.

TUNER SECTION **0dB=1μV**

Cautions during repair

When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment

Setting:

SOURCE button: FM
FREQUENCY SELECT switch (E model): 10k

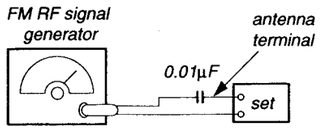

Carrier frequency : 97.9MHz (US, Canadian, E model)
98.0MHz (AEP, UK, German model)
Output level : 22dB(12.6μV)
Mode : mono
Modulation : 1kHz, 75kHz deviation

Procedure:

1. Set to the test mode.
2. Push the [SOURCE] button and set to FM.

Display

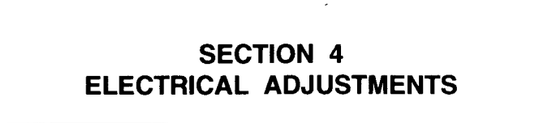

3. Push the preset [3] button.

Display

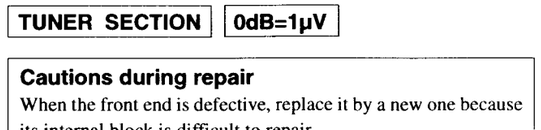

4. Adjust with the volume RV2 on TU1 so that the "FM" indication turns to "FM0" indication on the display window.
   But, in case of already indicated "FM0", turn the RV2 so that put out light "0" indication and adjustment.

Display

*1: AEP, UK and German models are indicates "98.0".

FM Stereo Separation Adjustment

Setting:

SOURCE button: FM
FREQUENCY SELECT switch (E model): 10 K

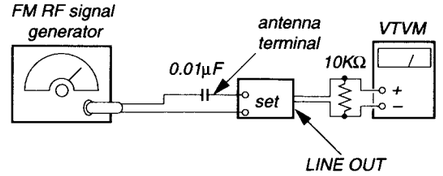

Carrier frequency : 97.9MHz (US, Canadian, E model)
98.0MHz (AEP, UK, German model)
Output level : 60dB(1mV)
Mode : stereo
Modulation : main: 1kHz, 75kHz deviation (100%)
19kHz pilot: 7.5kHz deviation (10%)

Procedure:

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV4 on TU1 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV4 on TU1 for minimum reading.

L-CH Stereo separation: Ⓐ–Ⓑ
R-CH Stereo separation: Ⓒ–Ⓓ
The separation of both channels should be equal.

Specification: Separation more than 28dB

FM Noise Focus Adjustment

Setting:

SOURCE button: FM
FREQUENCY SELECT switch (E model): 10k

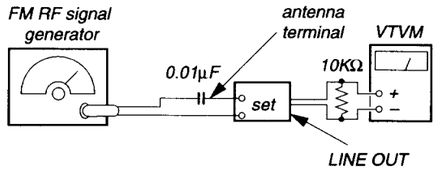

Carrier frequency : 97.9MHz (US, Canadian, E model)
98.0MHz (AEP, UK, German model)
Output level : 60dB(1mV)
Mode : mono
Modulation : 1kHz, 75kHz deviation

Procedure:

1. Tune the 97.9 MHz (US, Canadian, E model) or 98.0MHz (AEP, UK, German model).
2. The then output level is supposing that (B) dB.
3. Adjust with the volume RV3 on TU1 so that the output level is (B) –30dB then signal generator input set to –20dB.

AM (MW) Auto Scan/Stop Level Adjustment

Setting:

SOURCE button (US, Canadian, E model): AM
SOURCE button (AEP, UK, German model): MW
FREQUENCY SELECT switch (E model): 10k

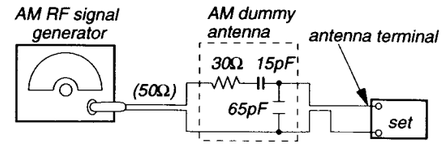

Carrier frequency : 1000kHz (US, Canadian, E model)
999kHz (AEP, UK, German model)
30% amplitude modulation by 400Hz signal
Output level : 35dB (56.2μV) (US, Canadian, E model)
33dB (44.7μV) (AEP, UK, German model)

Procedure:

1. Set to the test mode.
2. Push the [SOURCE] button and set to AM (US, Canadian, E model) or MW (AEP, UK, German model).

Display

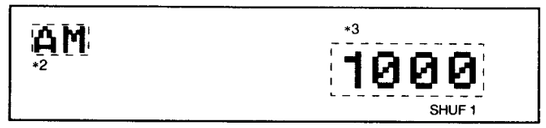

3. Push the preset [3] button.

Display

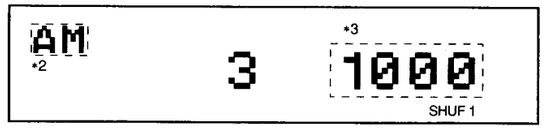

4. Adjust with the volume RV1 on TU1 so that the "AM" or "MW" indication turns to "AM0" or "MW0" indication on the display window.
   But, in case of already indicated "AM0" or "MW0", turn the RV1 so that put out light "0" indication and adjustment.

Display

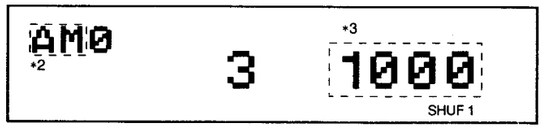

*2: AEP, UK and German models are indicates "MW".
*3: AEP, UK and German models are indicates "999".

FM Signal Meter Adjustment (AEP, UK, German model)

Setting:

SOURCE button: FM

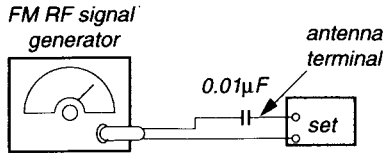

Carrier frequency : 98.0MHz
Output level : 35dB (56.2μV)
Mode : mono
Modulation : 1kHz, 75kHz deviation

Procedure:

1. Set to the test mode. (See page 14.)
2. Push the SOURCE button and set to FM.

Display

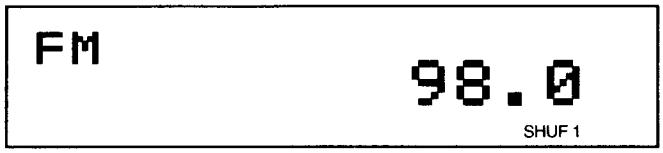

3. Push the preset 3 button.

Display

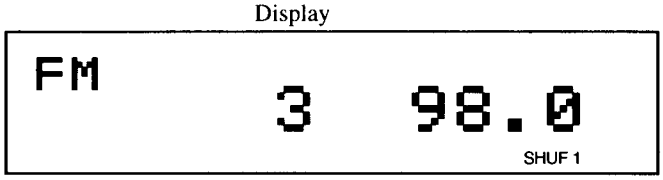

4. Push the 10 button.
5. Adjust RV201 so that the display indication is "11.8".

Display

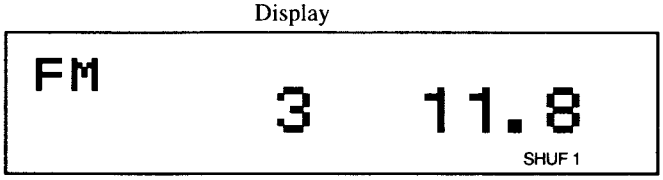

Specification: display indication: 11.6 to 12.0

Adjustment Location:

[MAIN BOARD] (COMPONENT SIDE)

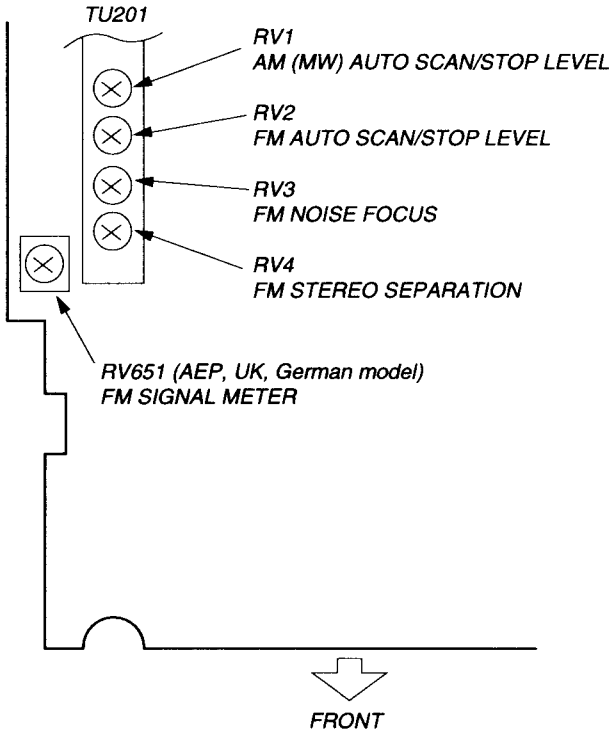

SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

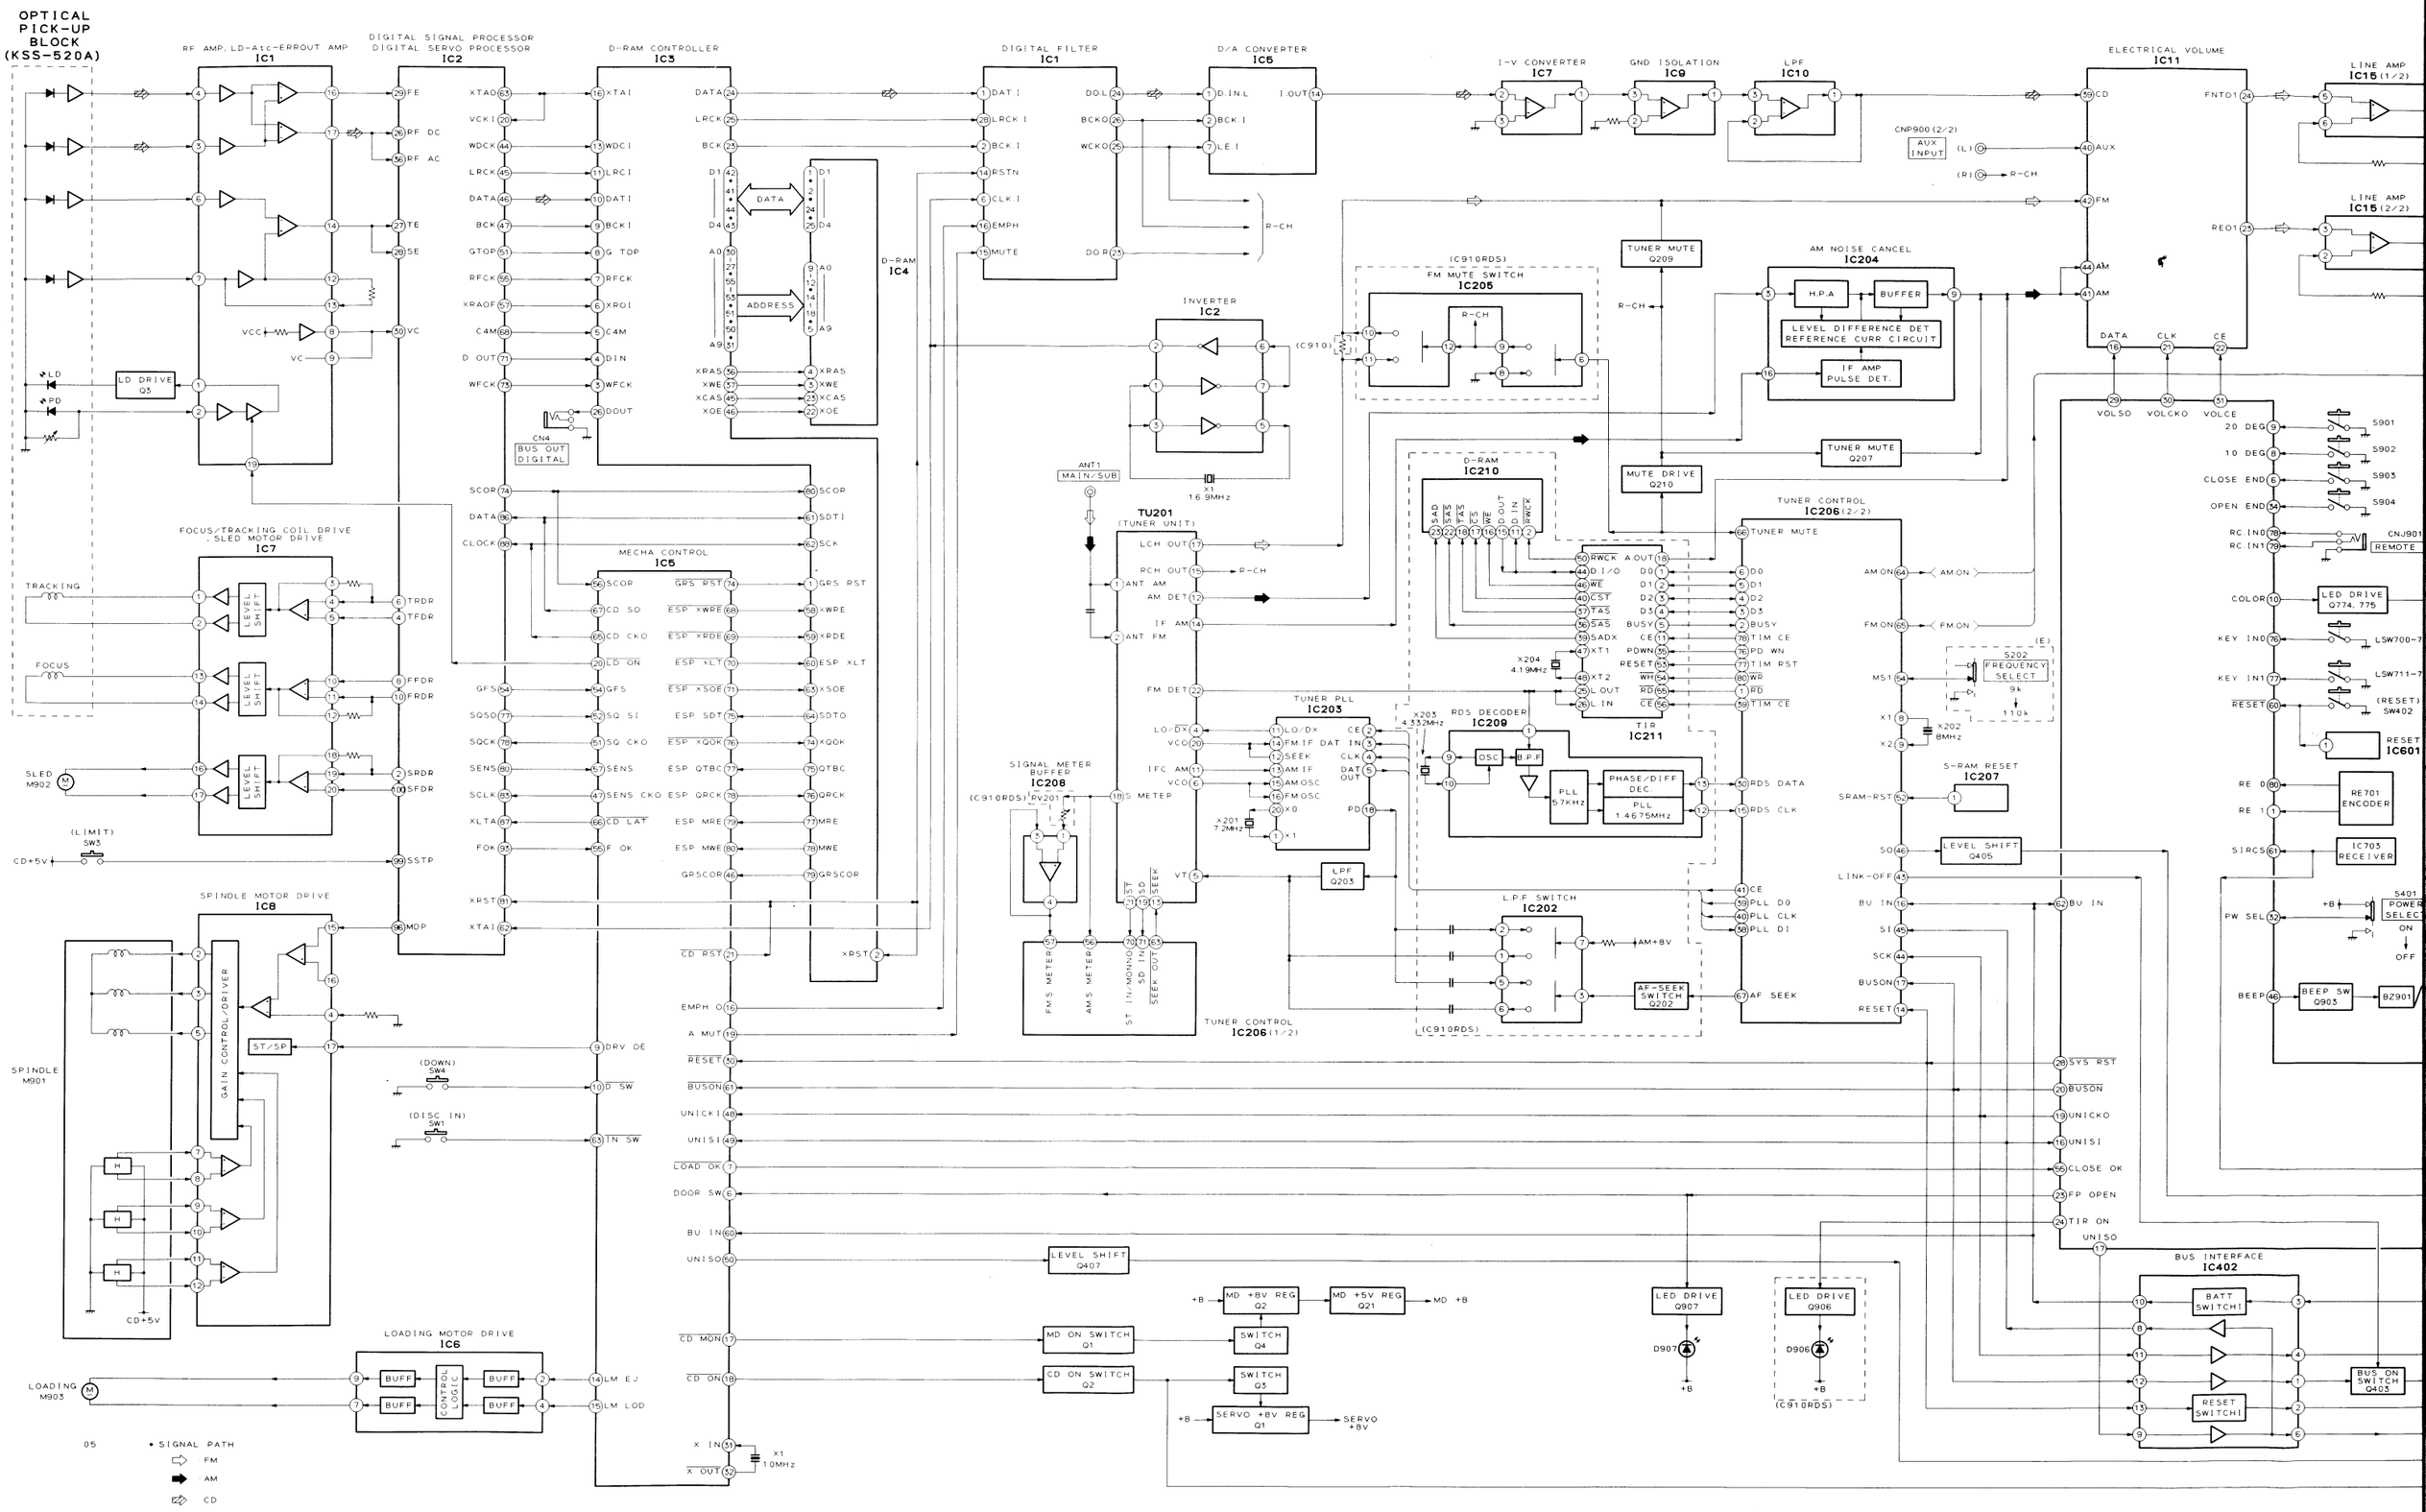

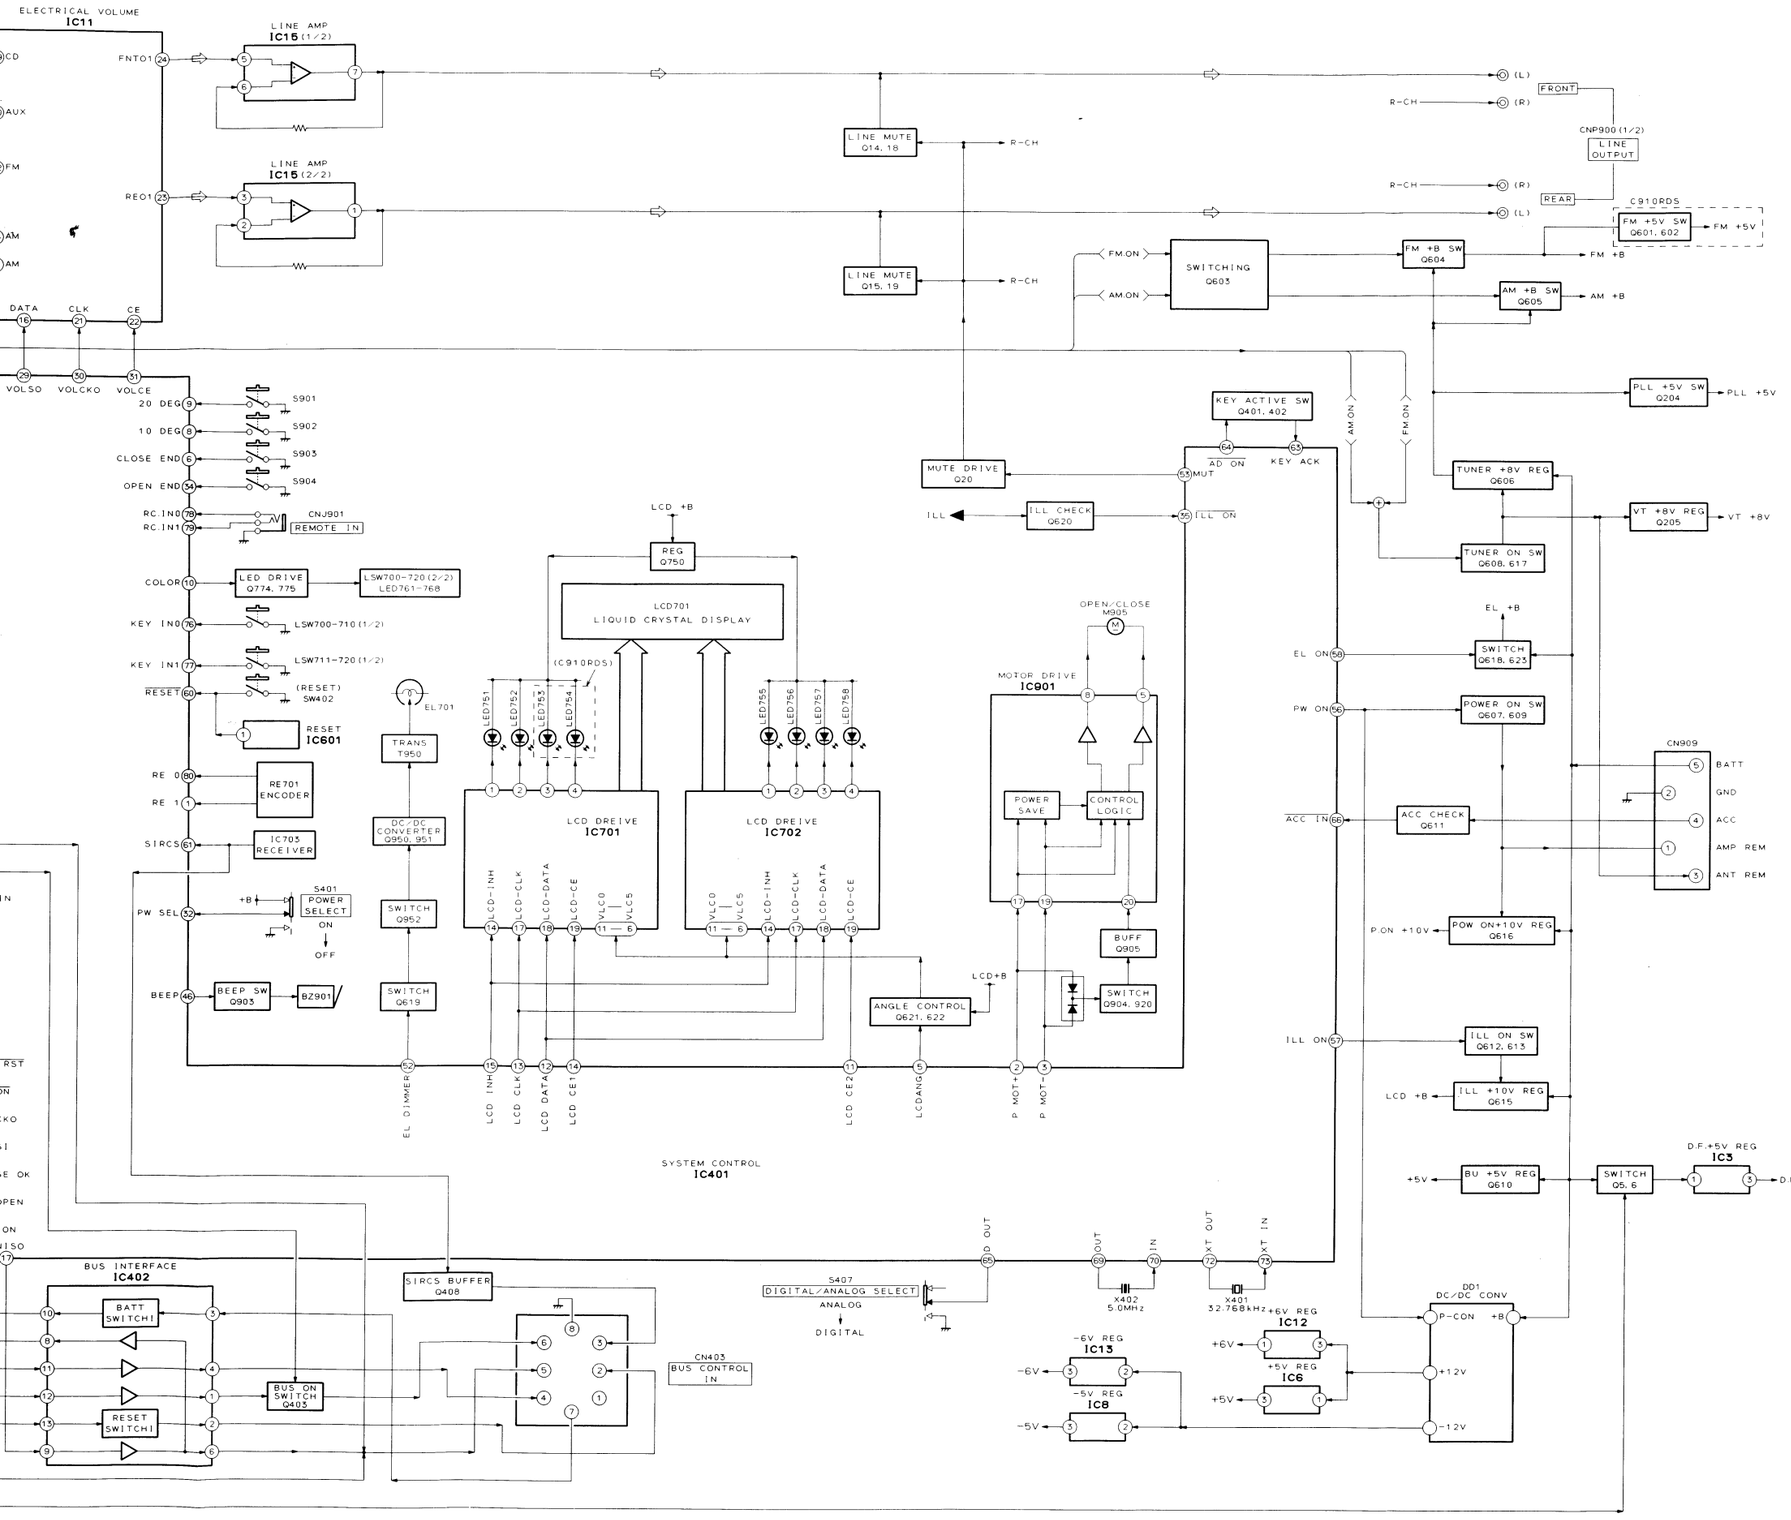
ELECTRICAL VOLUME
IC11
LINE AMP
IC15 (1/2)
LINE AMP
IC15 (2/2)
FNTO1
REO1
LINE MUTE
Q14, 18
LINE MUTE
Q15, 19
R-CH
(L)
(R)
FRONT
REAR
CNP900 (1/2)
LINE OUTPUT
C910RDS
FM +5V SW
Q601, 602
FM +5V
FM +B SW
Q604
FM +B
AM +B SW
Q605
AM +B
FM.ON
AM.ON
SWITCHING
Q603
PLL +5V SW
Q204
PLL +5V
KEY ACTIVE SW
Q401, 402
AD ON
KEY ACK
MUT
ILL
ILL CHECK
Q620
ILL ON
MUTE DRIVE
Q20
TUNER +8V REG
Q606
VT +8V REG
Q205
VT +8V
TUNER ON SW
Q608, 617
DATA
CLK
CE
VOLSO
VOLCKO
VOLCE
20 DEG
10 DEG
CLOSE END
OPEN END
S901
S902
S903
S904
RC.IN0
RC.IN1
CNJ901
REMOTE IN
COLOR
LED DRIVE
Q774, 775
LSW700-720 (2/2)
LED761-768
KEY IN0
KEY IN1
LSW700-710 (1/2)
LSW711-720 (1/2)
RESET
(RESET)
SW402
RESET
IC601
RE 0
RE 1
RE701
ENCODER
SIRCS
IC703
RECEIVER
PW SEL
S401
POWER
SELECT
ON
OFF
+B
BEEP
BEEP SW
Q903
BZ901
EL701
TRANS
T950
DC/DC
CONVERTER
Q950, 951
SWITCH
Q952
SWITCH
Q619
EL DIMMER
LCD +B
REG
Q750
LCD701
LIQUID CRYSTAL DISPLAY
(C910RDS)
LED751
LED752
LED753
LED754
LED755
LED756
LED757
LED758
LCD DREIVE
IC701
LCD DREIVE
IC702
LCD-INH
LCD-CLK
LCD-DATA
LCD-CE
VLCD
VLC5
VLC0
VLC6
LCD CE2
LCDANG
P MOT+
P MOT-
ANGLE CONTROL
Q621, 622
LCD+B
OPEN/CLOSE
M905
MOTOR DRIVE
IC901
POWER
SAVE
CONTROL
LOGIC
BUFF
Q905
SWITCH
Q904, 920
EL +B
EL ON
SWITCH
Q618, 623
PW ON
POWER ON SW
Q607, 609
ACC IN
ACC CHECK
Q611
CN909
BATT
GND
ACC
AMP REM
ANT REM
P.ON +10V
POW ON+10V REG
Q616
ILL ON
ILL ON SW
Q612, 613
LCD +B
ILL +10V REG
Q615
+5V
BU +5V REG
Q610
SWITCH
Q5, 6
D.F.+5V REG
IC3
D.F +5V
SYSTEM CONTROL
IC401
D OUT
OUT
IN
XT OUT
XT IN
S407
DIGITAL/ANALOG SELECT
ANALOG
DIGITAL
X402
5.0MHz
X401
32.768kHz
BUS INTERFACE
IC402
BATT
SWITCH
RESET
SWITCH
BUS ON
SWITCH
Q403
SIRCS BUFFER
Q408
CN403
BUS CONTROL
IN
DD1
DC/DC CONV
P-CON
+B
+12V
-12V
+6V REG
IC12
+6V
-6V REG
IC13
-6V
+5V REG
IC6
+5V
-5V REG
IC8
-5V

• **Circuit Boards Location**

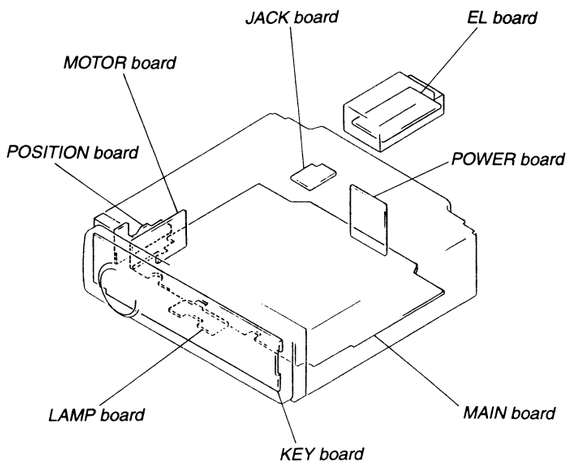

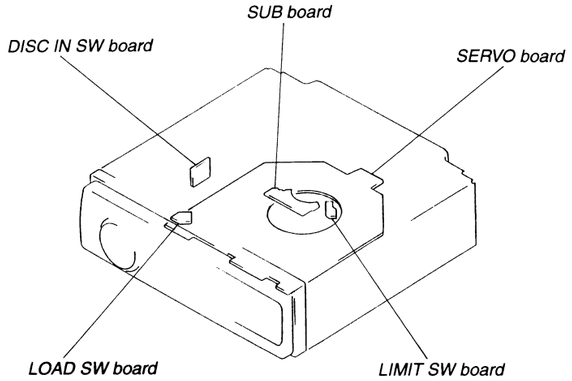

5-2. PRINTED WIRING BOARDS – MECHANISM DECK Section –

• **Semiconductor Location**

Ref. No.	Location
IC1	C-6
IC2	D-6
IC4	G-6
IC5	G-2
IC7	B-2
Q3	C-7

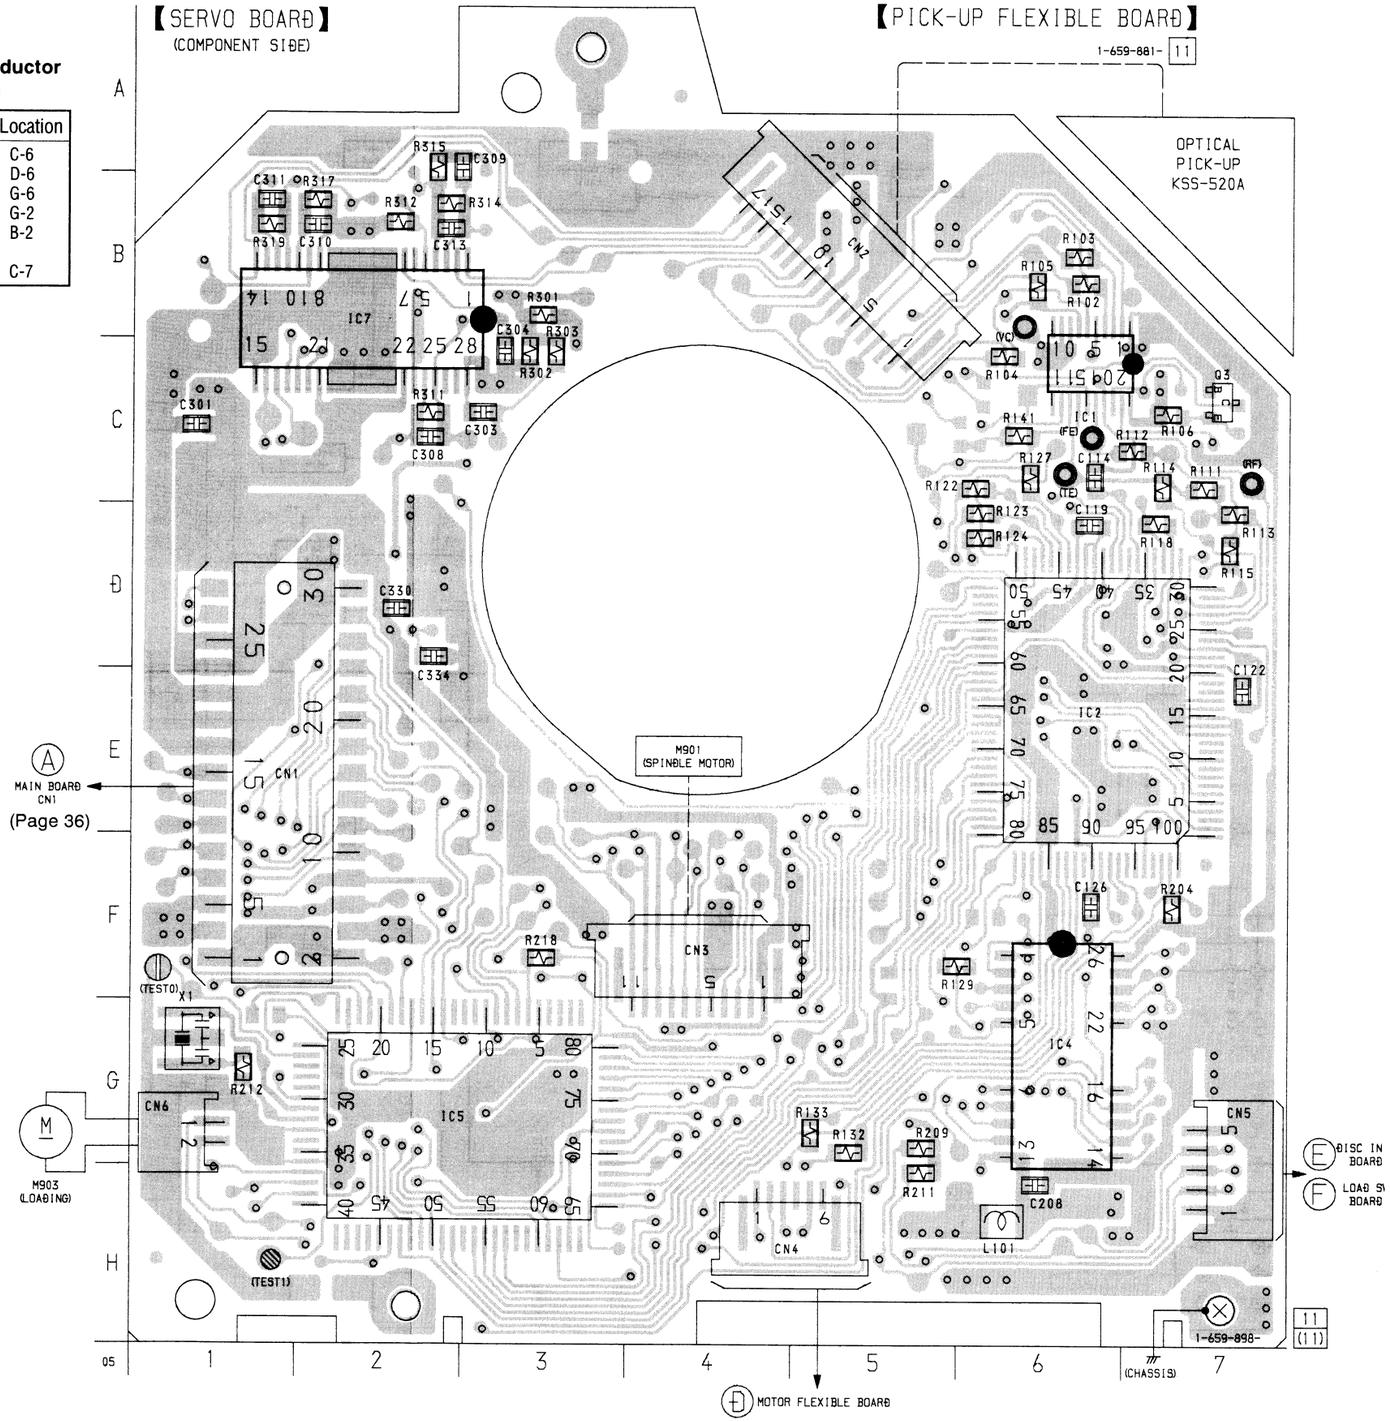

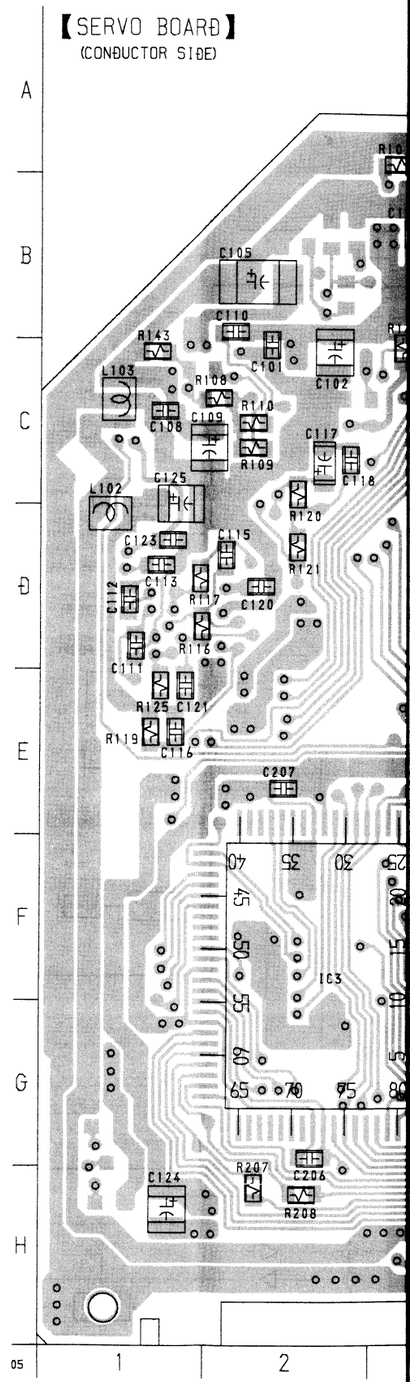

【SERVO BOARÐ】
(CONÐUCTOR SIÐE)

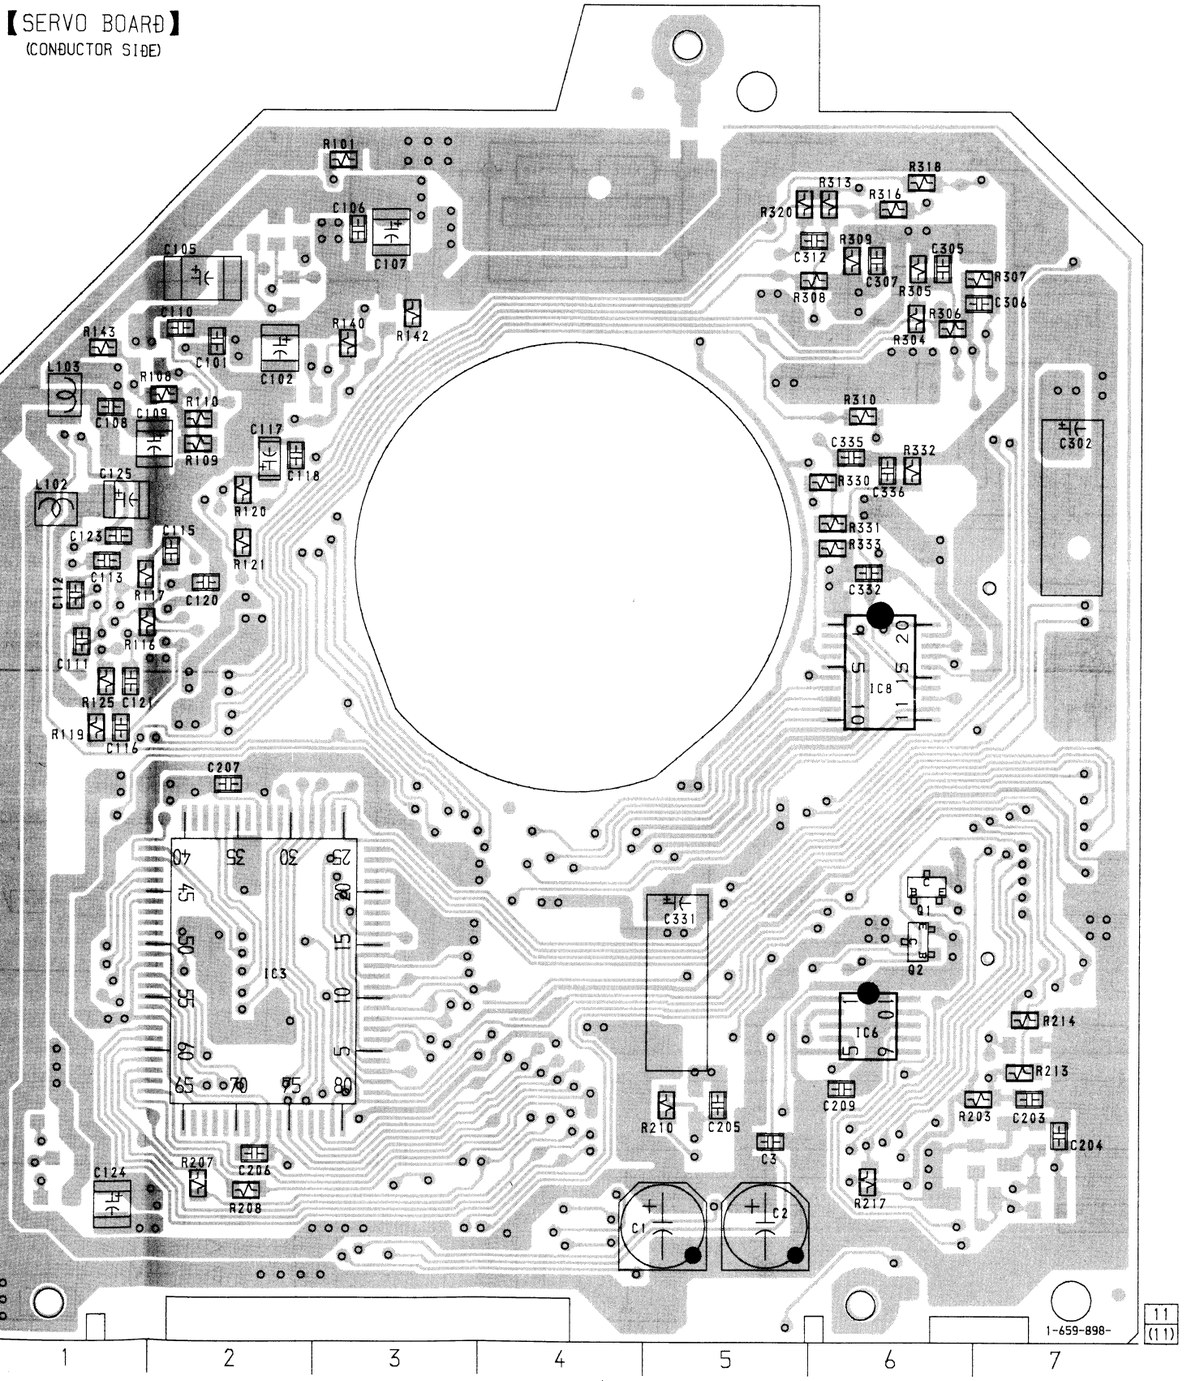

【MOTOR FLEXIBLE BOARÐ】

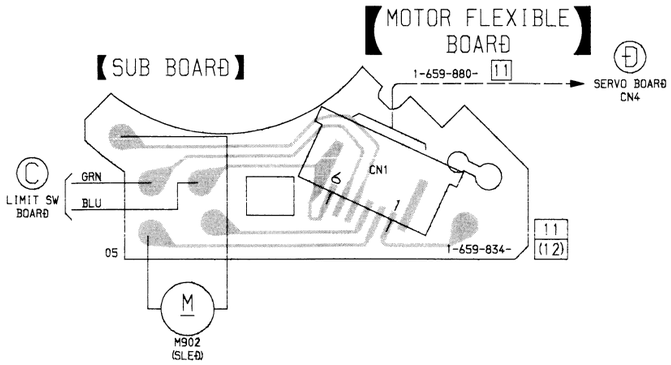

【LIMIT SW BOARÐ】

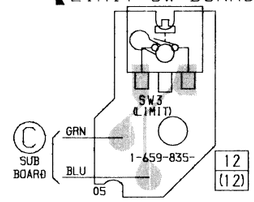

【ÐISC IN SW BOARÐ】

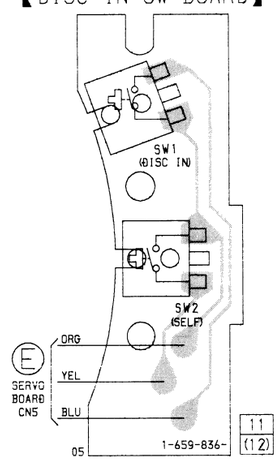

【LOAÐ SW BOARÐ】

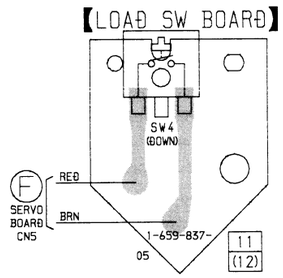

Note:

- ——— : parts extracted from the conductor side.
- △ : internal component.
- ▒▒▒ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

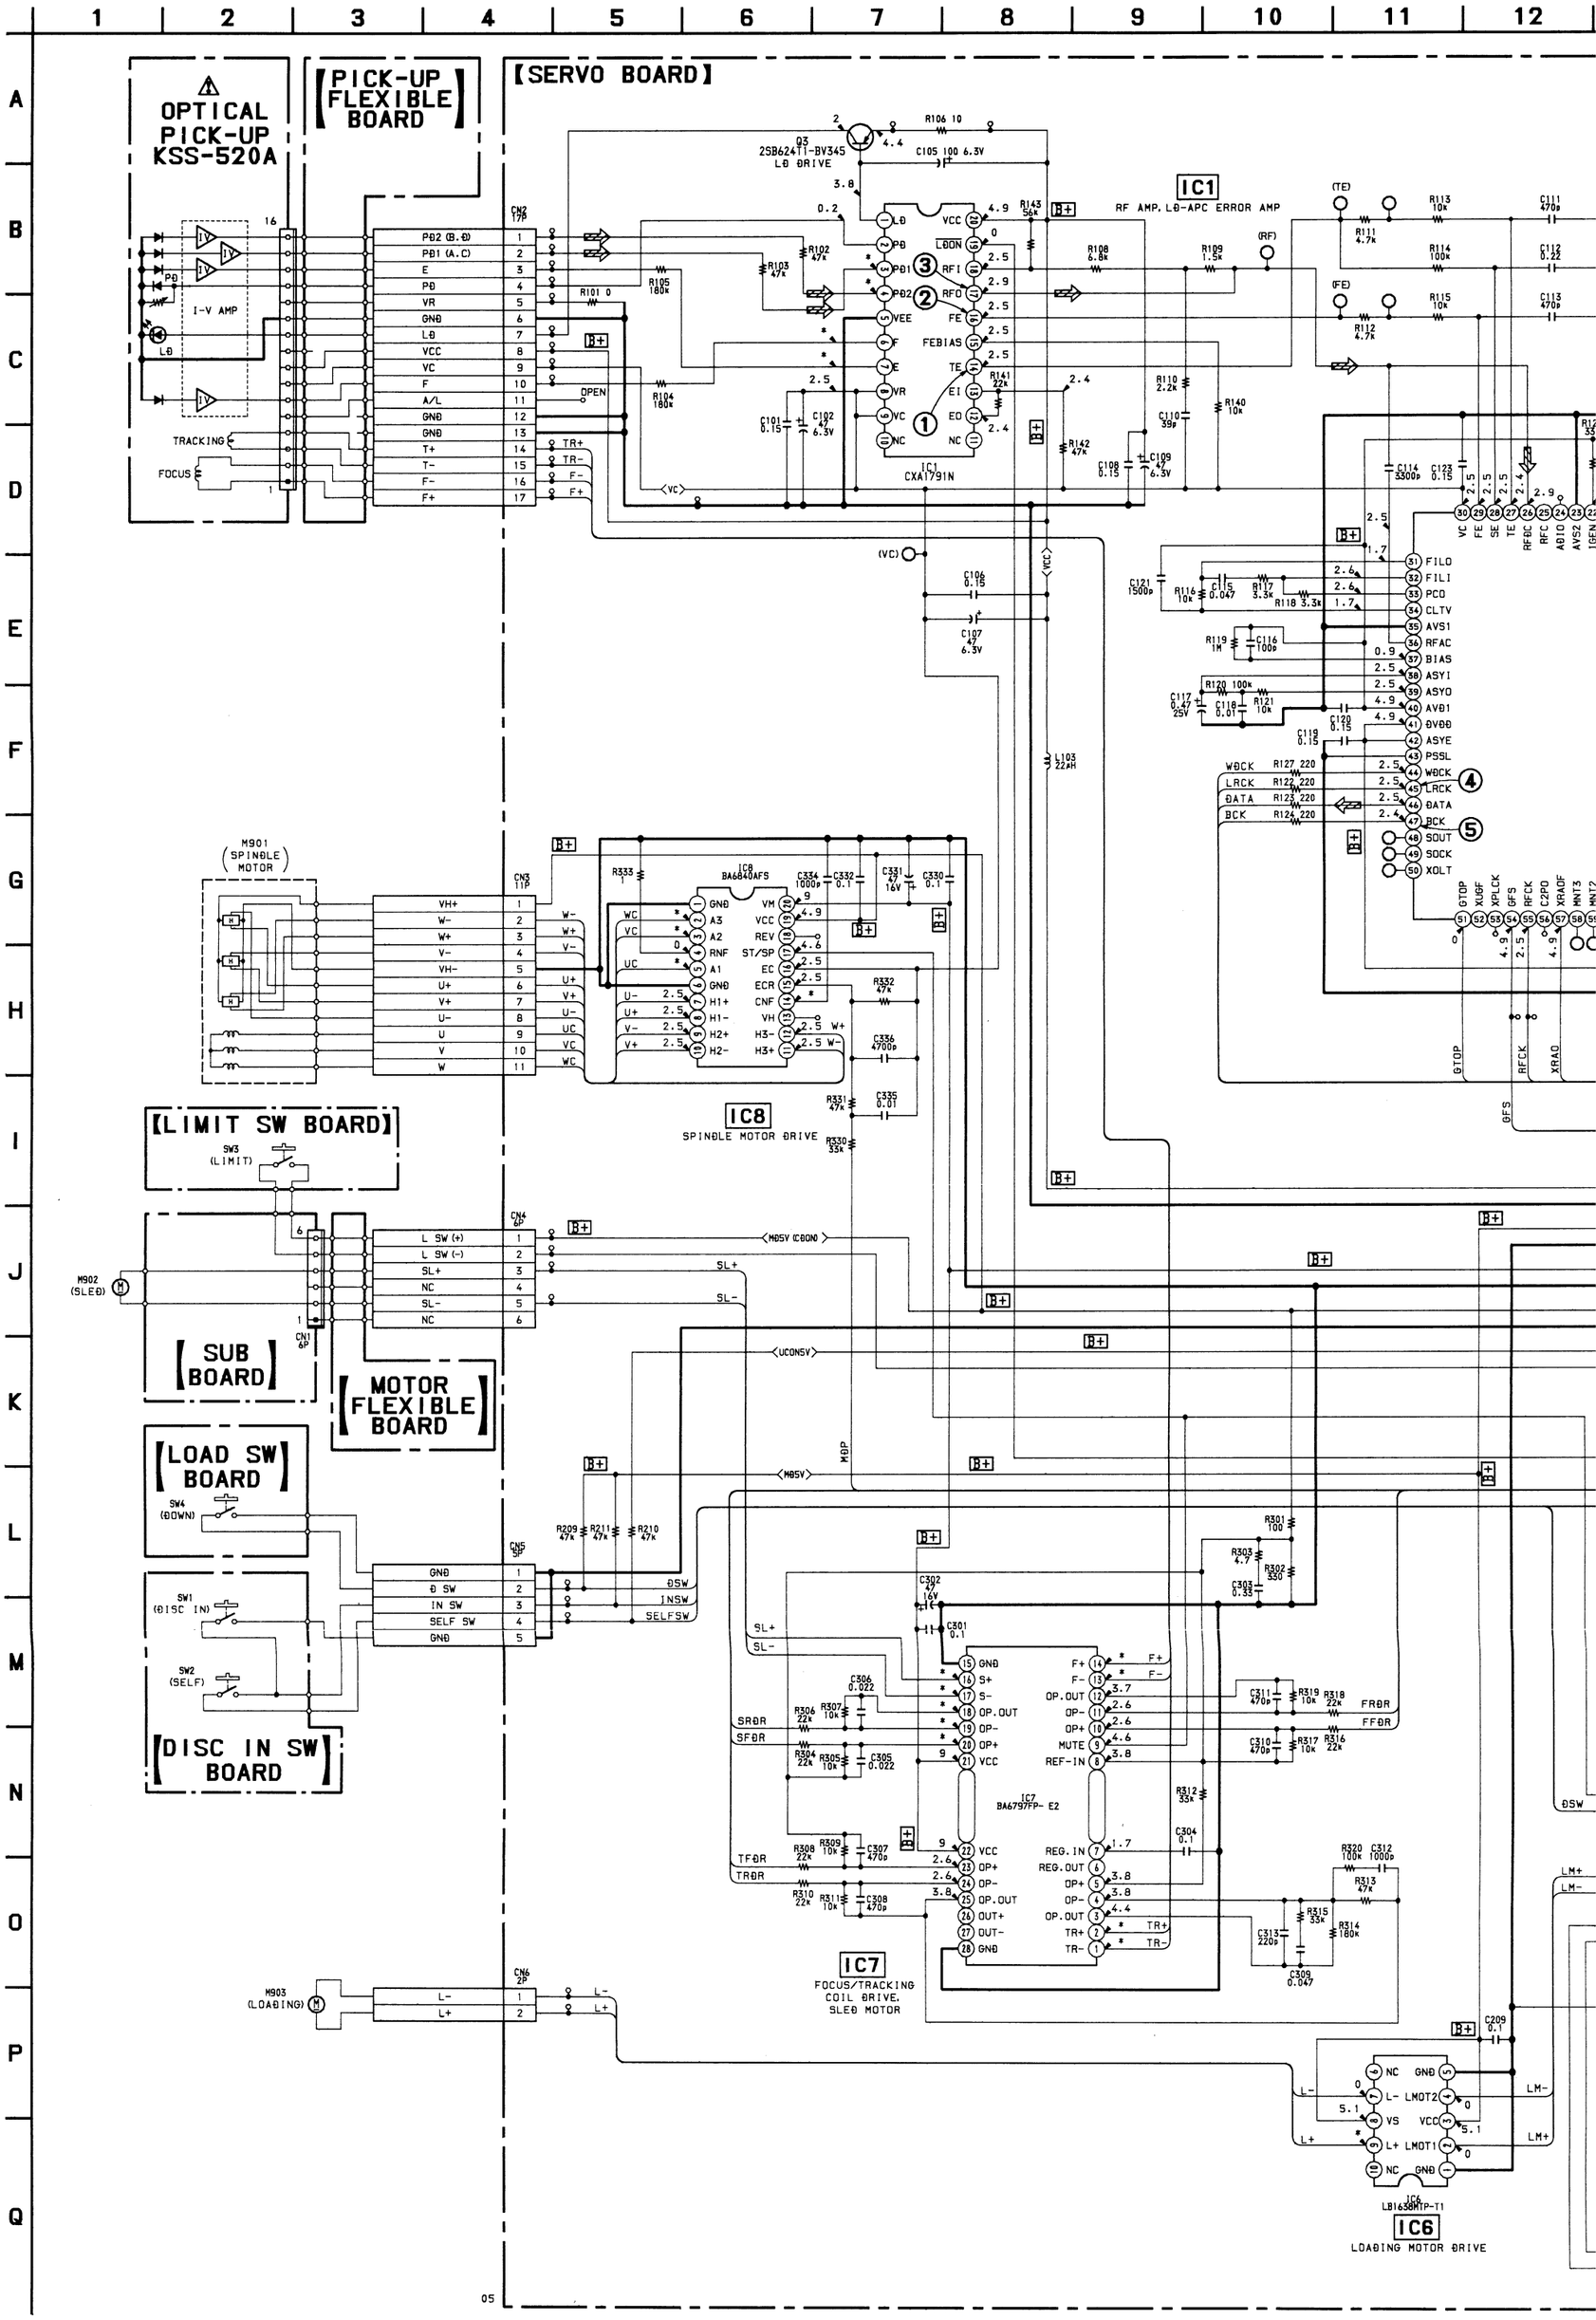
【SERVO BOARD】
OPTICAL PICK-UP KSS-520A
【PICK-UP FLEXIBLE BOARD】
IC1
RF AMP, LØ-APC ERROR AMP
CXA1791N
IC8
SPINDLE MOTOR DRIVE
BA6848AFS
IC7
FOCUS/TRACKING COIL DRIVE, SLED MOTOR
BA6797FP-E2
IC6
LOADING MOTOR DRIVE
LB1638NTP-T1
【LIMIT SW BOARD】
【SUB BOARD】
【MOTOR FLEXIBLE BOARD】
【LOAD SW BOARD】
【DISC IN SW BOARD】
M901 (SPINDLE MOTOR)
M902 (SLED)
M903 (LOADING)
SW1 (DISC IN)
SW2 (SELF)
SW3 (LIMIT)
SW4 (DOWN)
I-V AMP
TRACKING
FOCUS
B+
VC
UCON5V
M05V
M0P
05

IC2 CX02545Q
IC2
ÐIGITAL SIGNAL PROCESSOR/ ÐIGITAL SERVO PROCESSOR

IC4 μPB424400GS-60
IC4
ÐRAM

IC3 CX02512AQ
IC3
ÐRAM CONTROLLER

IC5 CXP84332-031Q
IC5
MECHA CONTROL

IC6
ING MOTOR ÐRIVE

Q2 RN2426TE85L
CÐ ON SWITCH

Q1 ÐTA124EK-T146
MÐ ON SWITCH

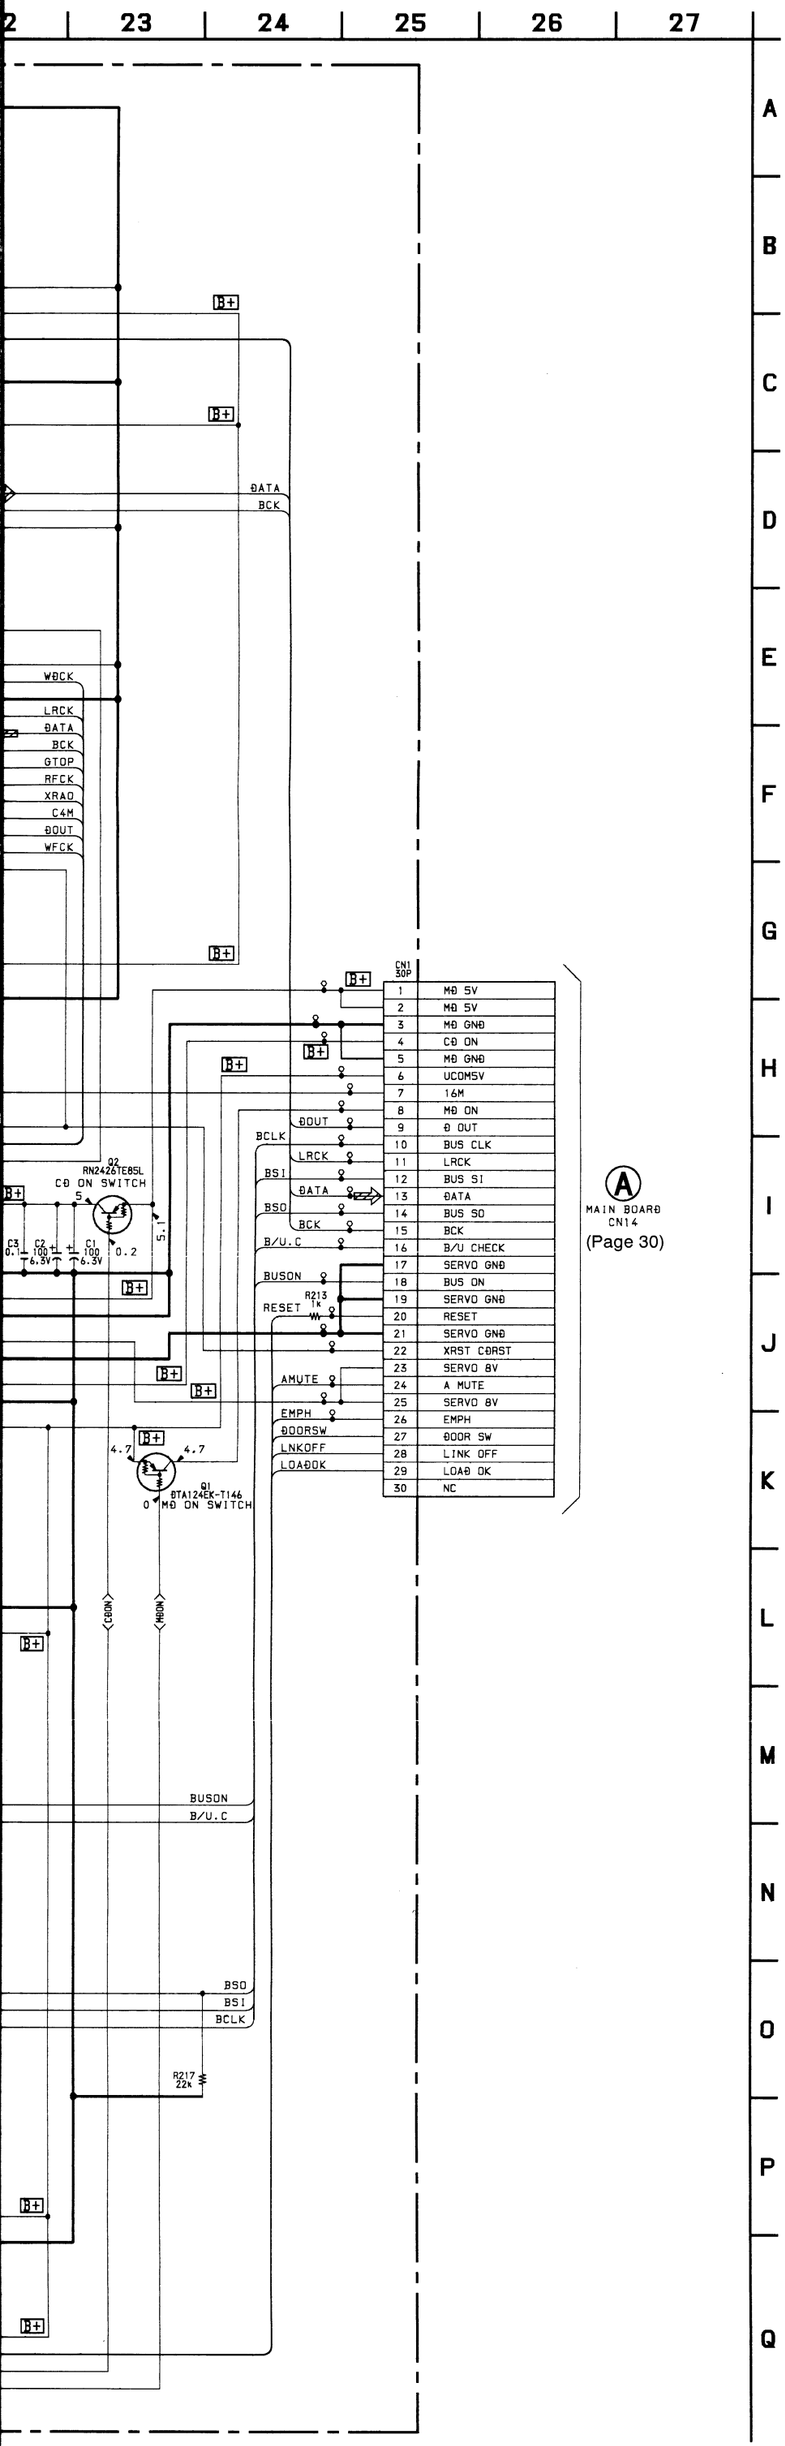

• Waveforms

❶IC1 ⑭ 200mV/DIV
100µs/DIV

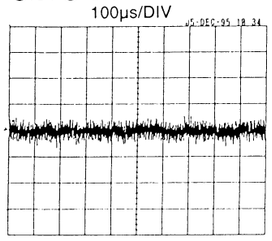

❷IC1 ⑯ 200mV/DIV
100µs/DIV

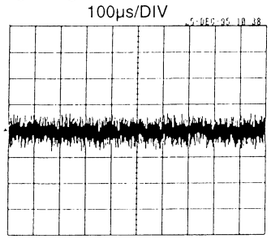

❸IC1 ⑰ 500mV/DIV
1µs/DIV

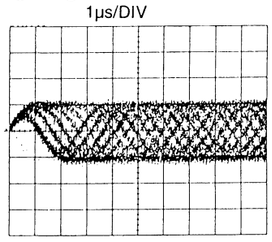

❹ IC2 ㊺

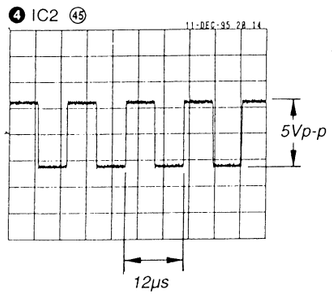

❺ IC2 ㊼

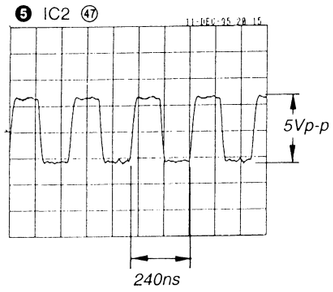

❻ IC5 ㉛

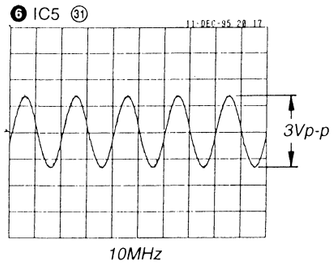

Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.

Note:	**Note:**
The component identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

- B+ : B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  no-mark : CD
  * : Impossible to measure.
- Voltages are taken with a VOM (10 MΩ/V).
  Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
  Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : CD

• **Waveforms**

❶ IC2 ③ (CD PLAY)

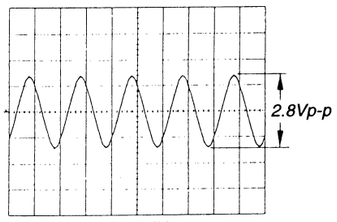

16.9MHz

❷ IC203 ① (FM/AM)

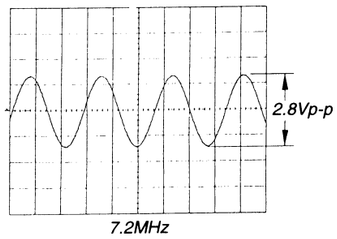

7.2MHz

❸ IC209 ⑩ (FM)

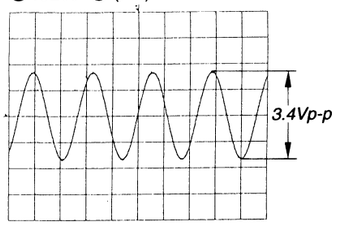

4.332MHz

❹ IC206 ⑧

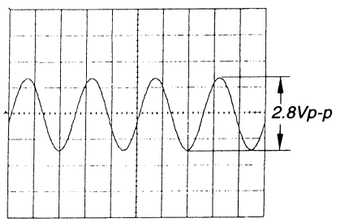

8MHz

❺ IC401 ⑳

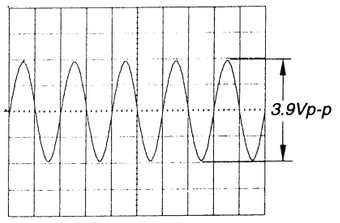

5.0MHz

❻ IC401 ㉓

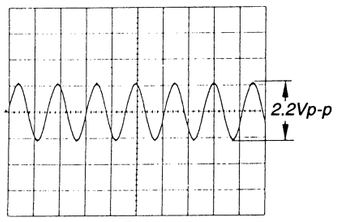

32.768kHz

❼ IC211 ㊼ (FM/AM)

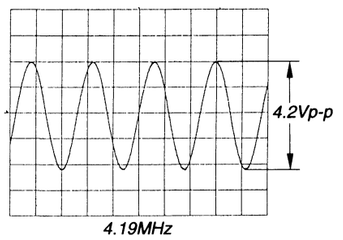

4.19MHz

5-4. SCHEMATIC DIAGRAM – MAIN Section – • See page 45 for IC Block Diagrams.

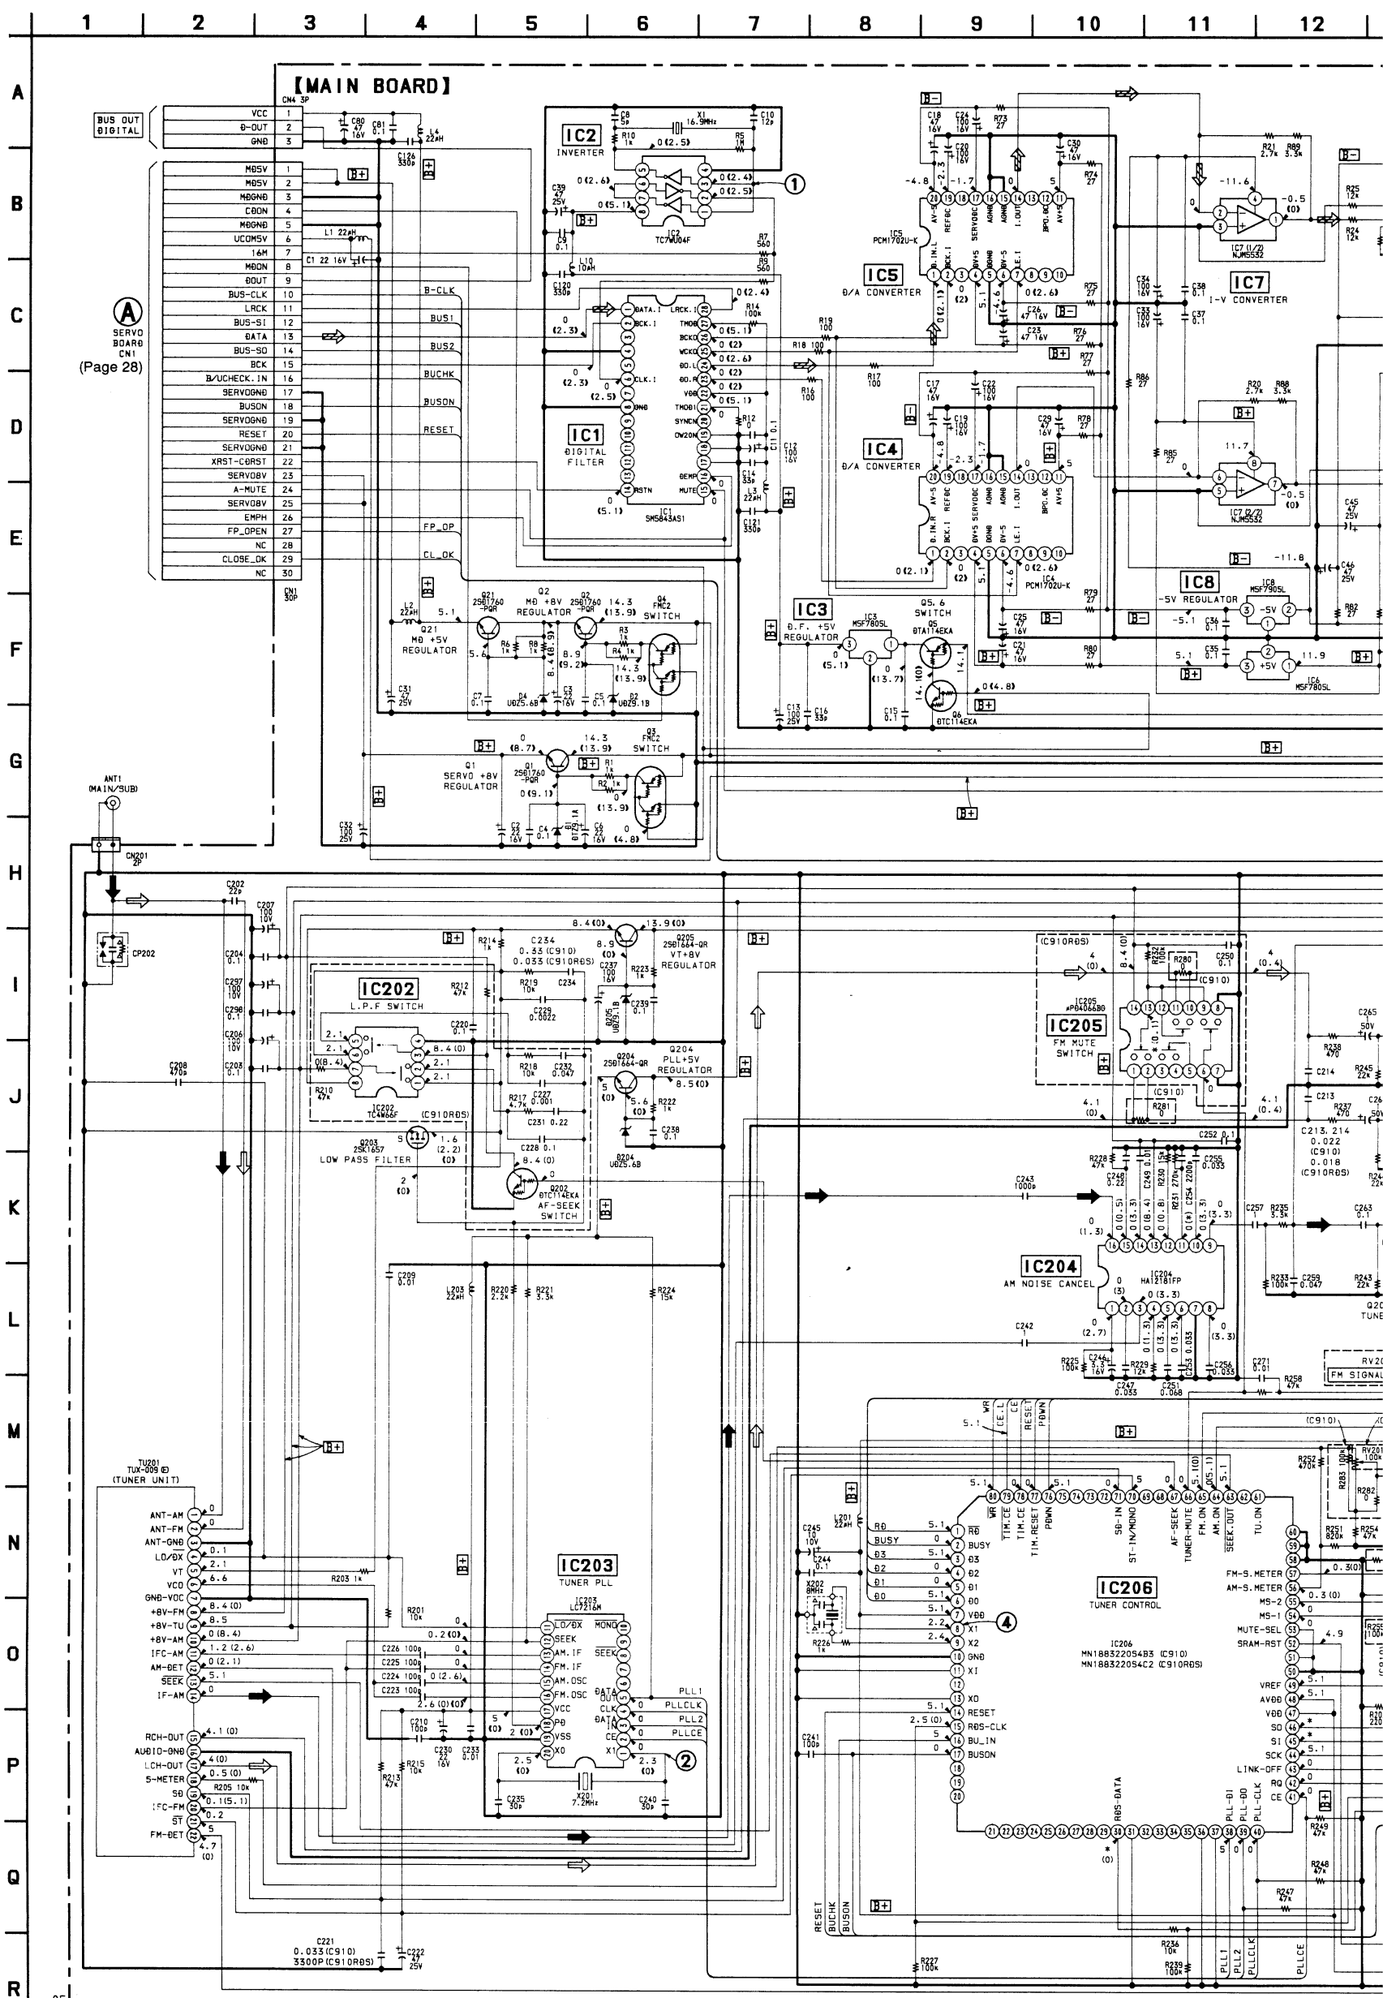

10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26

IC7 I-V CONVERTER

IC9 GND ISOLATION

IC10 LOW PASS FILTER

IC11 ELECTRICAL VOLUME

IC13 -6V REGULATOR

IC12 +6V REGULATOR

IC15 LINE AMP

IC14 LINE AMP

Q12-19 LINE MUTE

IC8 -5V REGULATOR

IC6 +5V REGULATOR

Q405 AM +B SWITCH

Q606 TUNER+8V REGULATOR

Q608, 617 TUNER ON SWITCH

Q607, 609 POWER ON SWITCH

Q601, 602 FM +B SWITCH

Q604 FM +B SWITCH

Q603 SWITCHING

IC601 RESET

Q610 BU+5V REGULATOR

Q612, 613 ILL ON SWITCH

Q401, 402 KEY ACTIVE SWITCH

S407 DIGITAL/ANALOG SELECT

S402 (RESET)

S401 (POWER SELECT) ON OFF

Q207-209 TUNER MUTE

RV201 FM SIGNAL METER

IC206 TUNER CONTROL

IC208 SIGNAL METER BUFFER

S202 (FREQUENCY SELECT)

IC207 SRAM, RESET

IC209 RDS DECORDER

IC210 G-RAM

IC211 TRAFFIC INFORMATION RECODING

IC401 SYSTEM CONTROL

(E, AEP, UK, G)

(C910R6S)

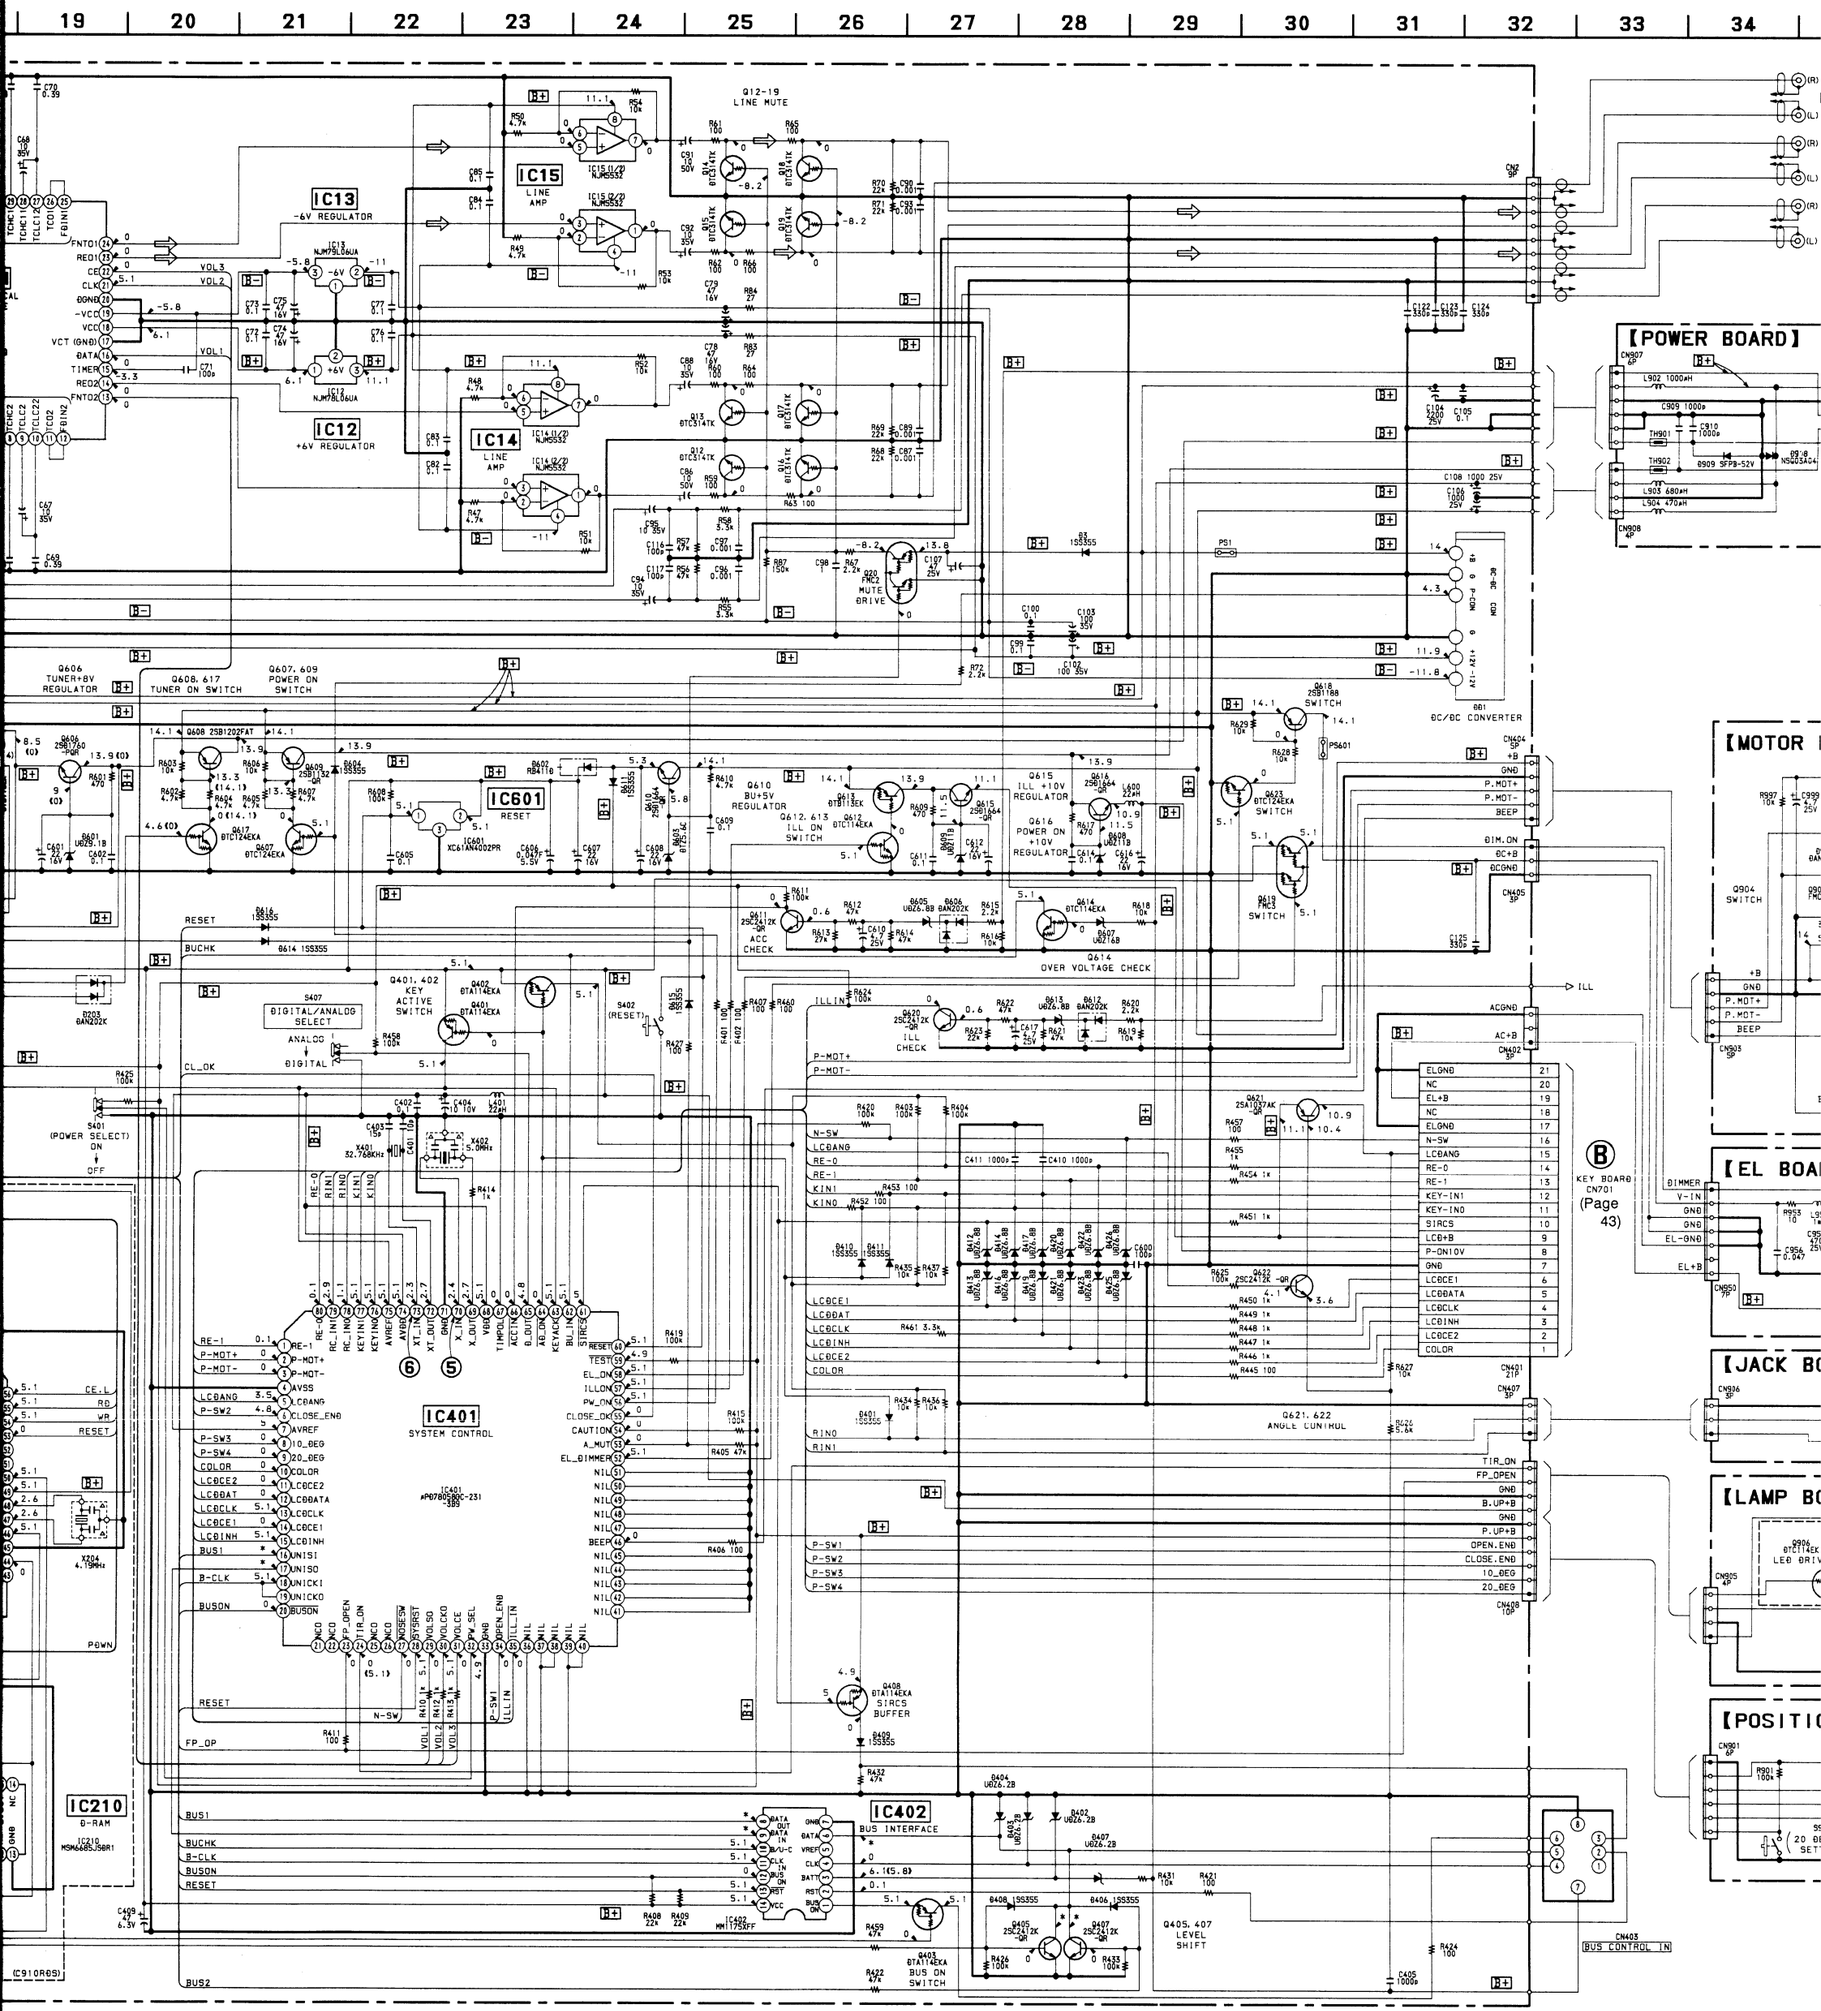
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
IC13
-6V REGULATOR
IC12
+6V REGULATOR
IC15
LINE AMP
IC14
LINE AMP
Q12-19
LINE MUTE
IC401
SYSTEM CONTROL
IC601
RESET
IC402
BUS INTERFACE
IC210
D-RAM
Q606
TUNER+8V REGULATOR
Q608, 617
TUNER ON SWITCH
Q607, 609
POWER ON SWITCH
Q610
8U+5V REGULATOR
Q612, 613
ILL ON SWITCH
Q615
ILL +10V REGULATOR
Q616
POWER ON +10V REGULATOR
Q614
OVER VOLTAGE CHECK
Q401, 402
KEY ACTIVE SWITCH
Q408
SIRCS BUFFER
Q403
BUS ON SWITCH
Q405, 407
LEVEL SHIFT
Q621, 622
ANGLE CONTROL
Q623
SWITCH
Q618
SWITCH
DIGITAL/ANALOG SELECT
ANALOG
DIGITAL
S401
(POWER SELECT)
ON
OFF
S402
(RESET)
X401
32.768KHz
X402
5.0MHz
X204
4.19MHz
【POWER BOARD】
【MOTOR
【EL BOA
【JACK BO
【LAMP BO
【POSITIO
KEY BOARD CN701
(Page 43)
DC/DC CONVERTER
CN403
BUS CONTROL IN
RESET
BUCHK
B-CLK
BUSON
FP_OP
N-SW
BUS1
BUS2
P-MOT+
P-MOT-
CL_OK
ILLIN
ACC CHECK
ILL CHECK
OVER VOLTAGE CHECK
LEVEL SHIFT
BUS ON SWITCH
SIRCS BUFFER
MUTE DRIVE
ANGLE CONTROL
SWITCH
KEY ACTIVE SWITCH
RESET
TUNER ON SWITCH
POWER ON SWITCH
8U+5V REGULATOR
ILL ON SWITCH
ILL +10V REGULATOR
POWER ON +10V REGULATOR
OVER VOLTAGE CHECK
ACC CHECK
ILL CHECK
LEVEL SHIFT
BUS ON SWITCH
SIRCS BUFFER
MUTE DRIVE
ANGLE CONTROL
SWITCH
SWITCH

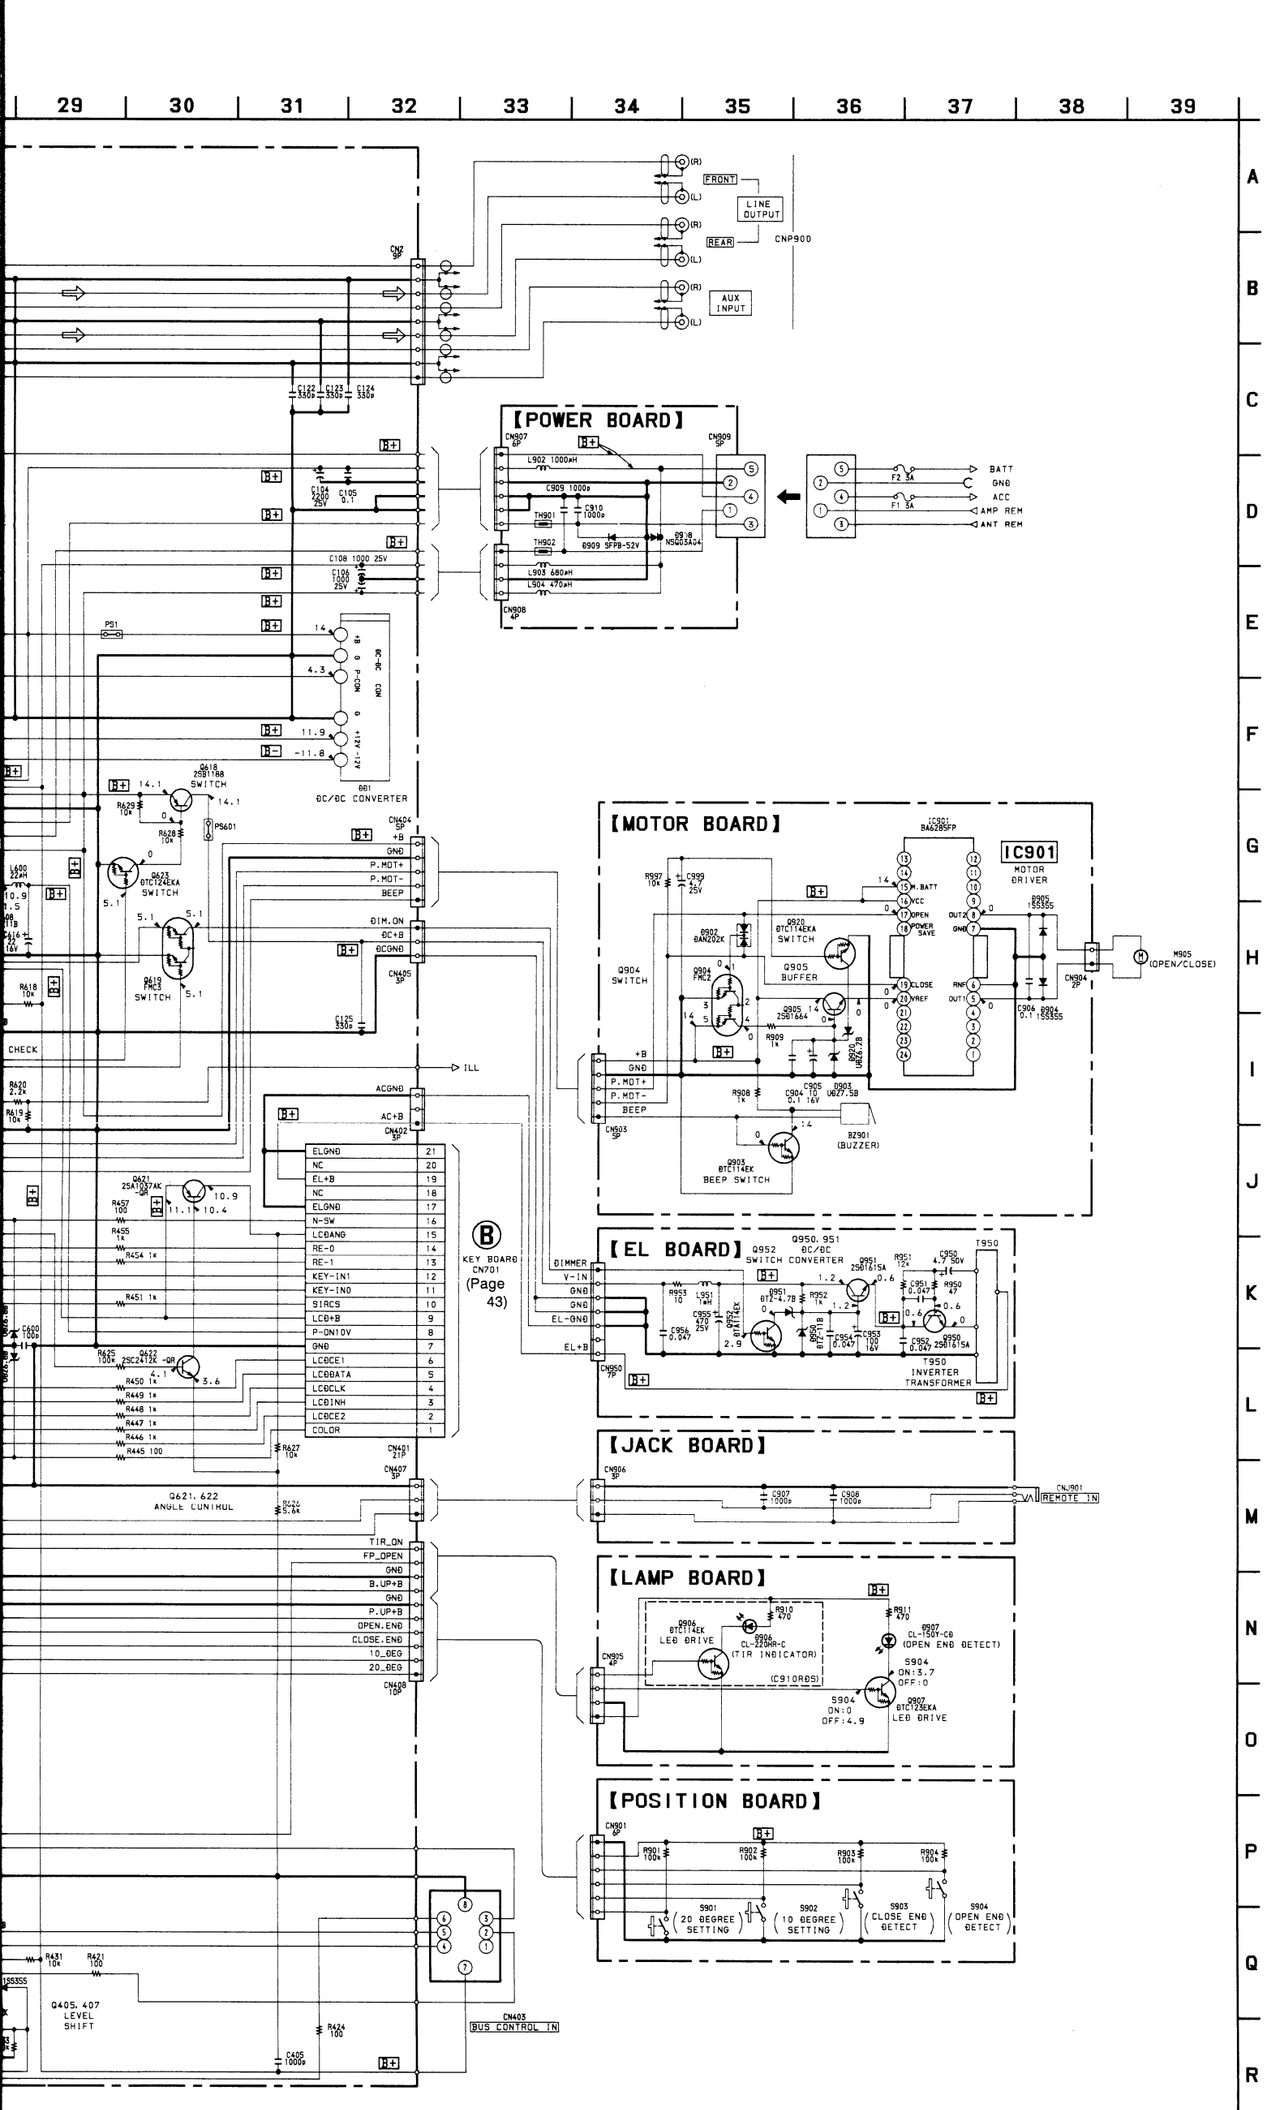

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- B+ : B+ Line.
- B− : B- Line.
- ▭ : panel designation.
- ▭ : adjustment for repair.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
  ( ) : AM
  << >> : CD
  * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : FM
  ➡ : AM
  ⇨ : CD
- Abbreviation
  G: German

【MOTOR BOARD】
(COMPONENT SIDE)

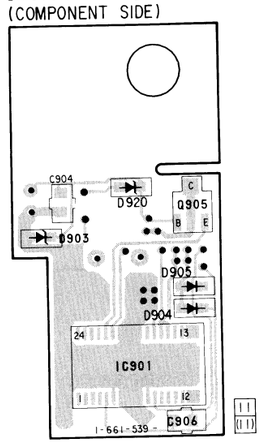

【MOTOR BOARD】
(CONDUCTOR SIDE)

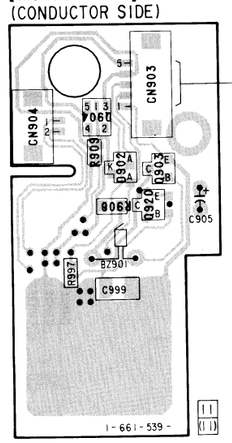

TO CN904



【MAIN BOARD】
(COMPONENT SIDE)

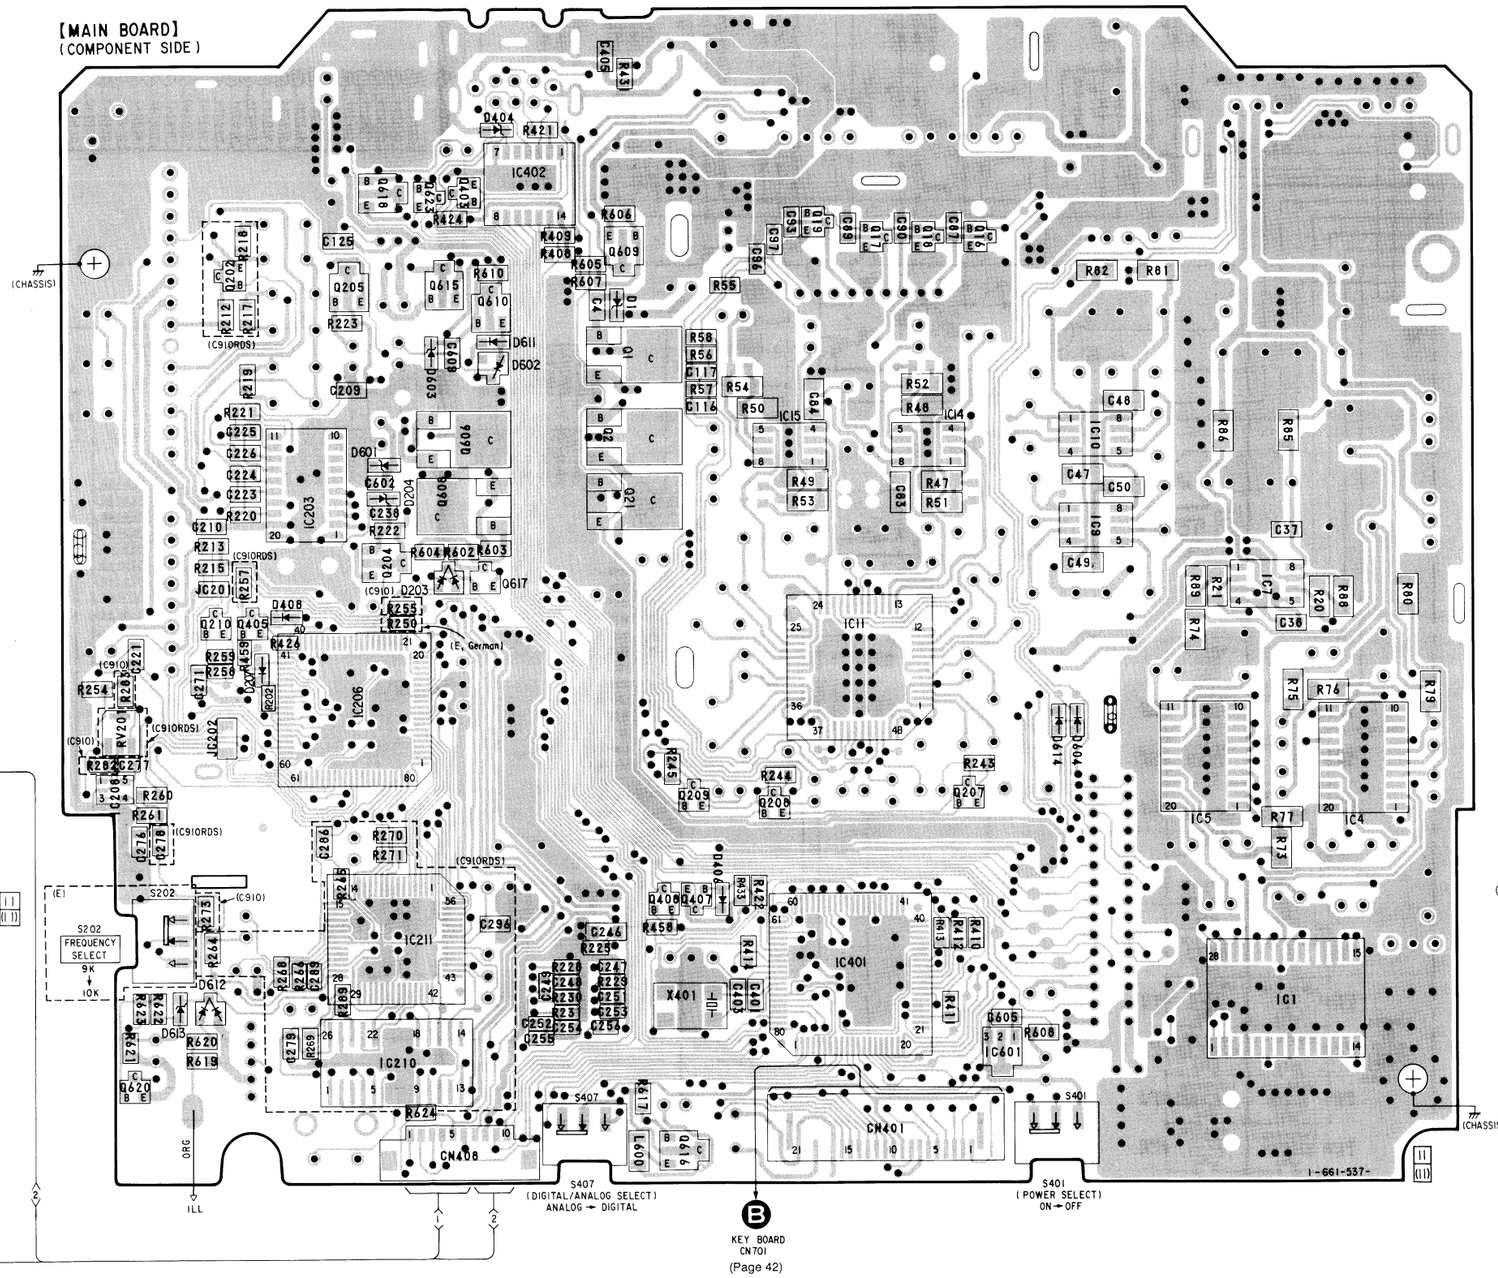

【MAIN BOARD】
(CONDUCTOR SIDE)

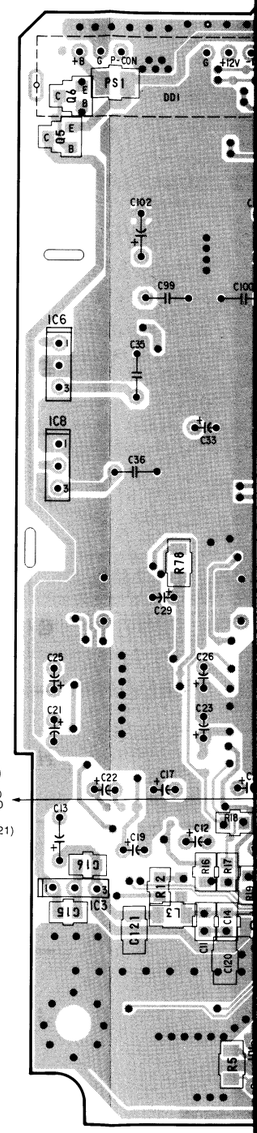

【POSITION BOARD】

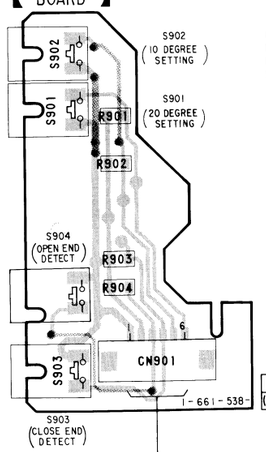

【LAMP BOARD】

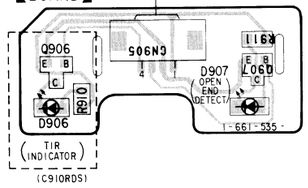

A SERVO BOARD CN1 (Page 21)

B KEY BOARD CN701 (Page 42)

13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29

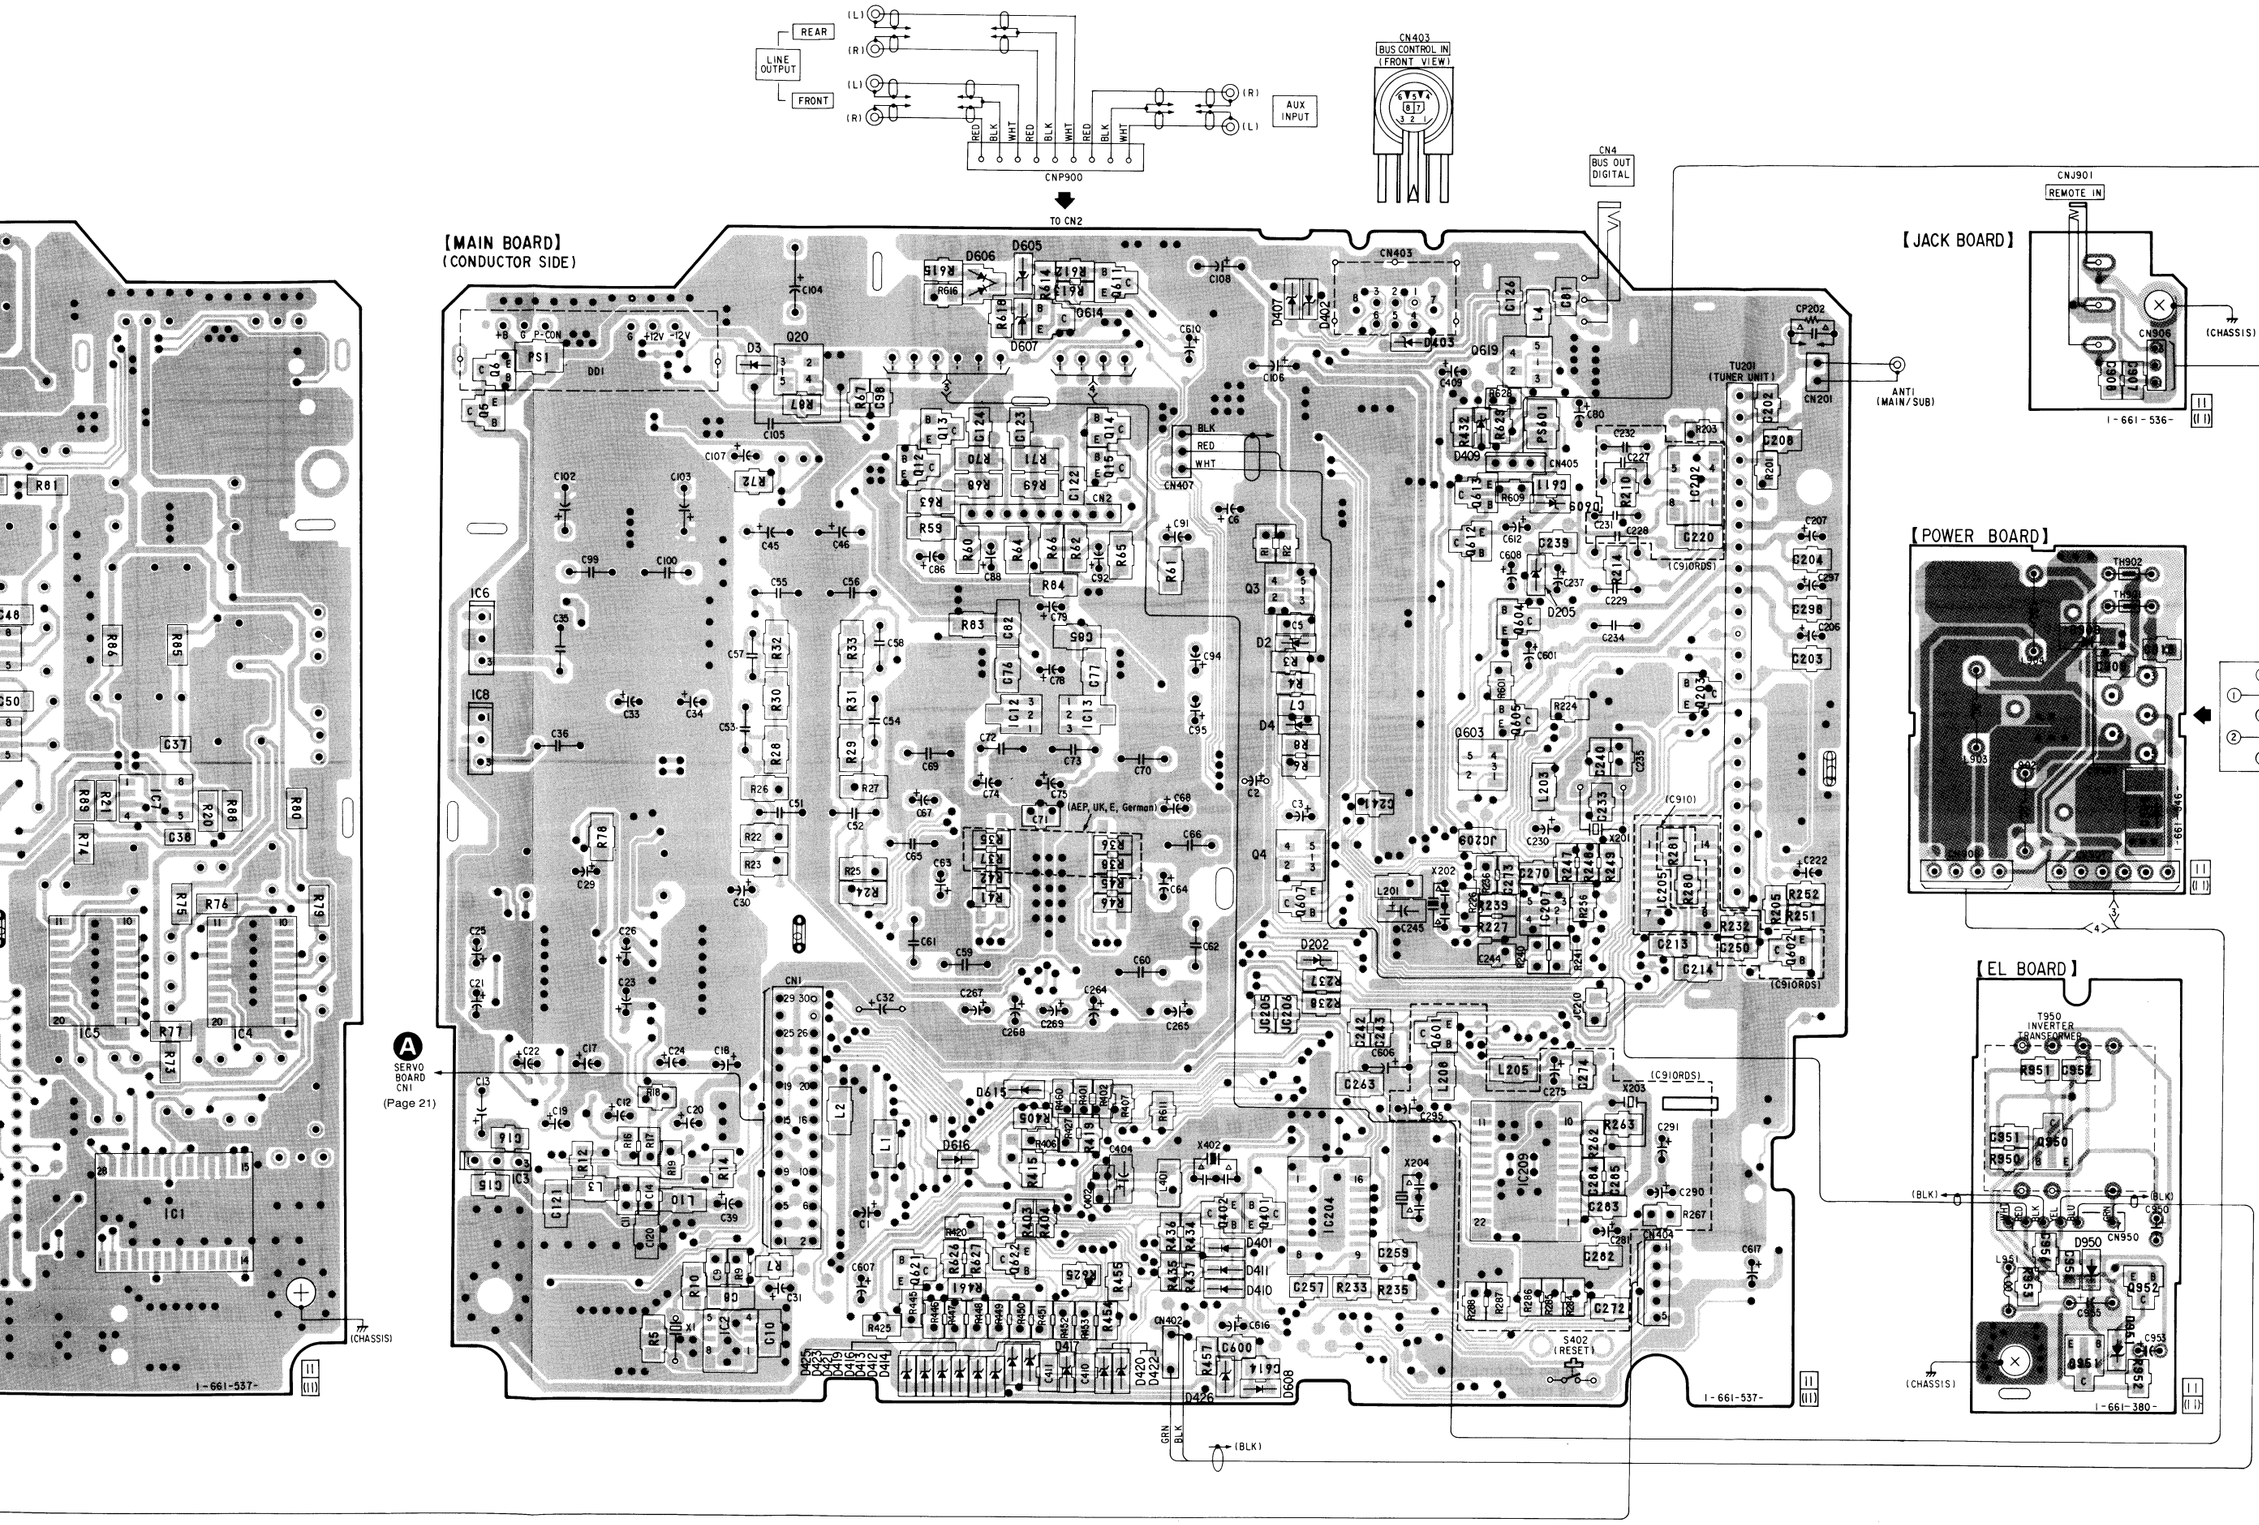

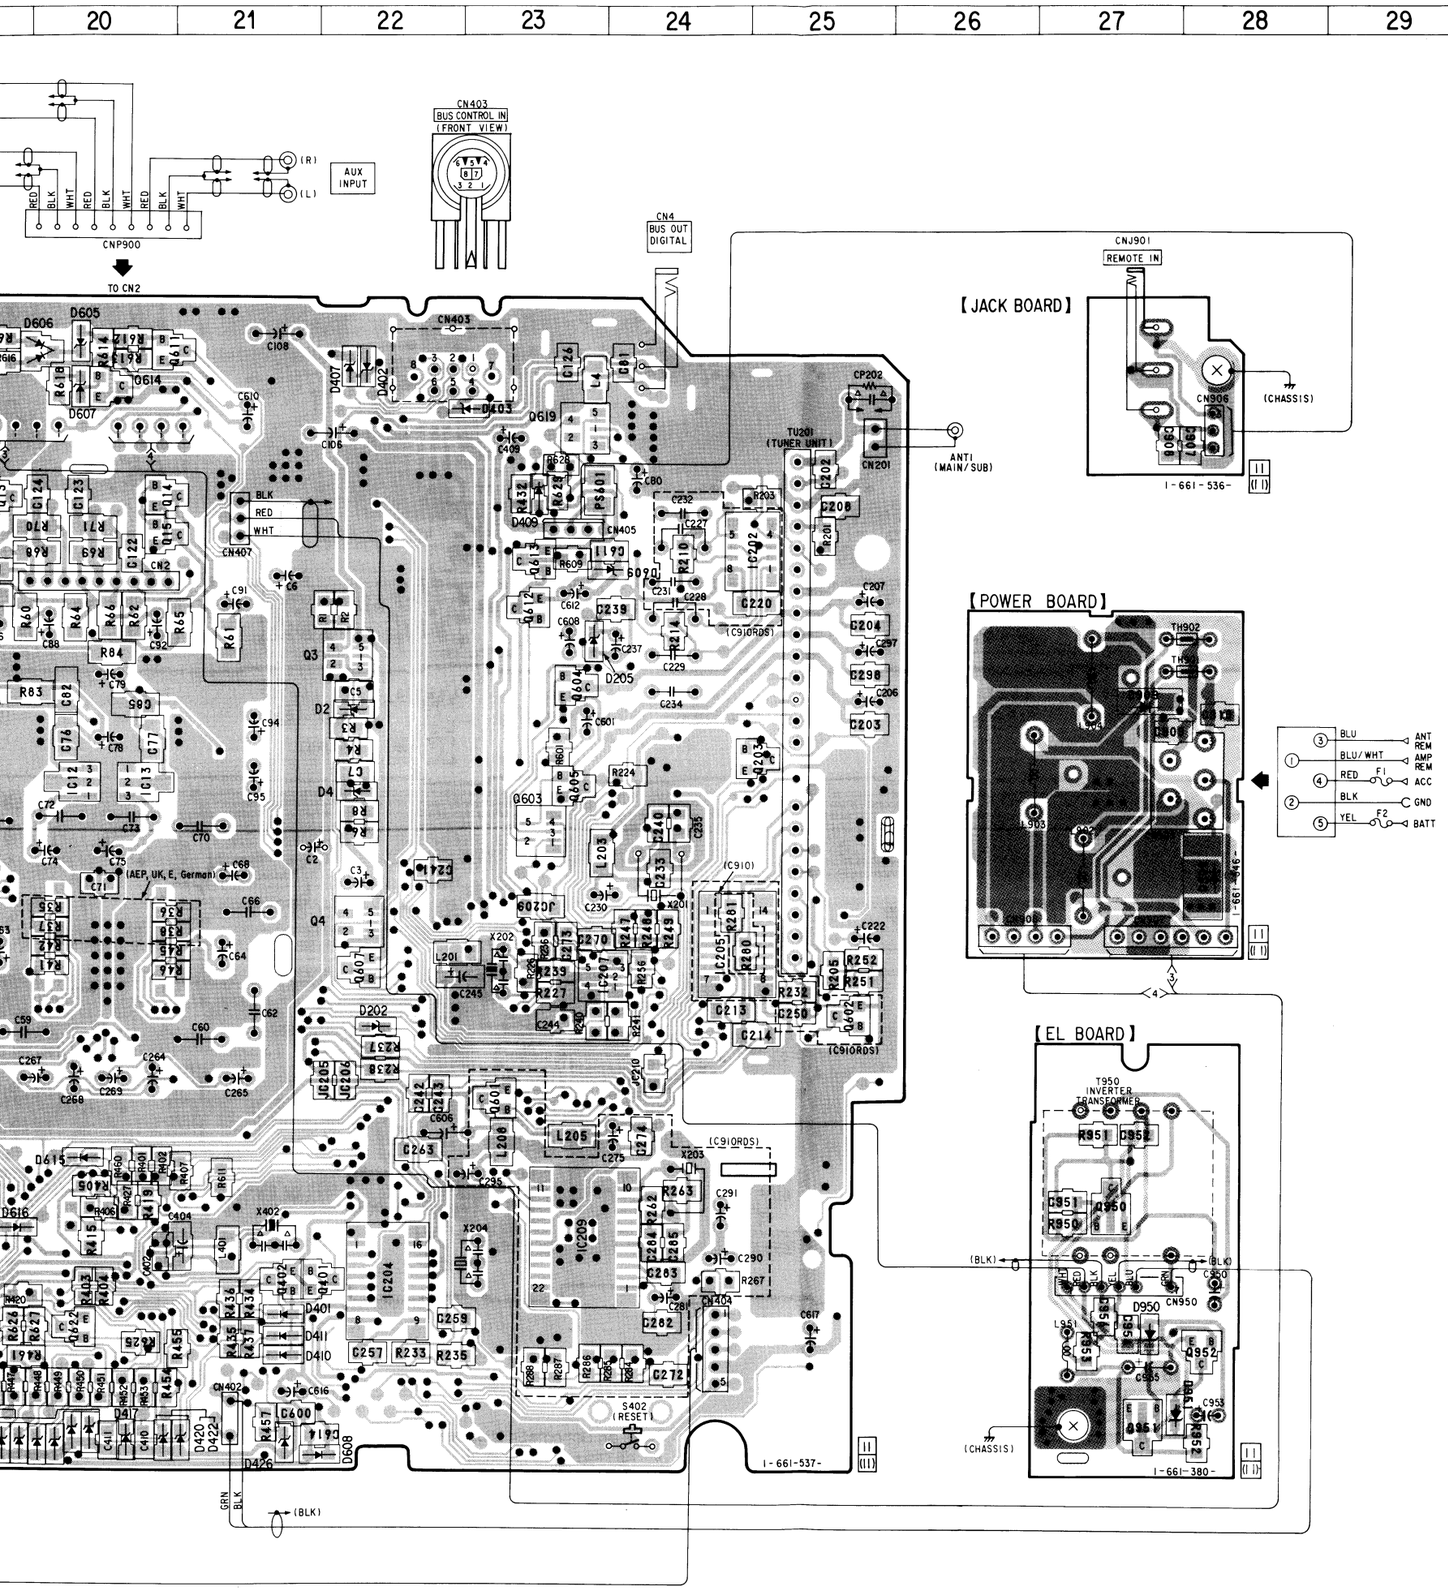

– 37 –

– 38 –

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	D-9	D906	H-3	Q18	D-11
D2	E-22	D907	H-5	Q19	D-11
D3	C-18	D908	F-28	Q20	C-18
D4	F-22	D909	E-27	Q21	F-9
D202	G-22	D920	D-2	Q202	D-7
D203	F-8	D950	J-27	Q203	F-25
D204	F-8	D951	J-27	Q204	F-8
D205	E-23			Q205	D-7
D207	G-7	IC1	I-14	Q207	H-12
D401	I-21	IC2	J-18	Q208	H-10
D402	C-22	IC3	I-16	Q209	H-10
D403	C-23	IC4	H-14	Q210	G-7
D404	C-8	IC5	H-13	Q401	I-22
D406	H-10	IC6	E-16	Q402	I-21
D407	C-22	IC7	F-14	Q403	D-8
D408	G-7	IC8	F-16	Q405	G-7
D409	D-23	IC9	F-13	Q407	H-10
D410	J-21	IC10	E-13	Q408	H-10
D411	J-21	IC11	G-11	Q601	H-23
D412	J-20	IC12	F-20	Q602	G-25
D413	J-20	IC13	F-20	Q603	F-23
D414	J-20	IC14	E-12	Q604	E-23
D416	J-20	IC15	E-11	Q605	F-23
D417	J-20	IC202	D-25	Q606	E-8
D419	J-19	IC203	F-7	Q607	G-22
D420	J-20	IC204	I-22	Q608	F-8
D421	J-19	IC205	G-24	Q609	D-9
D422	J-21	IC206	G-7	Q610	D-8
D423	J-19	IC207	G-23	Q611	C-20
D425	J-19	IC208	H-6	Q612	D-23
D426	J-21	IC209	I-23	Q613	D-23
D601	E-8	IC210	J-8	Q614	C-20
D602	E-8	IC211	I-8	Q615	D-8
D603	E-8	IC401	I-11	Q616	J-10
D604	G-13	IC402	C-9	Q617	F-8
D605	C-20	IC601	J-12	Q618	D-8
D606	C-20	IC901	E-2	Q619	C-23
D607	C-20			Q620	J-6
D608	J-22	Q1	E-9	Q621	J-19
D609	D-24	Q2	E-9	Q622	J-19
D611	E-8	Q3	E-22	Q623	D-8
D612	I-6	Q4	G-22	Q903	D-4
D613	I-6	Q5	D-16	Q904	C-4
D614	G-12	Q6	C-16	Q905	D-2
D615	H-20	Q12	D-19	Q906	H-3
D616	I-19	Q13	D-19	Q907	H-5
D902	D-4	Q14	D-20	Q920	D-4
D903	D-1	Q15	D-20	Q950	I-27
D904	E-2	Q16	D-12	Q951	J-27
D905	E-2	Q17	D-11	Q952	J-28

Note on Printed Wiring Board:

- ○——— : parts extracted from the component side.
- ● : Through hole.
- △ : internal component.
- :Pattern of the rear side.
- :Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

– 39 –

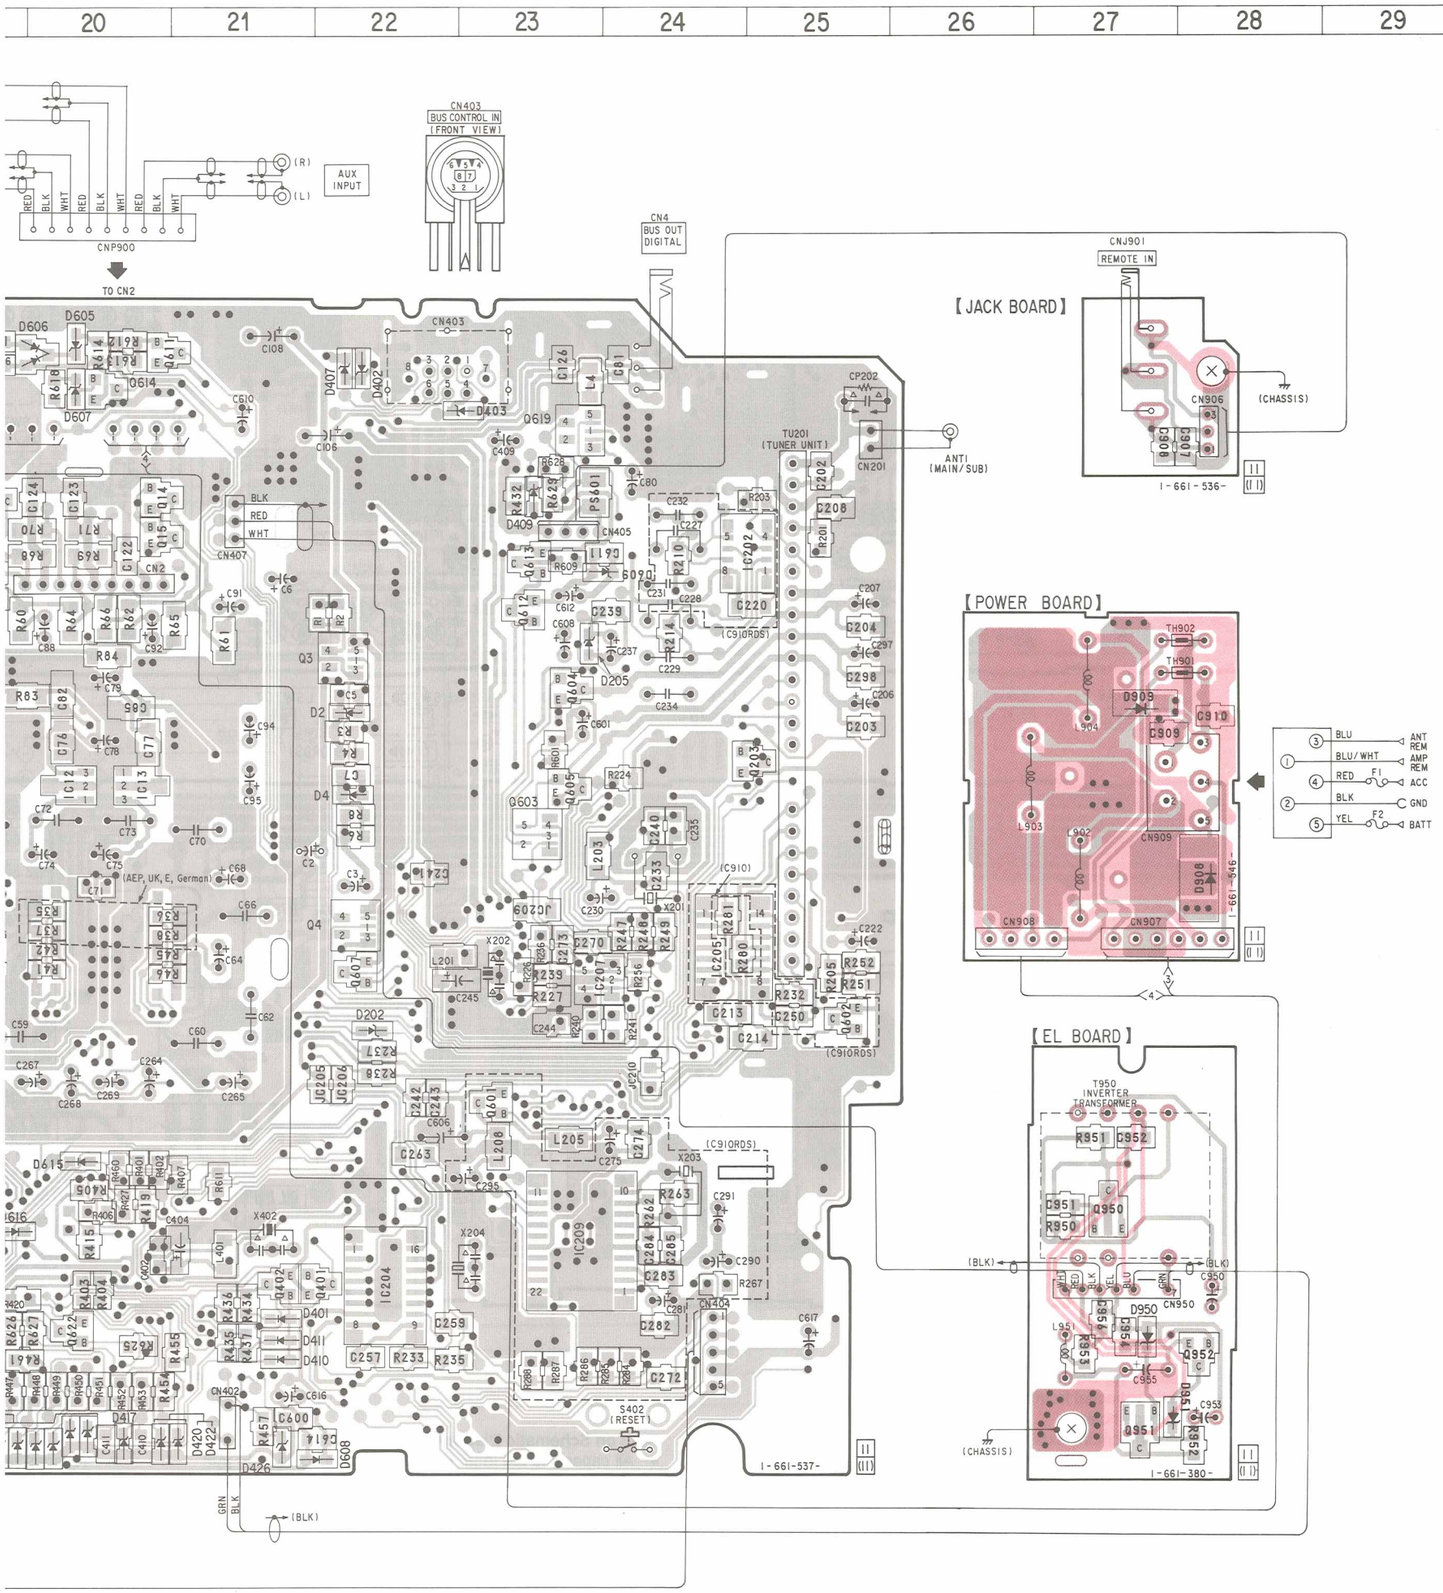

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	D-9	D906	H-3	Q18	D-11
D2	E-22	D907	H-5	Q19	D-11
D3	C-18	D908	F-28	Q20	C-18
D4	F-22	D909	E-27	Q21	F-9
D202	G-22	D920	D-2	Q202	D-7
D203	F-8	D950	J-27	Q203	F-25
D204	F-8	D951	J-27	Q204	F-8
D205	E-23			Q205	D-7
D207	G-7	IC1	I-14	Q207	H-12
D401	I-21	IC2	J-18	Q208	H-10
D402	C-22	IC3	I-16	Q209	H-10
D403	C-23	IC4	H-14	Q210	G-7
D404	C-8	IC5	H-13	Q401	I-22
D406	H-10	IC6	E-16	Q402	I-21
D407	C-22	IC7	F-14	Q403	D-8
D408	G-7	IC8	F-16	Q405	G-7
D409	D-23	IC9	F-13	Q407	H-10
D410	J-21	IC10	E-13	Q408	H-10
D411	J-21	IC11	G-11	Q601	H-23
D412	J-20	IC12	F-20	Q602	G-25
D413	J-20	IC13	F-20	Q603	F-23
D414	J-20	IC14	E-12	Q604	E-23
D416	J-20	IC15	E-11	Q605	F-23
D417	J-20	IC202	D-25	Q606	E-8
D419	J-19	IC203	F-7	Q607	G-22
D420	J-20	IC204	I-22	Q608	F-8
D421	J-19	IC205	G-24	Q609	D-9
D422	J-21	IC206	G-7	Q610	D-8
D423	J-19	IC207	G-23	Q611	C-20
D425	J-19	IC208	H-6	Q612	D-23
D426	J-21	IC209	I-23	Q613	D-23
D601	E-8	IC210	J-8	Q614	C-20
D602	E-8	IC211	I-8	Q615	D-8
D603	E-8	IC401	I-11	Q616	J-10
D604	G-13	IC402	C-9	Q617	F-8
D605	C-20	IC601	J-12	Q618	D-8
D606	C-20	IC901	E-2	Q619	C-23
D607	C-20			Q620	J-6
D608	J-22	Q1	E-9	Q621	J-19
D609	D-24	Q2	E-9	Q622	J-19
D611	E-8	Q3	E-22	Q623	D-8
D612	I-6	Q4	G-22	Q903	D-4
D613	I-6	Q5	D-16	Q904	C-4
D614	G-12	Q6	C-16	Q905	D-2
D615	H-20	Q12	D-19	Q906	H-3
D616	I-19	Q13	D-19	Q907	H-5
D902	D-4	Q14	D-20	Q920	D-4
D903	D-1	Q15	D-20	Q950	I-27
D904	E-2	Q16	D-12	Q951	J-27
D905	E-2	Q17	D-11	Q952	J-28

Note on Printed Wiring Board:

- ——○—— : parts extracted from the component side.
- ● : Through hole.
- △ : internal component.
- :Pattern of the rear side.
- :Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

5-6. PRINTED WIRING BOARD – KEY Section – • See page 21 for Circuit Boards Location.

• **Semiconductor Location**

Ref. No.	Location
D750	E-5
D770	F-9
D772	F-11
D774	F-4
IC701	E-8
IC702	E-6
IC703	A11
LED751	C-7
LED752	C-8
LED753	C-9
LED754	B-10
LED755	C-5
LED756	C-6
LED757	C-6
LED758	C-7
LED761	B-2
LED762	B-2
LED763	B-3
LED764	B-3
LED765	C-3
LED766	C-3
LED767	B-3
LED768	B-3
Q750	E-5
Q774	F-3
Q775	F-3

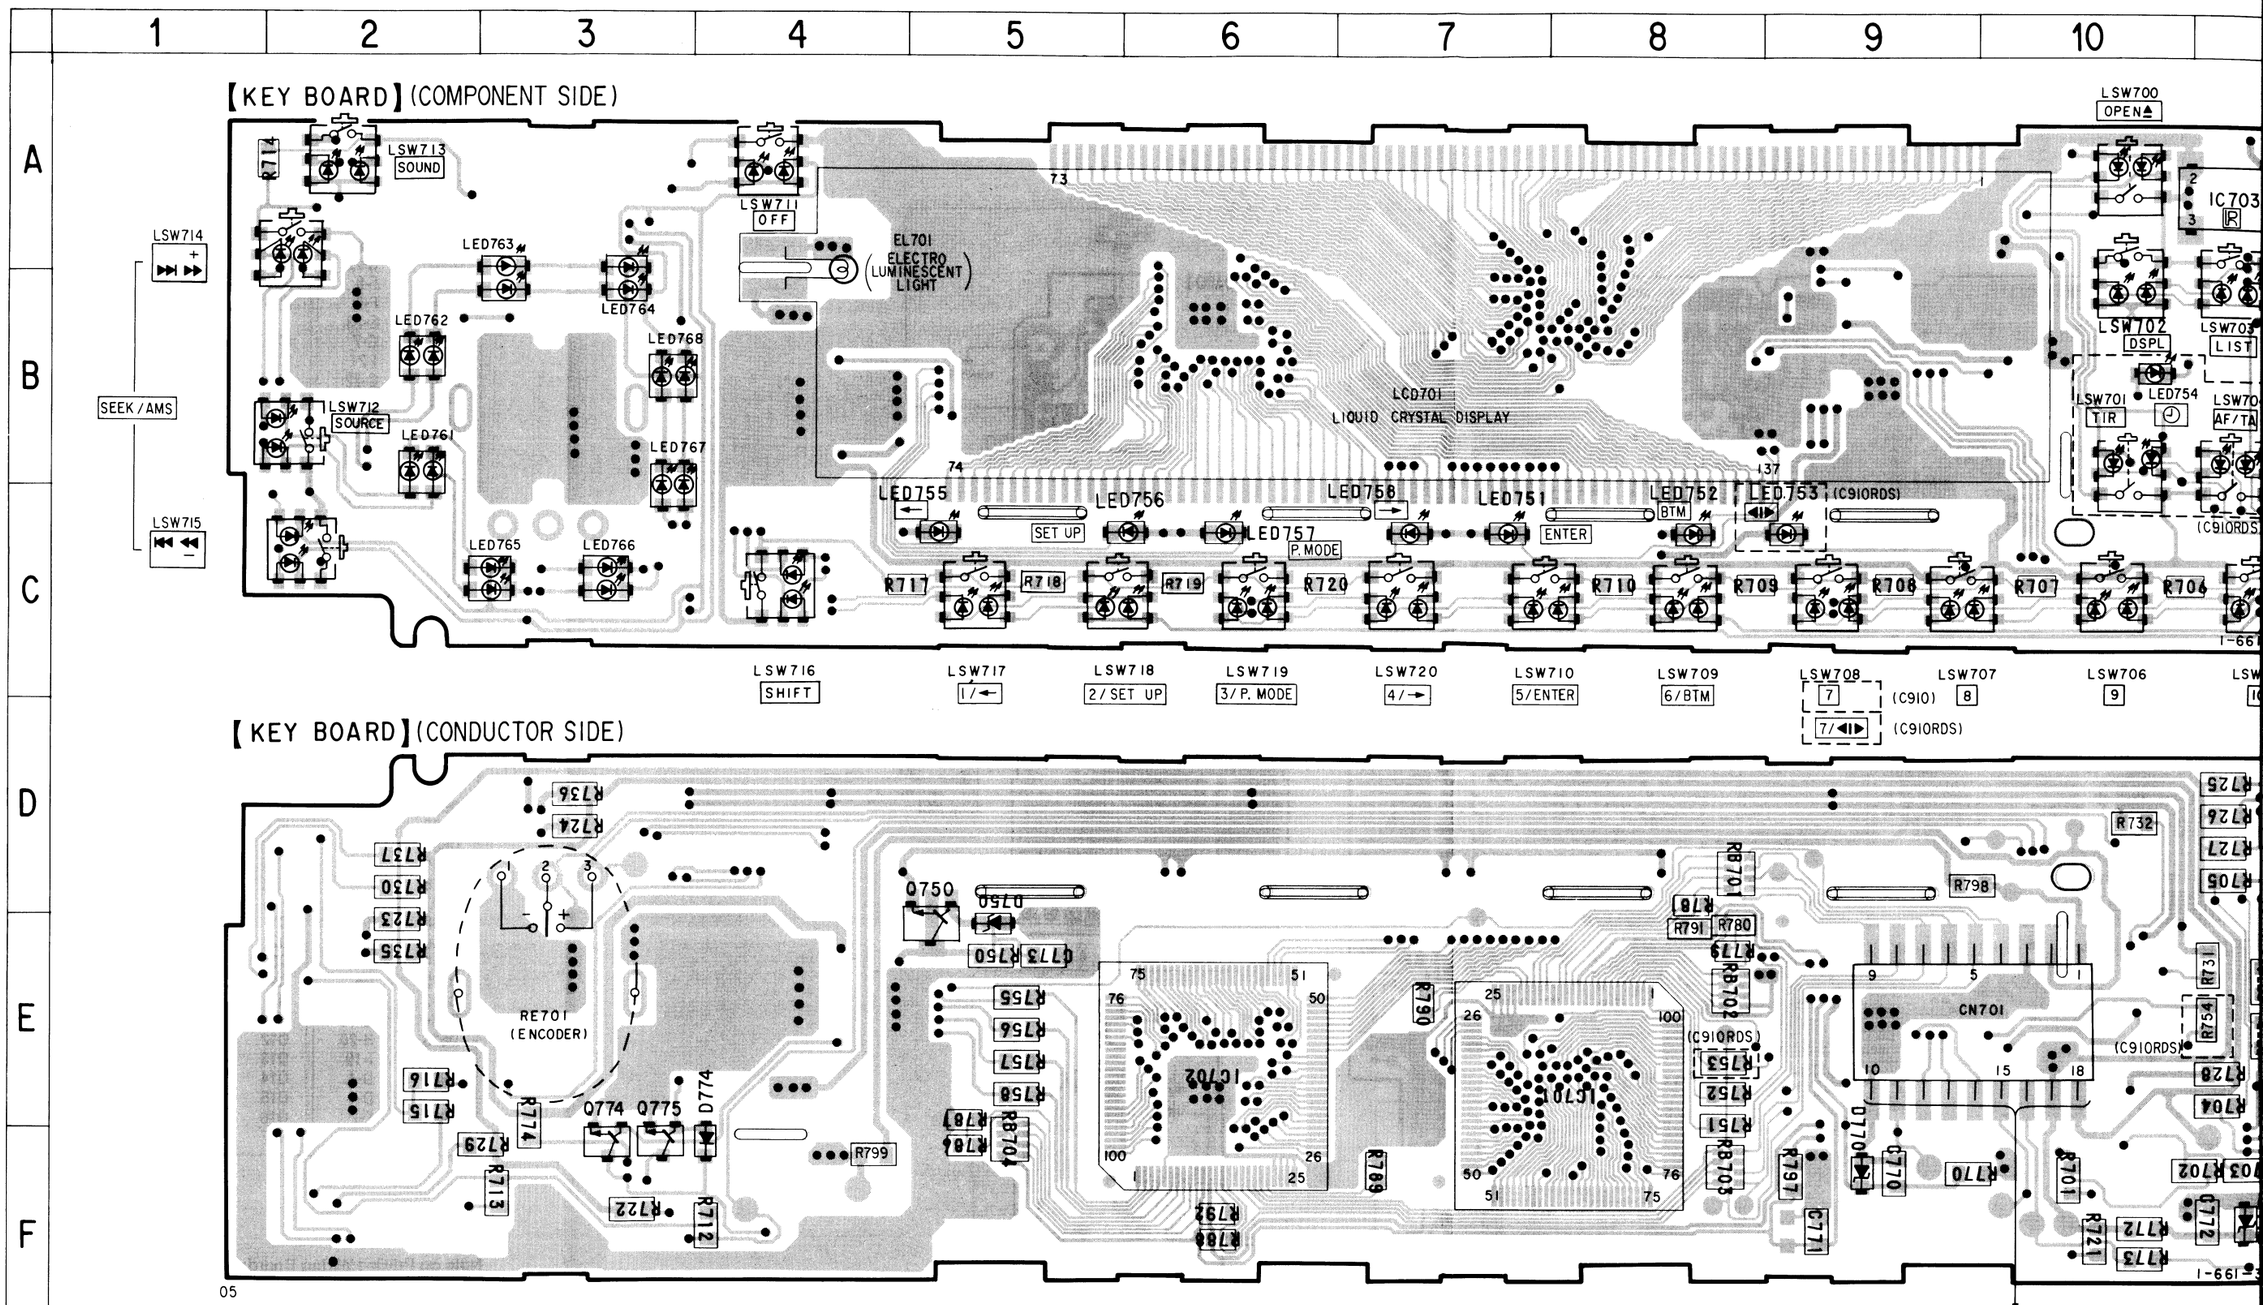

Note on Printed Wiring Board:

- ○—— : parts extracted from the component side.
- ● : Through hole.
- ▒ :Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

Note on Schematic Diagram:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line.
- ▭ : panel designation.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltages are (detuned) co no mark : FM
- Voltages are Voltage varia tolerances.

2	3	4	5	6	7	8	9	10	11

KEY BOARD】(COMPONENT SIDE)

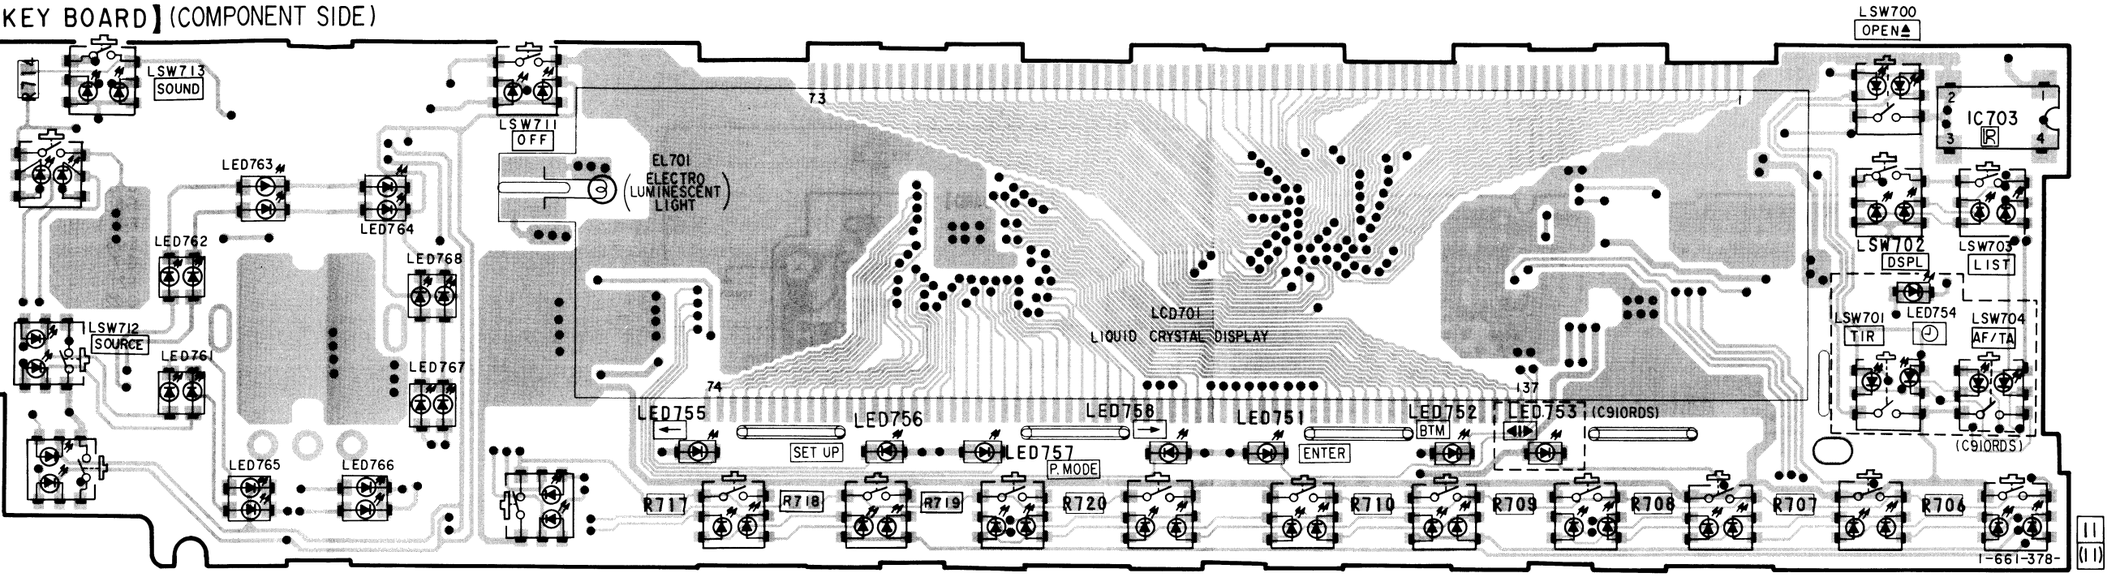

KEY BOARD】(CONDUCTOR SIDE)

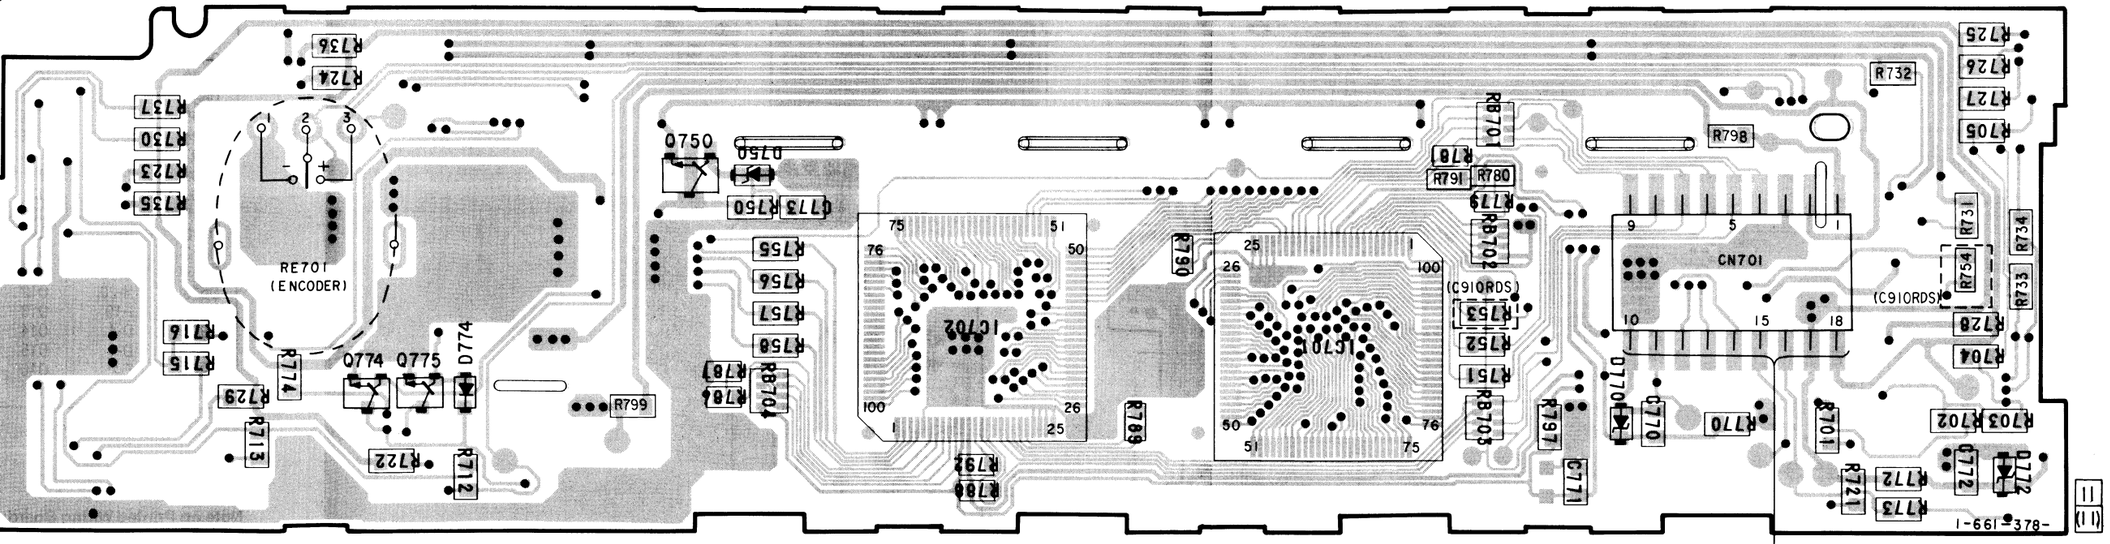

Ⓑ MAIN BOARD CN401 (Page 36)

Note on Printed Wiring Board:

- ○—— : parts extracted from the component side.
- ● : Through hole.
- ▒ :Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line.
- ▭ : panel designation.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltages are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.

5-7. SCHEMATIC DIAGRAM – KEY Section –

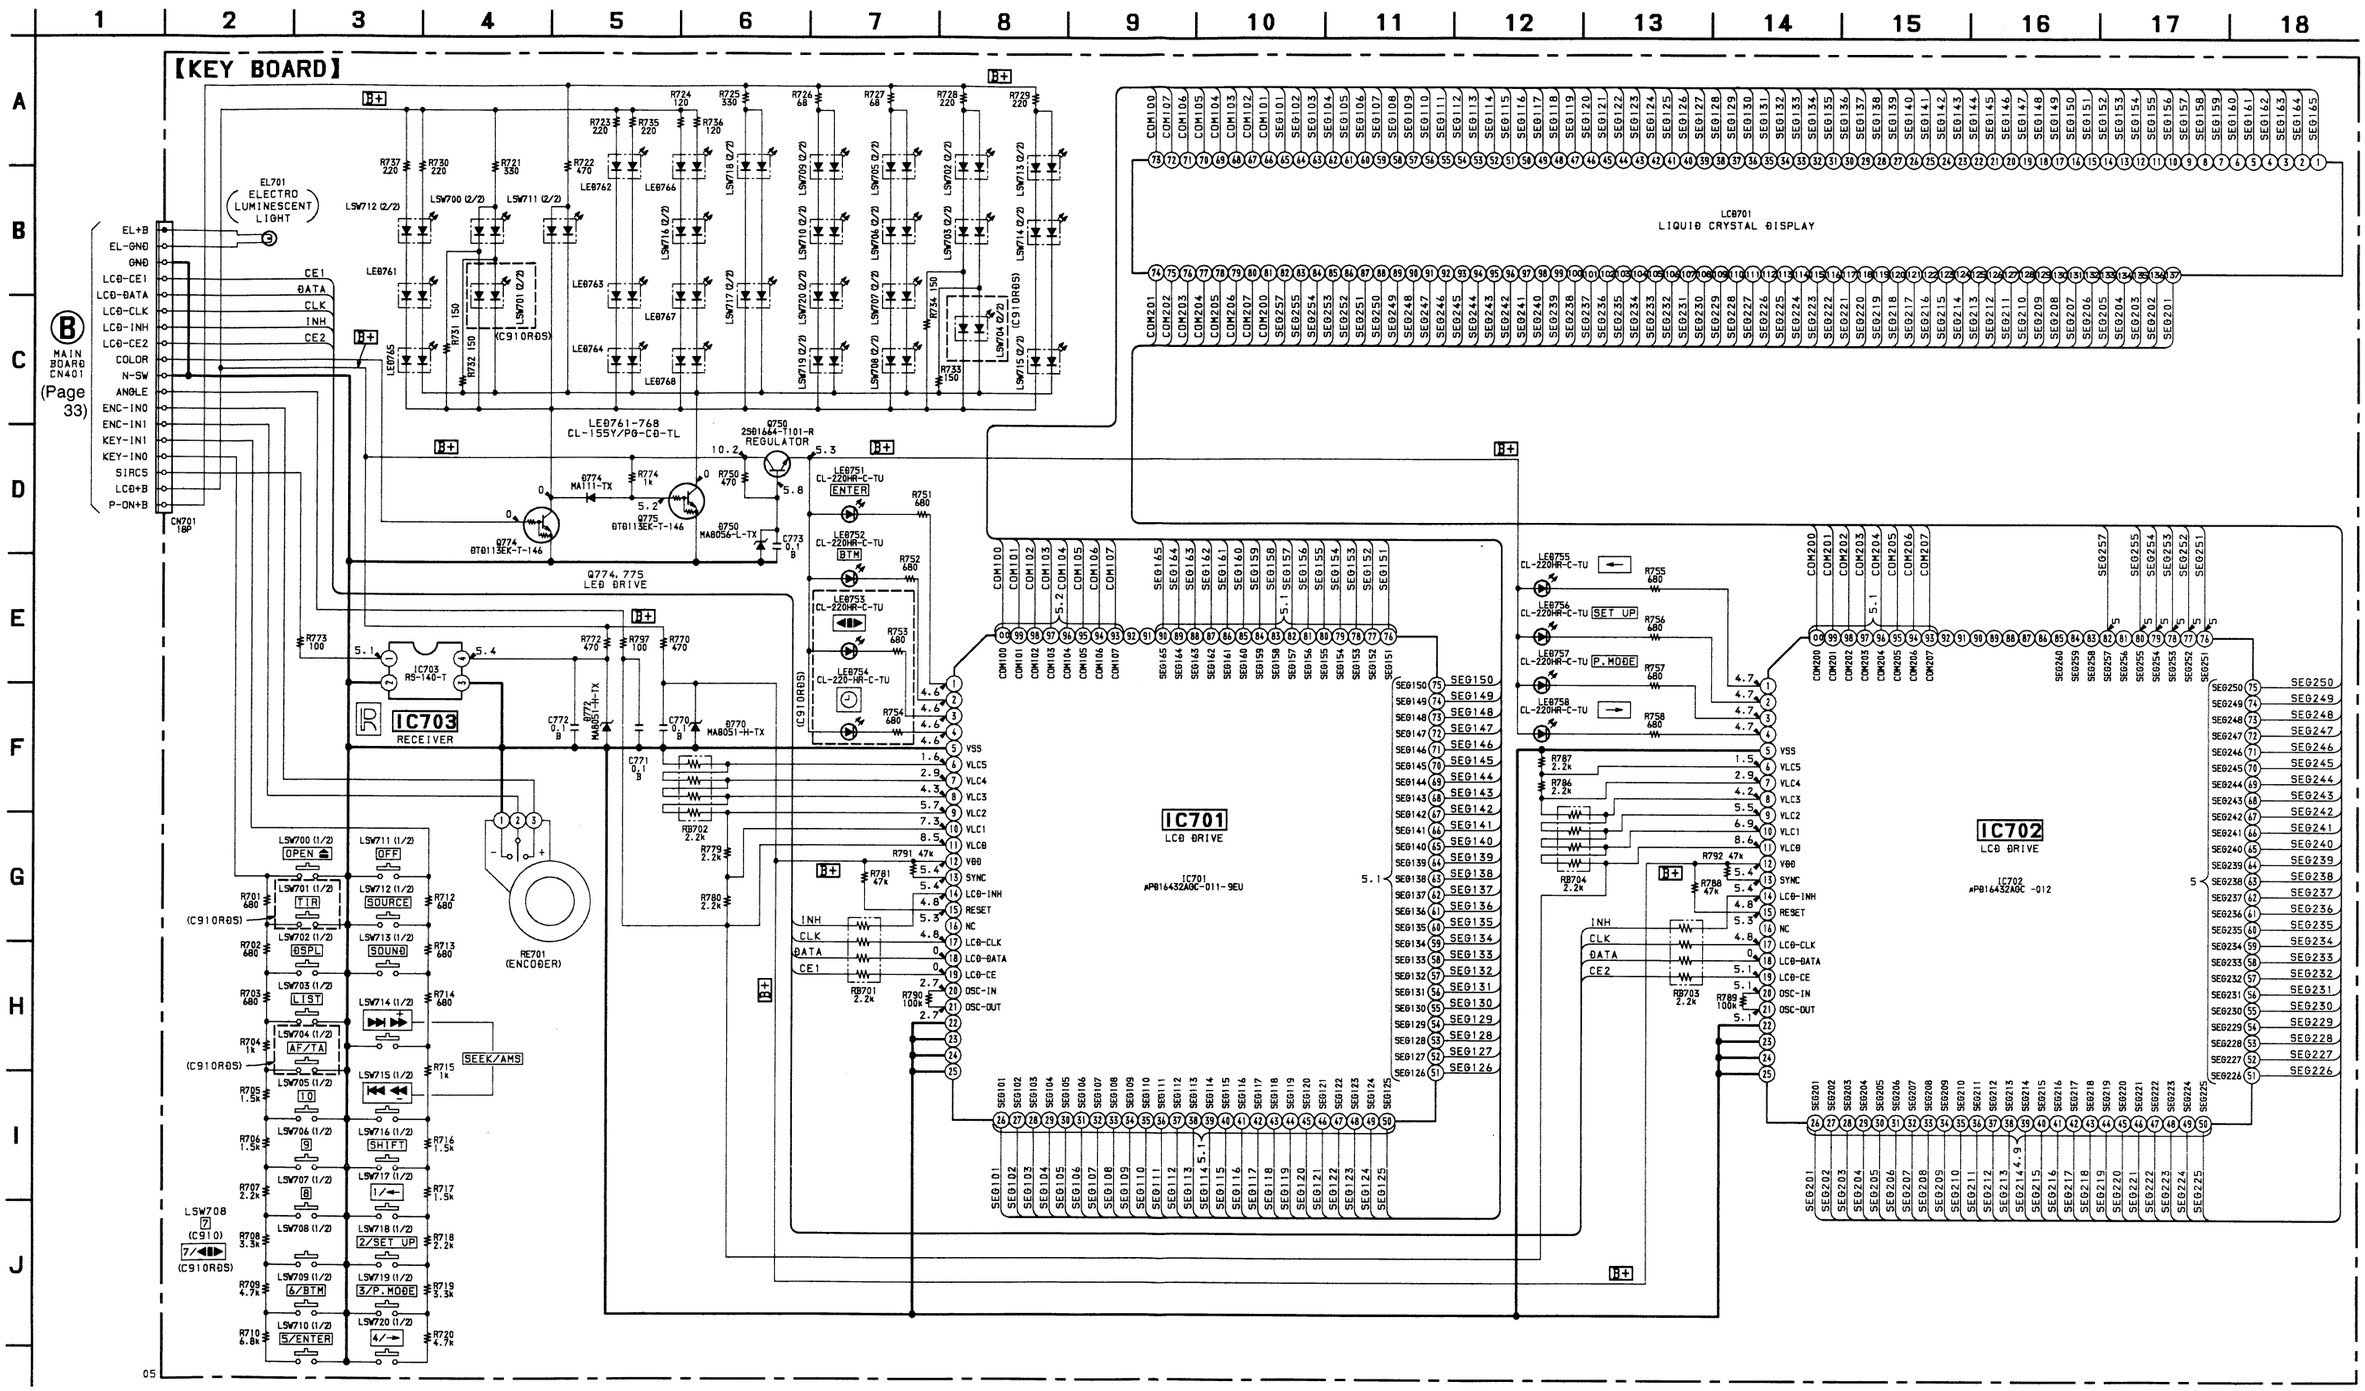

• IC Block Diagrams

IC1 SM5843AS1-E2 (MAIN BOARD)

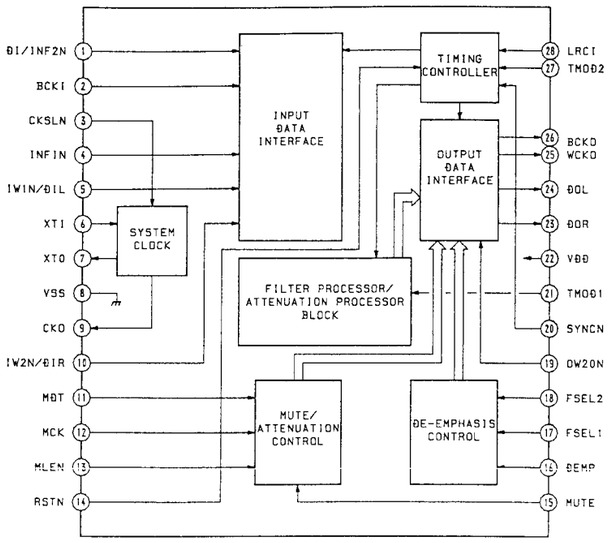

IC4, 5 PCM1702U-K-T1 (MAIN BOARD)

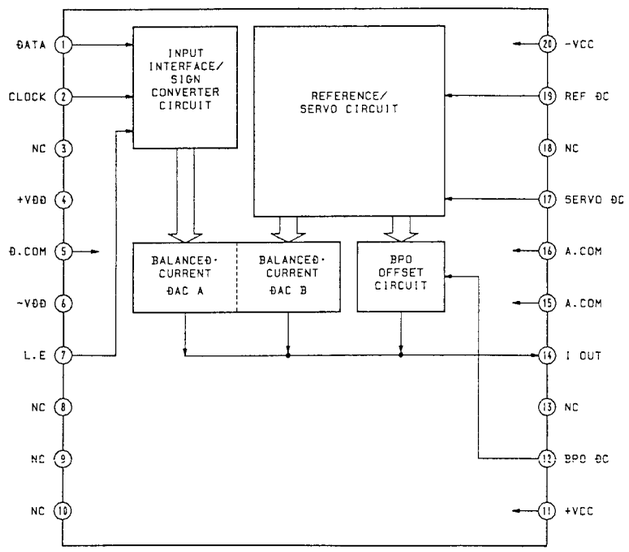

IC11 CXA1946Q (MAIN BOARD)

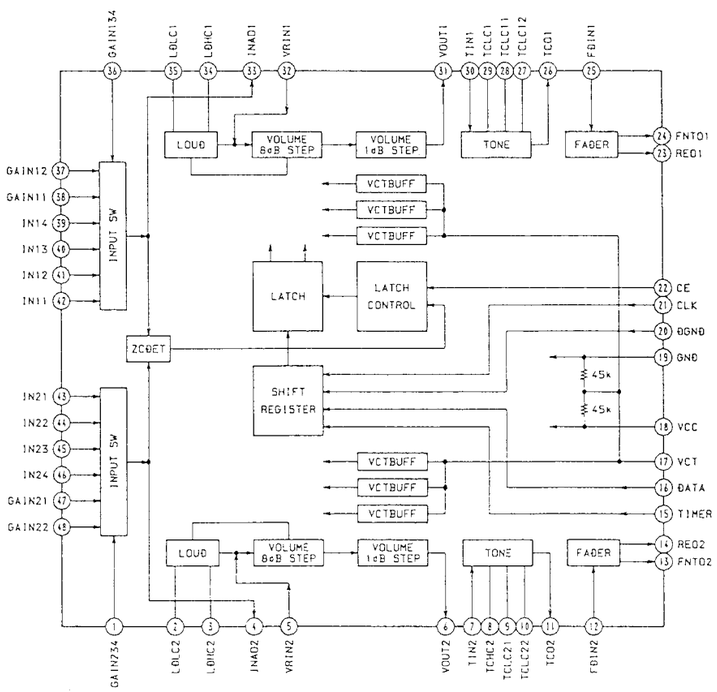

IC203 LC7216M (MAIN BOARD)

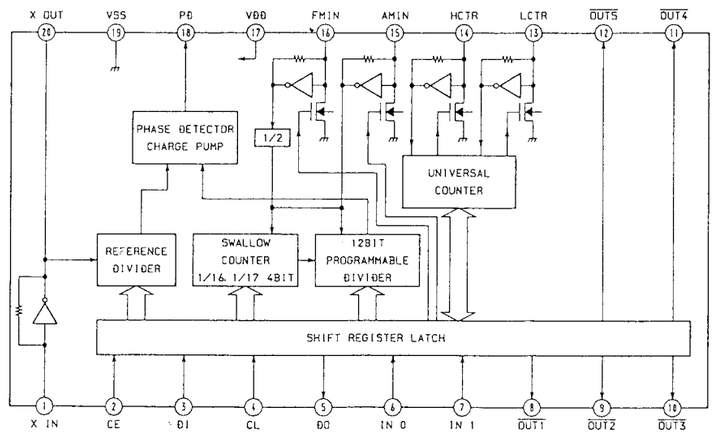

IC204 HA12181FP-EL (MAIN BOARD)

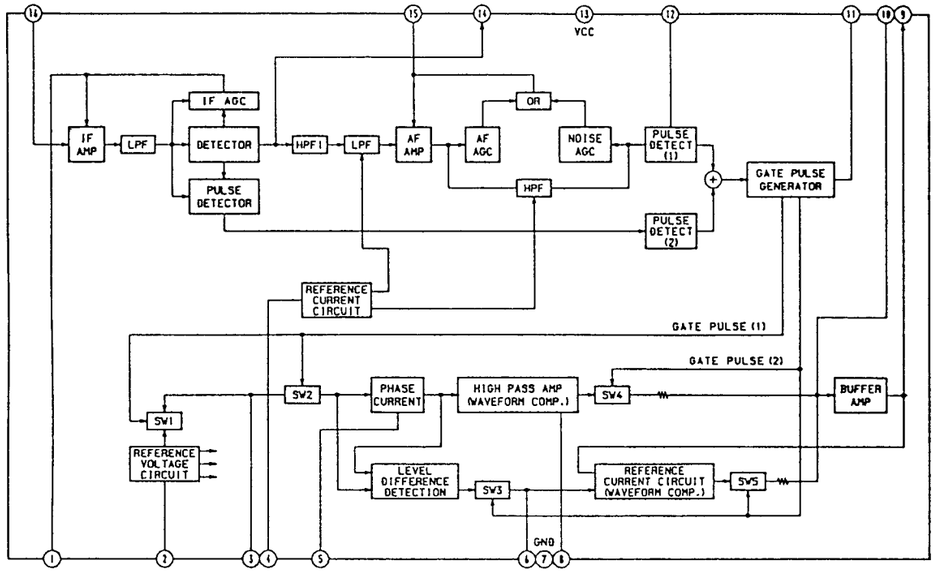

IC209 TDA7330BD-013TR (MAIN BOARD)

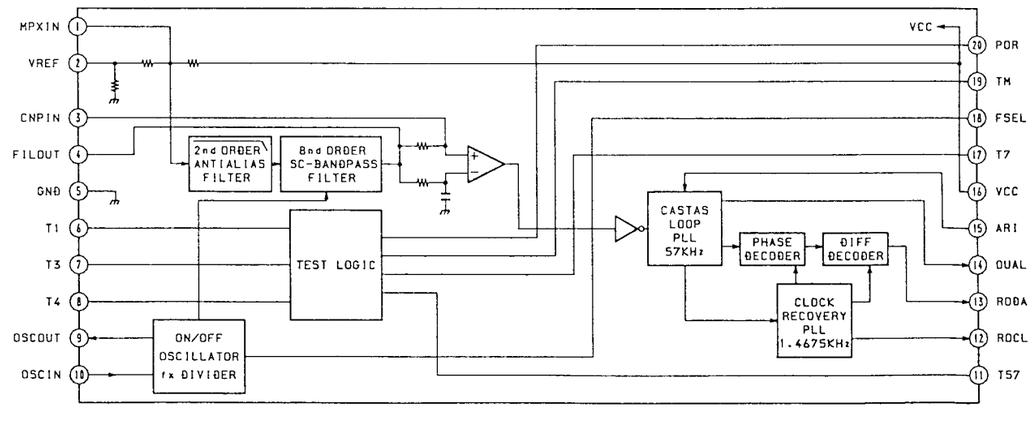

IC210 MSM

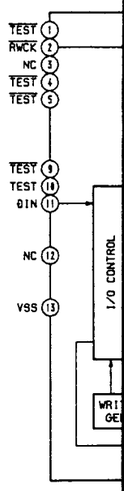

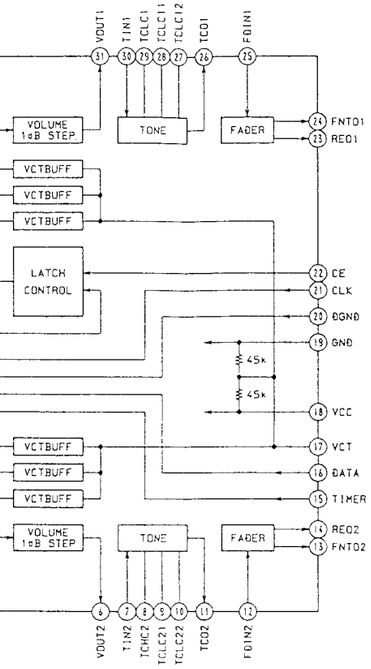

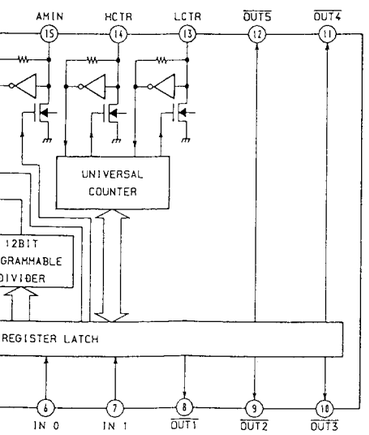

IC204 HA12181FP-EL (MAIN BOARD)

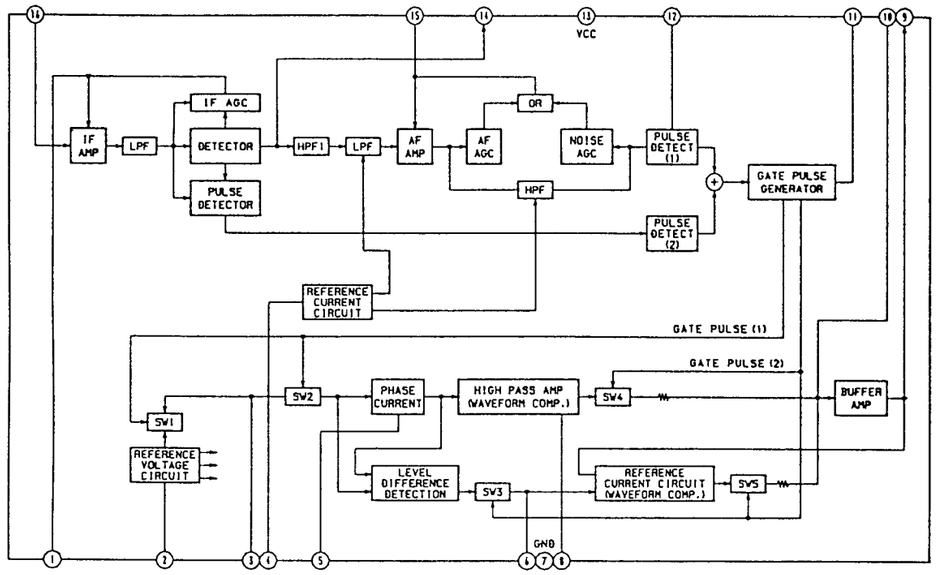

IC209 TDA7330BD-013TR (MAIN BOARD)

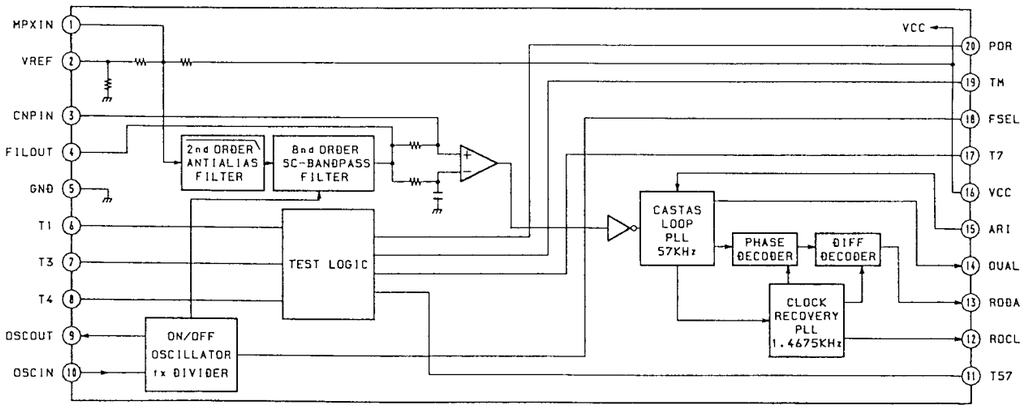

IC210 MSM6685JSDR1 (MAIN BOARD)

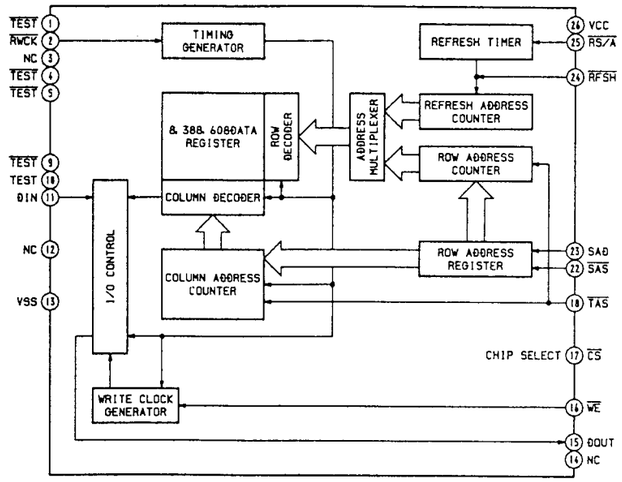

IC211 MSM6688GS-2K (MAIN BOARD)

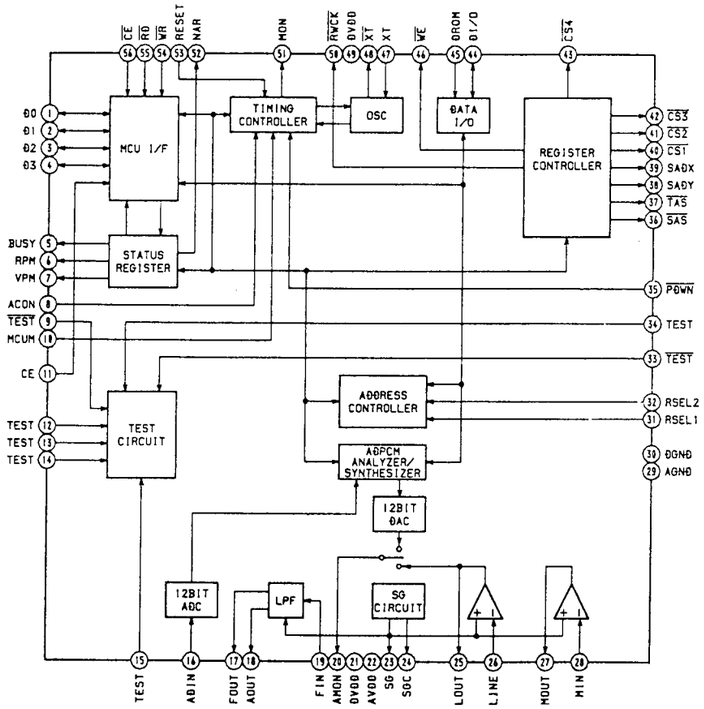

IC402 MM1175XFF (MAIN BOARD)

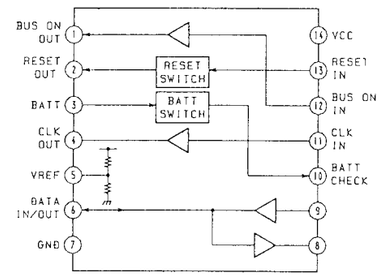

IC1 CXA1791N (SERVO BOARD)

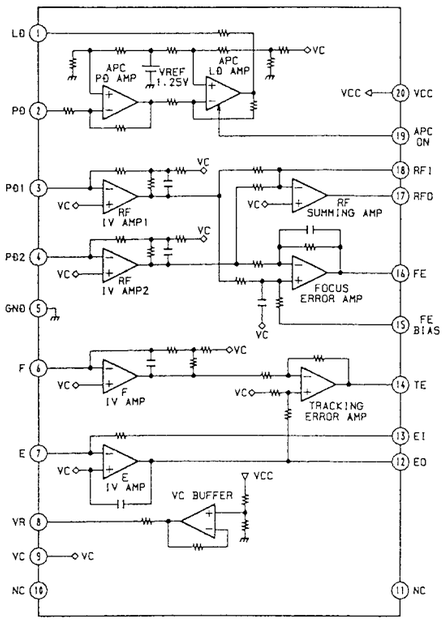

IC2 CXD2545Q (SERVO BOARD)

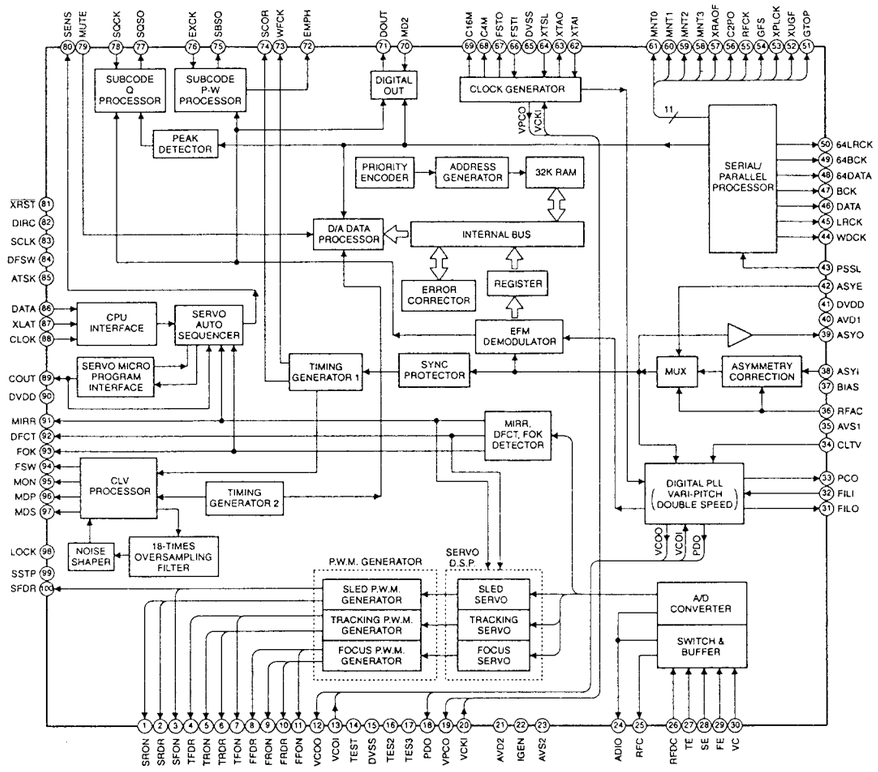

IC3 CXD2512AQ (SERVO BOARD)

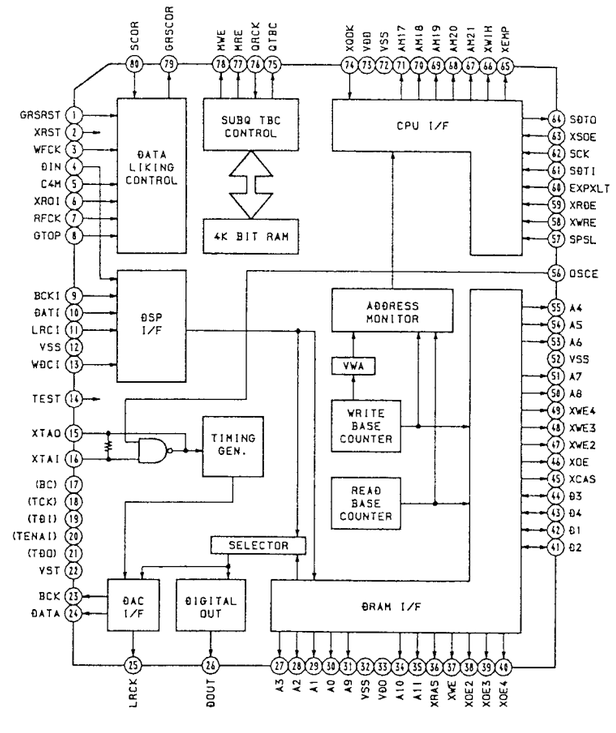

IC4 µPD424400GS-60-9JD (SERVO BOARD)

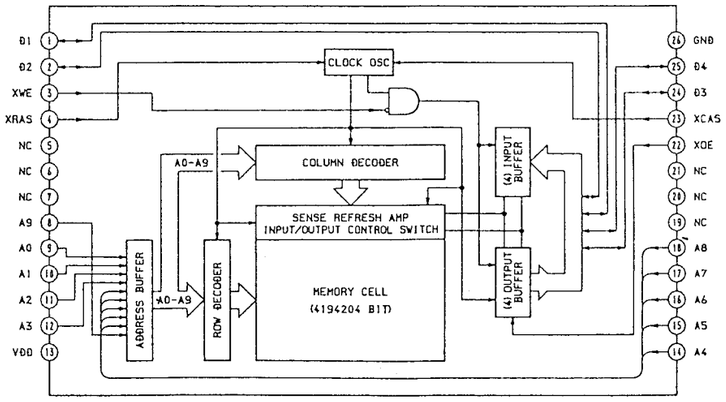

IC6 LB1638M (SERVO BOARD)

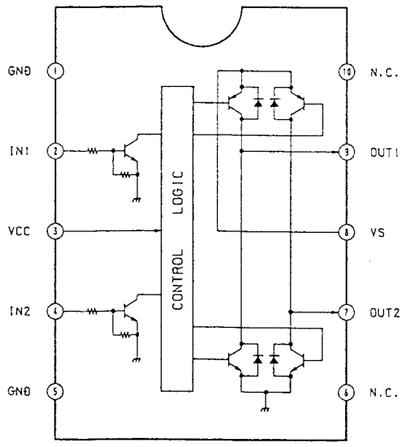

IC7 BA6797FP-E2 (SERVO BOARD)

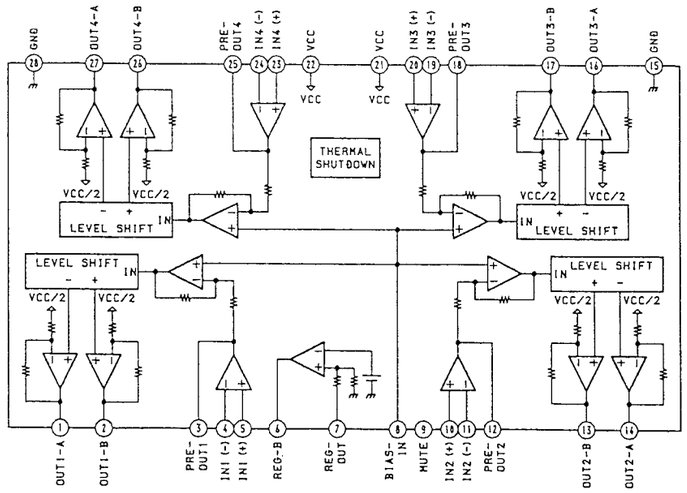

IC8 BA6840AFS-T1 (SERVO BOARD)

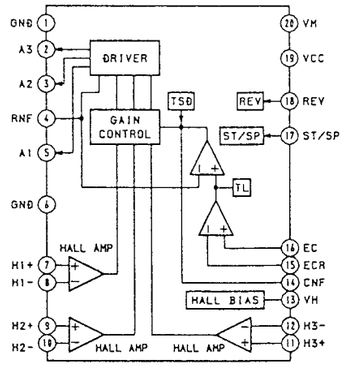

5-8. IC PI
SERVO BO

Pin No.	
1-5	
6	
7	
8	
9	
10	
11-13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27-29	
30	
31	
32	
33	
34	
35	
36	
37	
38	
39	
40-45	
46	
47	
48	
49	
50	
51	
52	
53	
54	
55	
56	
57	

5-8. IC PIN FUNCTION DESCRIPTION
SERVO BOARD IC5 CXP84332-031Q (MECHA CONTROL)

Pin No.	Pin Name	I/O	Function
1-5	NCO	O	Not used.
6	DOOR SW	I	Door switch input pin. (not used)
7	$\overline{\text{LOAD OK}}$	O	Loading OK signal output pin. (not used)
8	LINK OFF	O	Link off signal output pin. (not used)
9	DRV OE	O	Motor driver output enable signal output pin.
10	$\overline{\text{D SW}}$	I	Down switch input pin.
11-13	NCO	O	Not used.
14	LM EJ	O	Loading motor control pin. (eject detection)
15	LM LOD	O	Loading motor control pin. (loading detection)
16	EMPH O	O	De-emphasis control pin.
17	$\overline{\text{CDMON}}$	O	Mechanism deck section power supply control pin.
18	$\overline{\text{CDON}}$	O	CD servo circuit power supply control pin.
19	A MUT	O	Audio muting signal output pin.
20	$\overline{\text{LD ON}}$	O	Laser power on/off control pin.
21	$\overline{\text{CD RST}}$	O	CD reset signal output pin.
22	$\overline{\text{CDOSEL}}$	I	CD digital out function select pin.
23	ESPSEL	I	ESP function select pin. (not used)
24	FBTBSEL	I	CD automatic adjustment function select pin. (not used)
25	$\overline{\text{TSTIN1}}$	I	Test mode setting pin.
26	$\overline{\text{TSTIN0}}$	I	Test mode setting pin.
27-29	NCO	O	Not used.
30	$\overline{\text{RESET}}$	I	Reset input pin.
31	X IN	I	Main system clock. (10MHz)
32	$\overline{\text{X OUT}}$	O	Main system clock. (10MHz)
33	GND	–	GND.
34	$\overline{\text{XT OUT}}$	O	Sub system clock. (not used)
35	$\overline{\text{XT IN}}$	I	Sub system clock. (not used)
36	AVSS	O	GND for A/D converter.
37	AVREF	O	Power supply for A/D converter.
38	TEP L	I	Temperature value input pin. (A/D input) (not used)
39	TEP H	I	Temperature value input pin. (A/D input) (not used)
40-45	NCO	O	Not used.
46	GRSCOR	I	Start timing signal for frame writing from ESP.
47	SENSCKO	O	Sense serial data reading clock output pin.
48	UNICKI	I	Serial clock input pin. (for SONY BUS)
49	UNISI	I	Serial data input pin. (for SONY BUS)
50	UNISO	O	Serial data output pin. (for SONY BUS)
51	SQ CKO	O	Sub-code Q data reading clock output pin.
52	SQ SI	I	Sub-code Q data input pin.
53	NCO	O	Not used.
54	GFS	I	Frame sync lock state input pin.
55	F OK	I	Focus OK signal input pin.
56	SCOR	I	Sub-code sync detection signal input pin.
57	SENS	I	CD sense signal input pin.

Pin No.	Pin Name	I/O	Function
58,59	NCO	O	Not used.
60	$\overline{\text{BU IN}}$	I	BATT voltage detection pin.
61	$\overline{\text{BUSON}}$	I	BUS ON signal input pin. (for SONY BUS)
62	$\overline{\text{IN SW}}$	I	IN switch input pin.
63	$\overline{\text{SELF SW}}$	I	SELF switch input pin.
64	NCO	O	Not used.
65	CD CKO	O	CD serial clock output pin.
66	$\overline{\text{CD LAT}}$	O	CD latch signal output pin.
67	CD SO	O	CD serial data output pin.
68	ESPXWRE	O	DRAM write enable signal output pin.
69	ESPXRDE	O	DRAM read enable signal output pin.
70	$\overline{\text{ESPXLT}}$	O	DRAM control latch signal output pin.
71	$\overline{\text{ESPXSOE}}$	O	DRAM control serial data output enable signal output pin.
72	VDD	–	Power supply.
73	NIH	–	Not used.
74	$\overline{\text{GRSRST}}$	O	DRAM address reset signal output pin. "H" output on track jump.
75	ESPSDT	I	DRAM control status reading data input pin.
76	$\overline{\text{ESPXQOK}}$	O	Sub-code Q OK signal output pin.
77	ESPQTBC	I	Data reading pin for TRACK NO./INDEX/MIN/SCE display during ESP playback.
78	ESPQRCK	O	Data reading clock output pin for TRACK NO./INDEX/MIN/SCE display during ESP playback.
79	ESPMRE	I	Enable to data write for lapse of time display during ESP playback.
80	ESPMWE	I	Enable to data write for lapse of time display during ESP playback.

MAIN BOARD IC206 MN1883220S4B3 (TUNER CONTROL) (CDX-C910)
MAIN BOARD IC206 MN1883220S4C2 (TUNER CONTROL) (CDX-C910RDS)

Pin No.	Pin Name	I/O	Function
1	$\overline{RD}$	I	Read pulse input terminal of data (D0 to D3).
2	BUSY	I	BUSY output monitor terminal.
3	D3	I/O	Command input/output.
4	D2	I/O	Command input/output.
5	D1	I/O	Command input/output.
6	D0	I/O	Command input/output.
7	VDD	–	Power supply. (+5 V)
8	X1	O	System clock input. (8.0MHz)
9	X2	I	System clock output. (8.0MHz)
10	GND	–	GND.
11	XI	I	Connected to GND.
12	–	–	Not used. (open)
13	XO	O	Connected to GND.
14	RESET	I	Reset input.
15	RDS-CLK	I	RDS serial clock input pin.
16	BU-IN	I	BATT voltage detection pin.
17	BUSON	I	BUS ON control input pin.
18-29	–	–	Not used. (open)
30	RDS-DATA	I	RDS serial data input pin.
31	–	–	Connected to GND.
32-35	–	–	Not used. (open)
36	–	–	Connected to GND.
37	–	–	Connected to GND.
38	PLL-DI	I	PLL serial data input pin.
39	PLL-DO	O	PLL serial data output pin.
40	PLL-CLK	O	PLL serial clock output pin.
41	CE	O	PLL serial chip enable output pin.
42	RQ	O	Bus request signal output pin.
43	LINK-OFF	O	Link-off signal output pin. (for SONY BUS)
44	SCK	I	Serial clock input pin. (for SONY BUS)
45	SI	I	Serial data input pin. (for SONY BUS)
46	SO	O	Serial data output pin. (for SONY BUS)
47	VDD	–	Power supply. (+5V)
48	AVDD	–	Power supply for A/D converter. (+5V)
49	VREF	–	Reference power supply. (+5V)
50, 51	–	–	Connect to GND.
52	SRAM-RST	I	SRAM reset signal input pin.
53	MUTE-SEL	I	Muting select signal input pin. (Not used)
54	MS-1	I	Destination setting pin.
55	MS-2	I	Destination setting pin.
56	AM-S.METER	I	AM signal meter voltage detection pin.
57	FM-S.METER	I	FM signal meter voltage detection pin.
58	–	–	Connected to GND.

Pin No.	Pin Name	I/O	Function
59	–	–	Connected to GND.
60	–	–	Connected to GND.
61	TU-ON	O	Tuner system power supply control pin. (Not used)
62	–	–	Not used. (Open)
63	$\overline{\text{SEEK.OUT}}$	O	Seek signal output pin.
64	AM.ON	O	AM power supply control pin.
65	FM.ON	O	FM power supply control pin.
66	TUNER-MUTE	O	Tuner muting signal output pin.
67	AF-SEEK	O	AF seek signal output pin.
68	–	–	Not used. (Open)
69	–	–	Not used. (Open)
70	ST-IN/MONO	I	Stereo detection signal inputpin.
71	SD-IN	I	Station detection signal input pin.
72-75	–	–	Not used. (open)
76	PDWN	O	Power down terminal.
77	TIM.RESET	O	Reset/power down terminal.
78	TIM.CE	O	Data permission/prohibition setting through D0 to D3. "H": permission.
79	$\overline{\text{TIM.CE}}$	O	Data permission/prohibition setting through D0 to D3. "L": permission.
80	$\overline{\text{WR}}$	I	Write pulse input terminal of data (D0 to D3).

MAIN BORD IC401 μPD78058GC-231-3B9 (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Function
1	RE-1	I	Rotary encoder (volume) input.
2	P-MOT+	O	Front panel OPEN/CLOSE motor control signal output
3	P-MOT-	O	
4	AVSS	-	GND for A/D converter.
5	LCDANG	O	LCD Angle adjustment pin.
6	CLOSE ENG	I	Front panel position detect input.
7	AVREF	-	Reference power supply for A/D converter.
8	10 DEG	I	Front panel position detect input
9	20 DEG	I	
10	COLOR	I/O	Illumination color select control pin.
11	LCDCE2	O	LCD serial chip enable output pin.
12	LCDDATA	O	LCD serial data output pin.
13	LCDCLK	O	LCD serial clock output pin.
14	LCDCE1	O	LCD serial chip enable output pin.
15	LCDINH	O	LCD serial INH output pin.
16	UNISI	I	Serial data input pin. (for SONY BUS)
17	UNISO	O	Serial data output pin. (for SONY BUS)
18	UNICKI	I	Serial clock input pin. (for SONY BUS)
19	UNICKO	O	Serial clock output pin. (for SONY BUS)
20	$\overline{\text{BUSON}}$	O	BUS ON control output. (for SONY BUS)
21	NCO	-	Not used. (open)
22	NCO	-	Not used. (open)
23	FP OPEN	O	Disc eject OK signal output.
24	TIR ON	O	Traffic information recording indicator output.
25	NCO	-	Not used. (open)
26	NCO	-	Not used. (open)
27	$\overline{\text{NOSESW}}$	I	Front panel removal or attaching detection pin.
28	$\overline{\text{SYSRST}}$	O	System reset output pin. (for SONY BUS)
29	VOLSO	O	Electronic volume serial data output pin.
30	VOLCKO	O	Electronic volume serial clock output pin.
31	VOLCE	O	Electronic volume serial chip enable output pin.
32	PW SEL	I	Power select setting pin.
33	GND	-	GND
34	OPEN END	I	Front panel position detect input.
35	$\overline{\text{ILL IN}}$	I	ILL lead input for AUDIO DIMMER.
36	NIL	-	Connected to GND.
37	NIL	-	Connected to GND.
38	NIL	-	Connected to GND.
39	NIL	-	Connected to GND.
40	NIL	-	Connected to GND.

	OFF	OPEN	CLOSE	BRAKE
FP OPEN	L	H	L	H
FP CLS	L	L	H	H

	SW0	SW1	SW2	SW3
Close	L	H	L	L

	SW0	SW1	SW2	SW3
10°	L	L	H	L
20°	L	L	H	H

	SW0	SW1	SW2	SW3
Open	H	L	H	H

Pin No.	Pin Name	I/O	Function
41	NIL	–	Connected to GND.
42	NIL	–	Connected to GND.
43-45	NIL	–	Connected to GND.
46	BEEP	O	Beep sound output pin.
47-49	NIL	–	Connected to GND.
50	NIL	–	Connected to GND.
51	NIL	–	Connected to GND.
52	EL DIMMER	O	DIMMER control signal output "H": DIMMER on.
53	A MUT	O	Audio mute control pin.
54	CAUTION	I	CAUTION alarm function setting.
55	CLOSE OK	I	Front panel CLOSE OK signal input.
56	PW ON	O	System power supply control signal output.
57	ILLON	O	Illumination power supply control signal output.
58	EL ON	O	EL power supply control signal output.
59	$\overline{\text{TEST}}$	I	TEST mode direct setting pin "L" TEST mode
60	$\overline{\text{RESET}}$	I	Reset input pin. "L": Reset
61	$\overline{\text{SIRCS}}$	I	Remote control signal input pin.
62	BU-IN	I	BATT voltage detect pin.
63	KEYACK	I	Key input acknowledge.
64	$\overline{\text{AD ON}}$	O	Power supply control pin for A/D converter.
65	D OUT	I	Digital output ON/OFF input.
66	$\overline{\text{ACC IN}}$	I	ACC voltage detect pin "L": ACC on.
67	TIMPOL	I	Connected to GND.
68	VDD	–	Power supply.
69	X OUT	O	Main system clock. (5.0MHz)
70	X IN	I	Main system clock. (5.0MHz)
71	GND	–	GND.
72	XT OUT	O	Sub system clock. (32.768kHz)
73	XT IN	I	Sub system clock. (32.768kHz)
74	AVDD	–	Power supply for A/D converter.
75	AVREF	–	Reference of power suplly for A/D converter.
76	KEYIN0	I	Key input. (A/D input)
77	KEYIN1	I	Key input. (A/D input)
78	RC-IN0	I	Rotary commander shift key input.
79	RC-IN1	I	Rotary commander shift key input.
80	RE-0	I	Rotary encoder (volume) input.

SECTION 6
EXPLODED VIEWS

NOTE:
- -XX and -X mean standardized parts, so they may have some diffrebce from the orginal one.
- Color Indication of Appearance Parts Example:

  KNOB, BALANCE (WHITE) . . . (RED)

  ↑ ↑

  Parts Color Cabinet's Color
- Abbreviation

  G: German
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of the electrcal parts list.

The components identified by mark ⚠or dotted line with mark ⚠are critical for safety.
Replace only wiyh part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le neméro spécifié.

(1) GENERAL SECTION-1

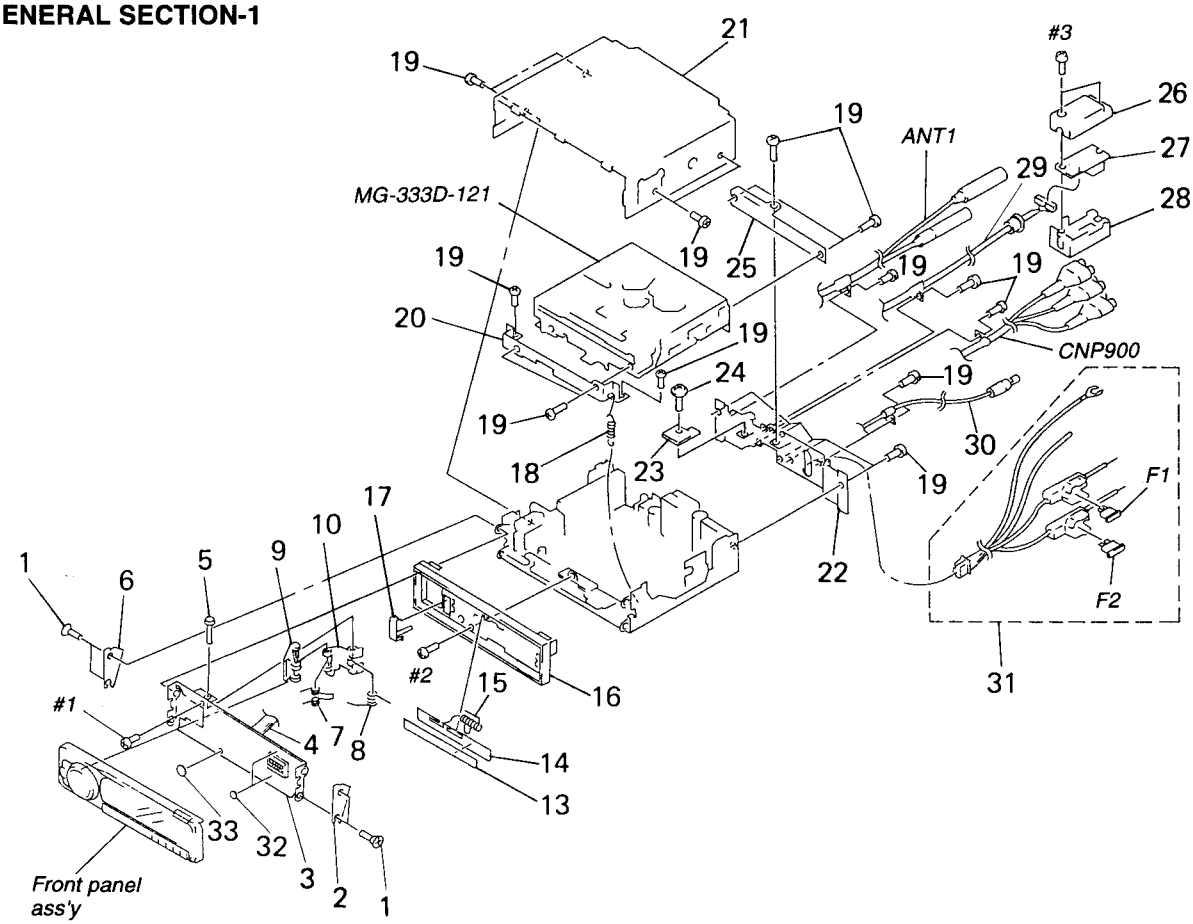

Ref. No.	Part No.	Description	Remark
1	3-934-764-01	SCREW, ORNAMENTAL	
2	3-934-762-01	COVER (L)	
3	3-934-769-11	PANEL (BASE)	
4	1-661-796-11	FLEXIBLE BOARD	
5	3-934-755-01	SHAFT (LOCK)	
6	3-934-763-01	COVER (R)	
7	3-934-765-01	SPRING (B)	
8	3-934-758-01	SPRING (A)	
9	3-934-756-01	ARM (LOCK)	
10	3-934-757-01	HOLDER (LOCK)	
13	3-934-385-01	SHEET (PROTECTION PLATE)	
14	3-934-379-01	PLATE, PROTECTION	
15	3-939-142-01	SPRING, TORSION	
16	X-3372-238-1	PANEL SUB ASSY, SUB	
17	3-934-751-01	BUTTON (RESET)	
18	3-938-777-01	SPRING, TENSION (ARM)	
19	3-905-560-01	SCREW (2.6X6) (CU), +PTT	
* 20	3-934-381-01	BRACKET (MD-F)	

Ref. No.	Part No.	Description	Remark
* 21	3-934-759-11	COVER, CHASSIS	
* 22	3-934-387-01	SINK, HEAT	
* 23	1-661-536-11	JACK BOARD	
24	3-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT	
* 25	3-934-382-01	BRACKET (MD-R)	
* 26	3-934-416-01	CASE (UPPER)	
* 27	1-661-551-11	EL BOARD	
* 28	3-934-417-01	CASE (LOWER)	
29	1-777-180-21	CORD (WITH CONNECTOR) (EL)	
30	1-777-397-11	CORD, ILLUMI	
31	1-777-247-21	CORD, POWER	
32	3-938-379-01	CUSHION (BASE)	
33	3-938-348-11	SHEET (TIR) (C910)	
ANT1	1-777-246-11	CORD (WITH CONNECTOR) (ANT) (MAIN/SUB)	
CNP900	1-696-624-41	CORD (WITH CONNECTOR) (AUDIO) (LINE OUTPUT/AUX INPUT)	
F1	1-532-731-11	FUSE (BRADE TYPE) (AUTO FUSE) (3A)	
F2	1-532-731-11	FUSE (BRADE TYPE) (AUTO FUSE) (3A)	

(2) GENERAL SECTION-2

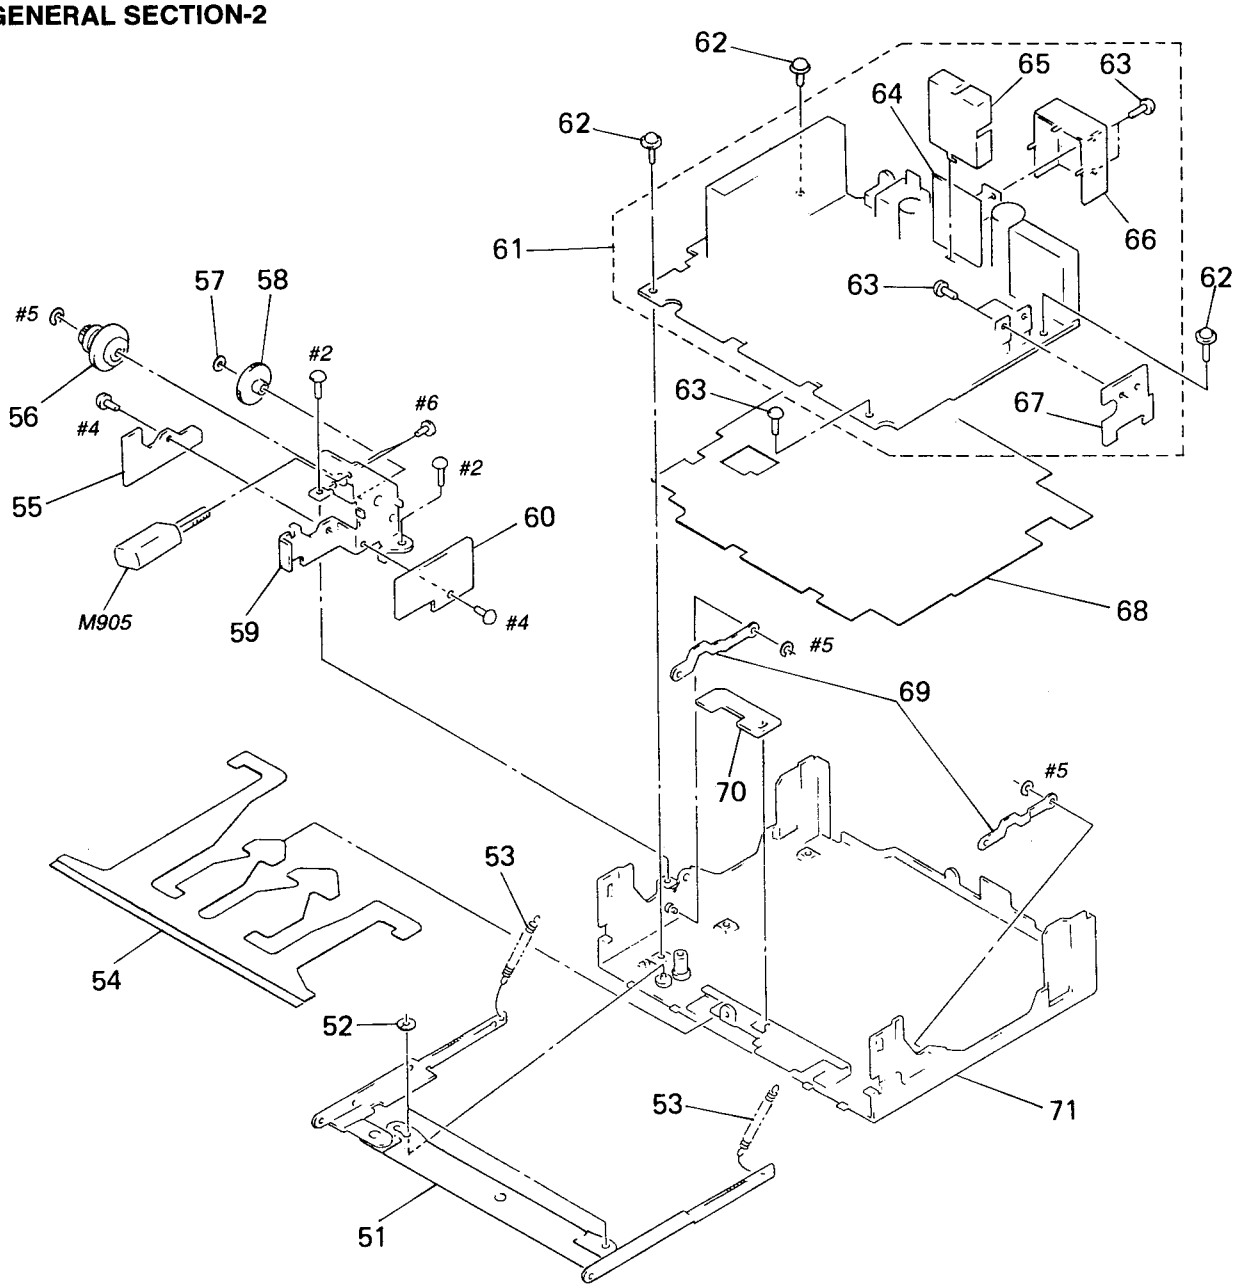

Ref. No.	Part No.	Description	Remark
51	X-3371-959-1	ARM ASSY, SLIDE	
52	3-899-829-01	WASHER (SLIT)	
53	3-938-776-01	SPRING, TENSION (SLIDE)	
54	3-936-376-01	SHEET, PROTECTION	
* 55	1-661-538-11	POSITION BOARD	
56	X-3371-964-1	CLUTCH ASSY	
57	3-321-813-01	WASHER, COTTER POLYETHYLENE	
58	3-934-749-01	GEAR (2)	
* 59	X-3371-963-1	BRACKET (MOTOR) ASSY	
* 60	1-661-539-11	MOTOR BOARD	
* 61	A-3294-081-A	MAIN BOARD, COMPLETE (C910)	
* 61	A-3309-378-A	MAIN BOARD, COMPLETE (C910RDS:AEP, UK)	

Ref. No.	Part No.	Description	Remark
* 61	A-3309-386-A	MAIN BOARD, COMPLETE (C910RDS:G)	
62	3-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT	
63	3-905-560-01	SCREW (2.6X6) (CU), +PTT	
* 64	1-661-546-11	POWER BOARD	
* 65	3-934-509-01	CASE (COIL 2)	
* 66	3-934-508-01	CASE (COIL 1)	
* 67	3-934-510-01	BRACKET (POWER)	
* 68	3-934-388-01	SHEET, INSULATING	
* 69	3-934-732-01	ARM	
* 70	1-661-535-11	LAMP BOARD	
* 71	X-3371-929-1	CHASSIS SUB ASSY	
M905	X-3372-497-1	MOTOR ASSY (OPEN/CLOSE)	

(3) FRONT PANEL SECTION

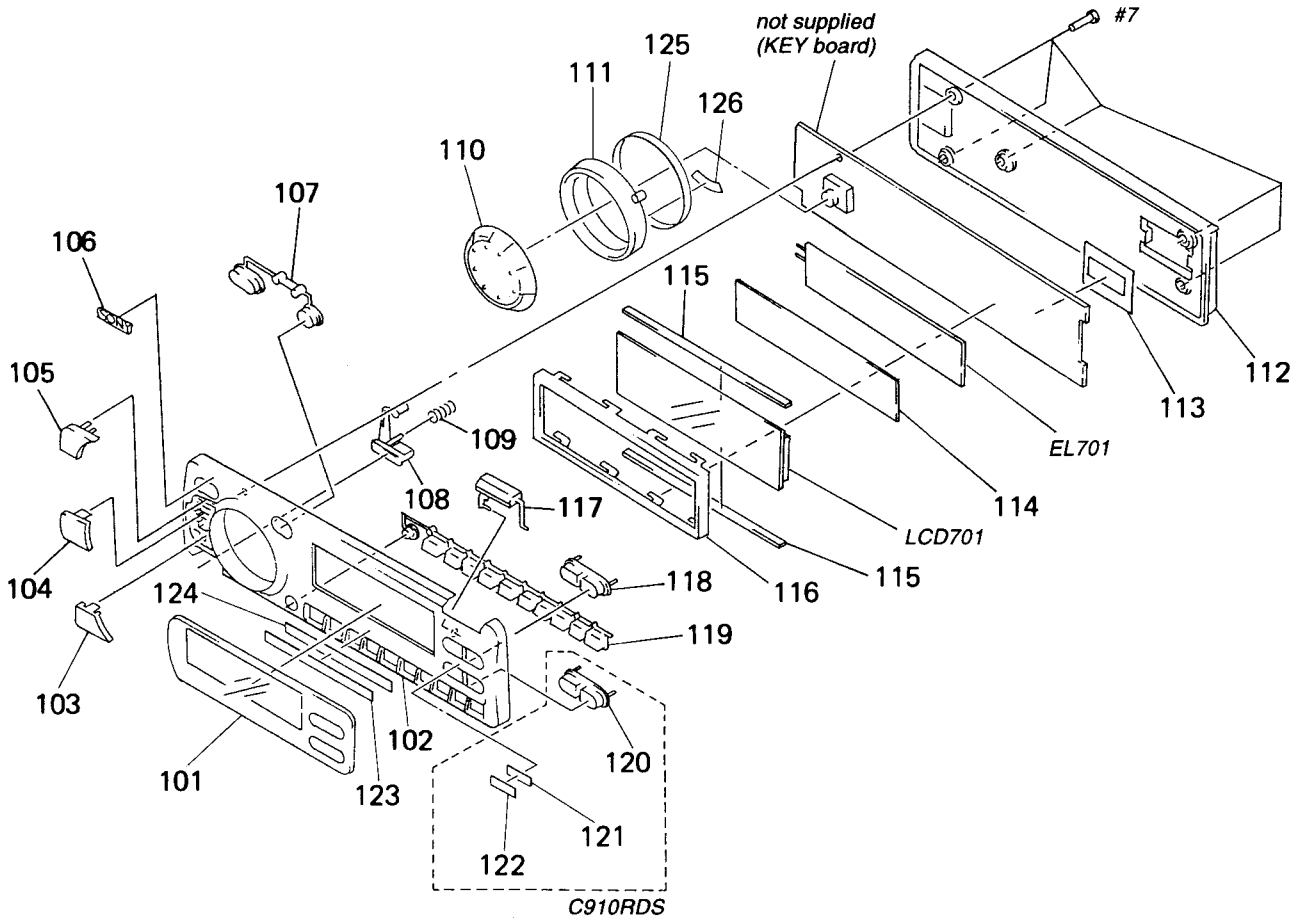

Ref. No.	Part No.	Description	Remark
101	X-3372-439-2	PLATE ASSY, INDICATION (C910:US)	
101	X-3372-440-2	PLATE ASSY, INDICATION (C910RDS)	
101	X-3372-441-2	PLATE ASSY, INDICATION (C910:Canadian, E)	
102	3-934-403-21	PANEL, FRONT (C910)	
102	3-934-403-31	PANEL, FRONT (C910RDS)	
103	3-934-407-01	BUTTON (FF) (⏮, ◀◀, -)	
104	3-934-408-01	BUTTON (SOURCE)	
105	3-934-409-01	BUTTON (REW) (+, ⏭, ▶▶)	
106	3-904-194-01	EMBLEM (NO. 2.5), SONY	
107	3-934-398-01	BUTTON (OFF) (SOUND)	
108	3-934-410-01	BUTTON (RELEASE)	
109	3-934-415-01	SPRING (RELEASE)	
110	3-934-401-01	KNOB (VOL)	
111	3-934-394-01	RING, VOL	
112	3-934-404-01	PANEL, FRONT BACK	
113	3-938-230-01	SHEET (BLIND)	

Ref. No.	Part No.	Description	Remark
* 114	3-934-395-01	ILLUMINATOR (LCD)	
115	1-778-197-11	CONNECTOR, INTER	
116	3-934-412-01	PLATE (LCD), GROUND	
117	3-934-406-01	BUTTON (OPEN) (⏏)	
118	3-934-399-01	BUTTON (DSPL) (LIST)	
119	3-934-405-01	BUTTON (1-10) (1. 2. 3. 4. 5. 6. 7. 8. 9. 10. ●)	
120	3-934-400-01	BUTTON (TIR) (AF/TA) (C910RDS)	
121	3-934-397-01	ILLUMINATOR (TIMER) (C910RDS)	
* 122	3-939-109-01	SHEET (TIMER) (C910RDS)	
* 123	3-938-380-01	SHEET (MODE)	
124	3-934-396-01	ILLUMINATOR (MODE)	
* 125	3-939-116-01	SPACER (RING)	
126	3-938-010-01	SHEET (LIGHT INTERCEPTION)	
EL701	1-517-557-11	LIGHT, ELECTRO LUMINESCENT	
LCD701	1-801-281-11	DISPLAY PANEL, LIQUID CRYSTAL	

(4) MECHANISM DECK SECTION-1 (MG-333D-121)

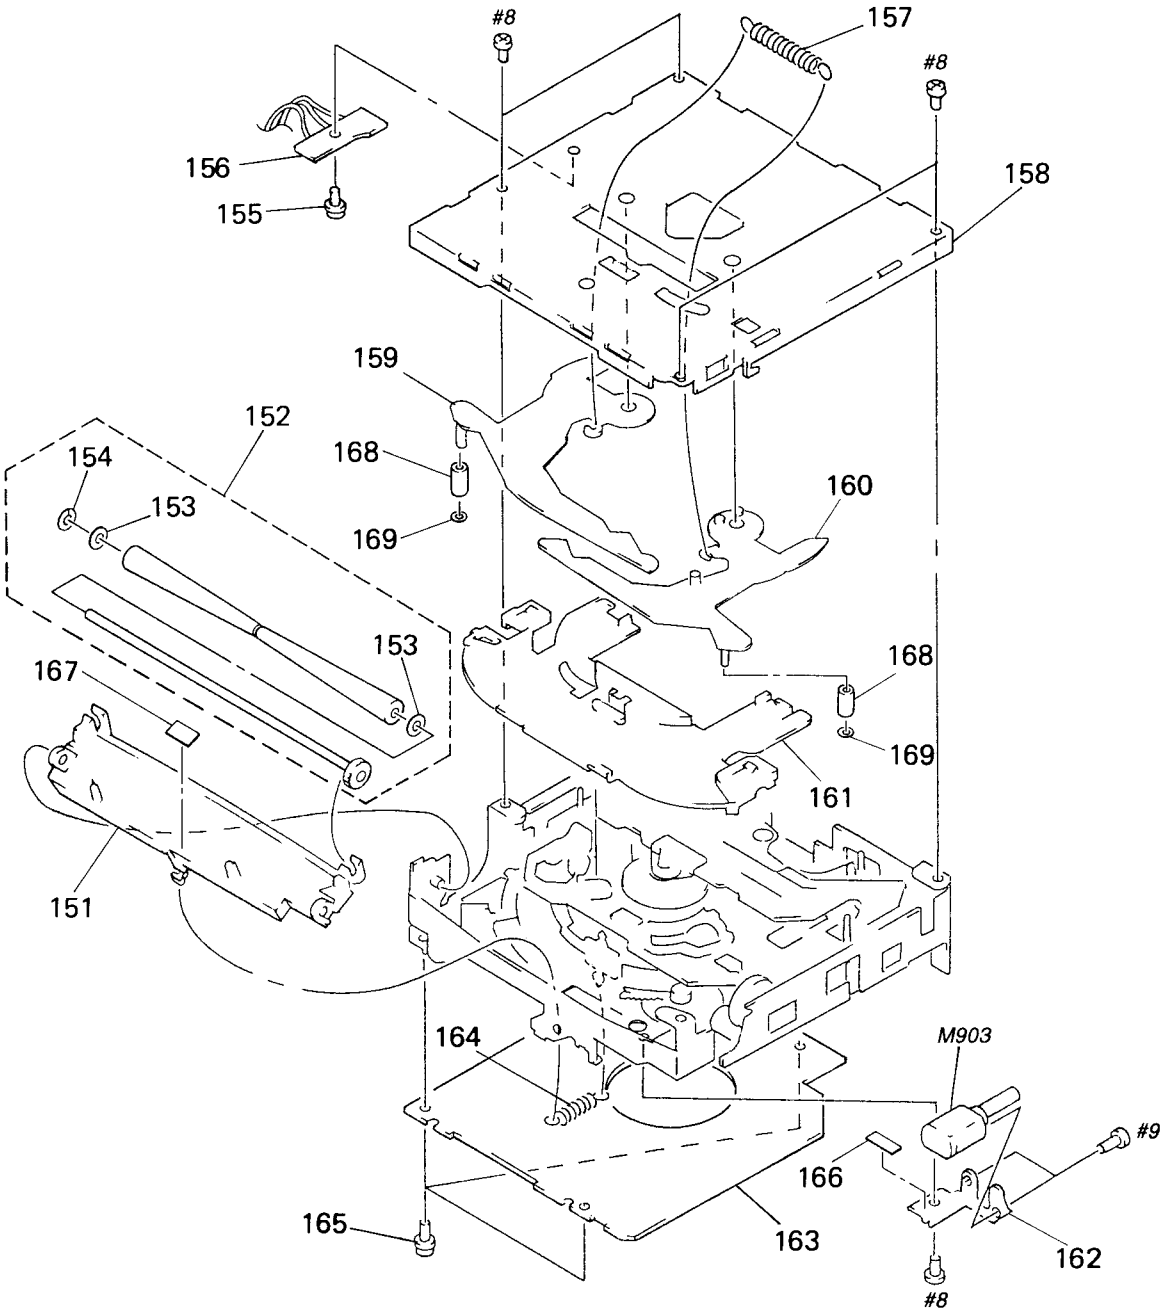

Ref. No.	Part No.	Description	Remark
151	3-931-902-01	ARM (ROLLER)	
152	A-3291-567-A	ROLLER ASSY	
* 153	3-322-413-01	SPACER, INSULATING	
154	3-701-439-11	WASHER	
155	3-338-737-01	SCREW (2X3), + PS	
* 156	1-659-836-11	DISC IN SW BOARD	
157	3-931-909-01	SPRING (LR), TENSION	
* 158	A-3291-816-A	CHASSIS (T) SUB ASSY	
* 159	X-3371-501-3	LEVER (L) ASSY	
* 160	X-3371-502-2	LEVER (R) ASSY	
161	3-931-908-02	GUIDE (DISC)	
* 162	3-931-899-01	BRACKET (MOTOR)	
* 163	A-3309-546-A	SERVO BOARD, COMPLETE	
164	3-931-916-01	SPRING (RA), TENSION	
165	3-918-103-01	SCREW	
* 166	3-939-139-01	SPACER	
* 167	3-936-065-01	CUSHION (RA)	
168	3-936-756-01	BEARING (D)	
169	3-321-393-01	WASHER, STOPPER	
M903	A-3291-576-A	MOTOR SUB ASSY, LO (LOADING)	

(5) MECHANISM DECK SECTION-2
(MG-333D-121)

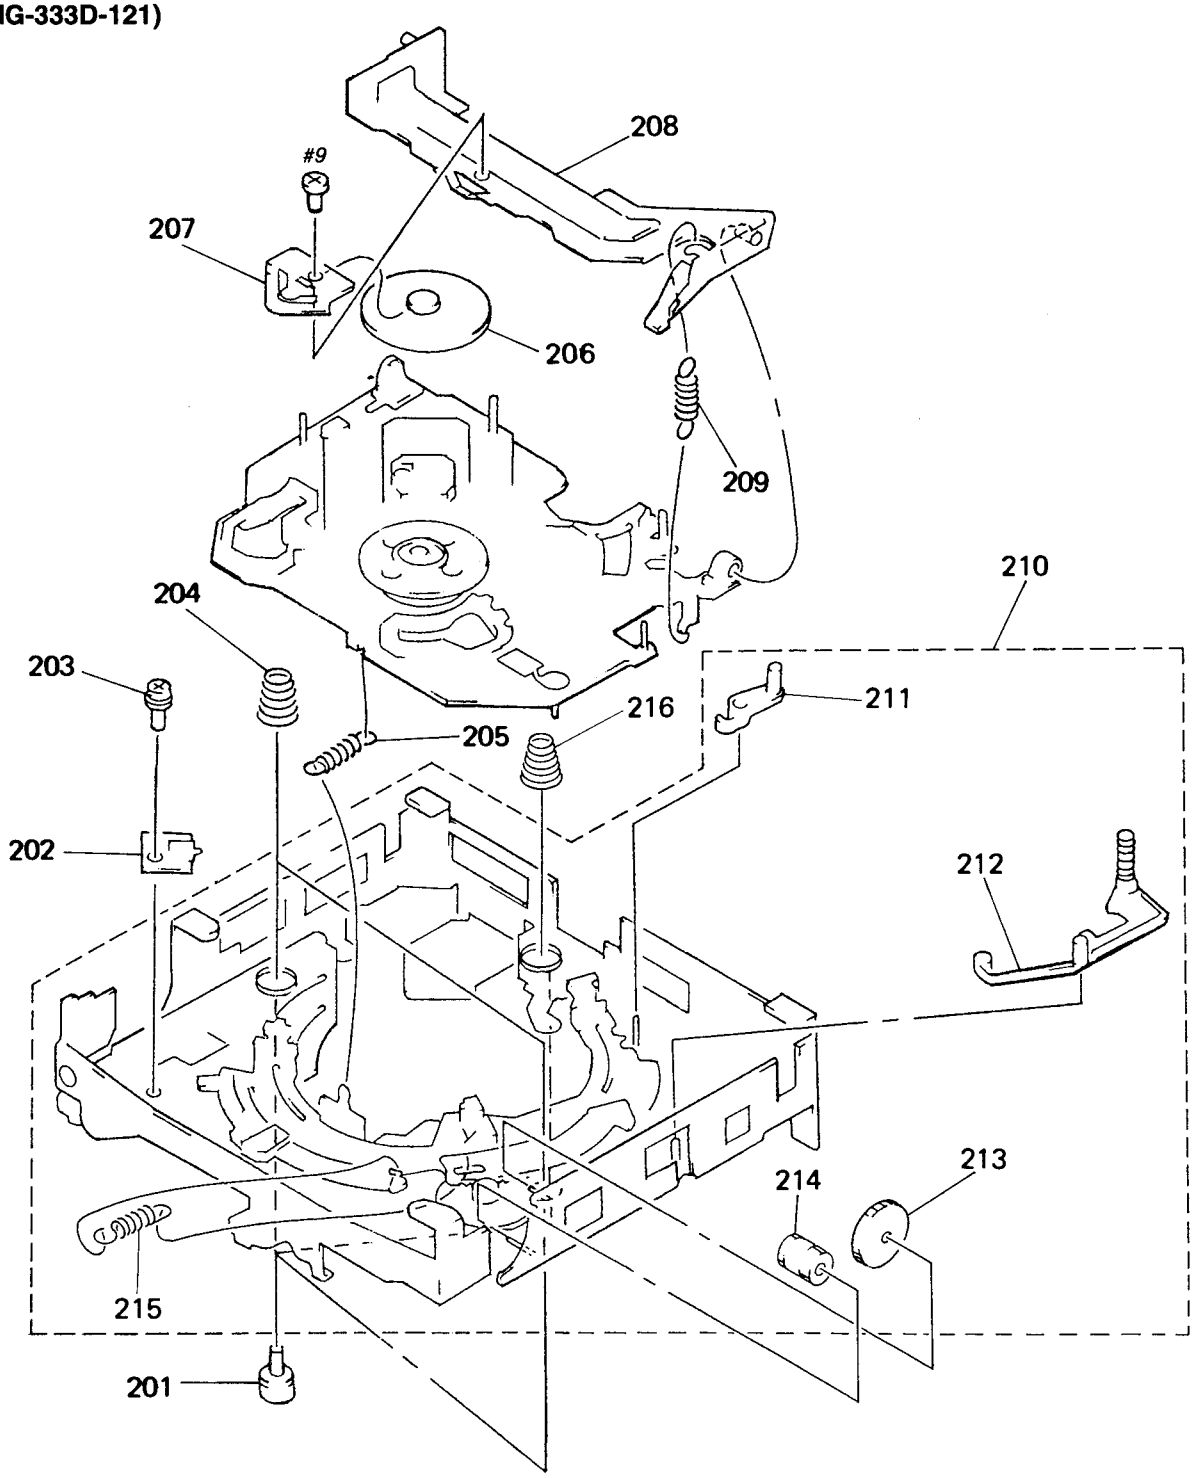

Ref. No.	Part No.	Description	Remark
201	3-931-897-01	DAMPER (T)	
* 202	1-659-837-11	LOAD SW BOARD	
203	3-338-737-01	SCREW (2X3), + PS	
204	3-931-898-11	SPRING (FL), COMPRESSION	
205	3-931-914-01	SPRING (ANGLE), TENSION	
* 206	3-384-918-11	RETAINER (DISC)	
207	3-931-894-01	BRACKET (CP)	
208	3-931-893-01	ARM, CHUCKING	
209	3-931-895-01	SPRING (CH), TENSION	
210	A-3291-568-A	CHASSIS (M) COMPLETE ASSY	
211	3-931-881-01	LEVER (LOCK)	
212	3-931-879-02	LEVER (D)	
213	3-931-882-02	GEAR (MDL)	
214	3-934-879-01	WHEEL (U), WORM	
215	3-931-883-01	SPRING (TR), TENSION	
216	3-931-898-01	SPRING (FL), COMPRESSION	

(6) MECHANISM DECK SECTION-3
(MG-333D-121)

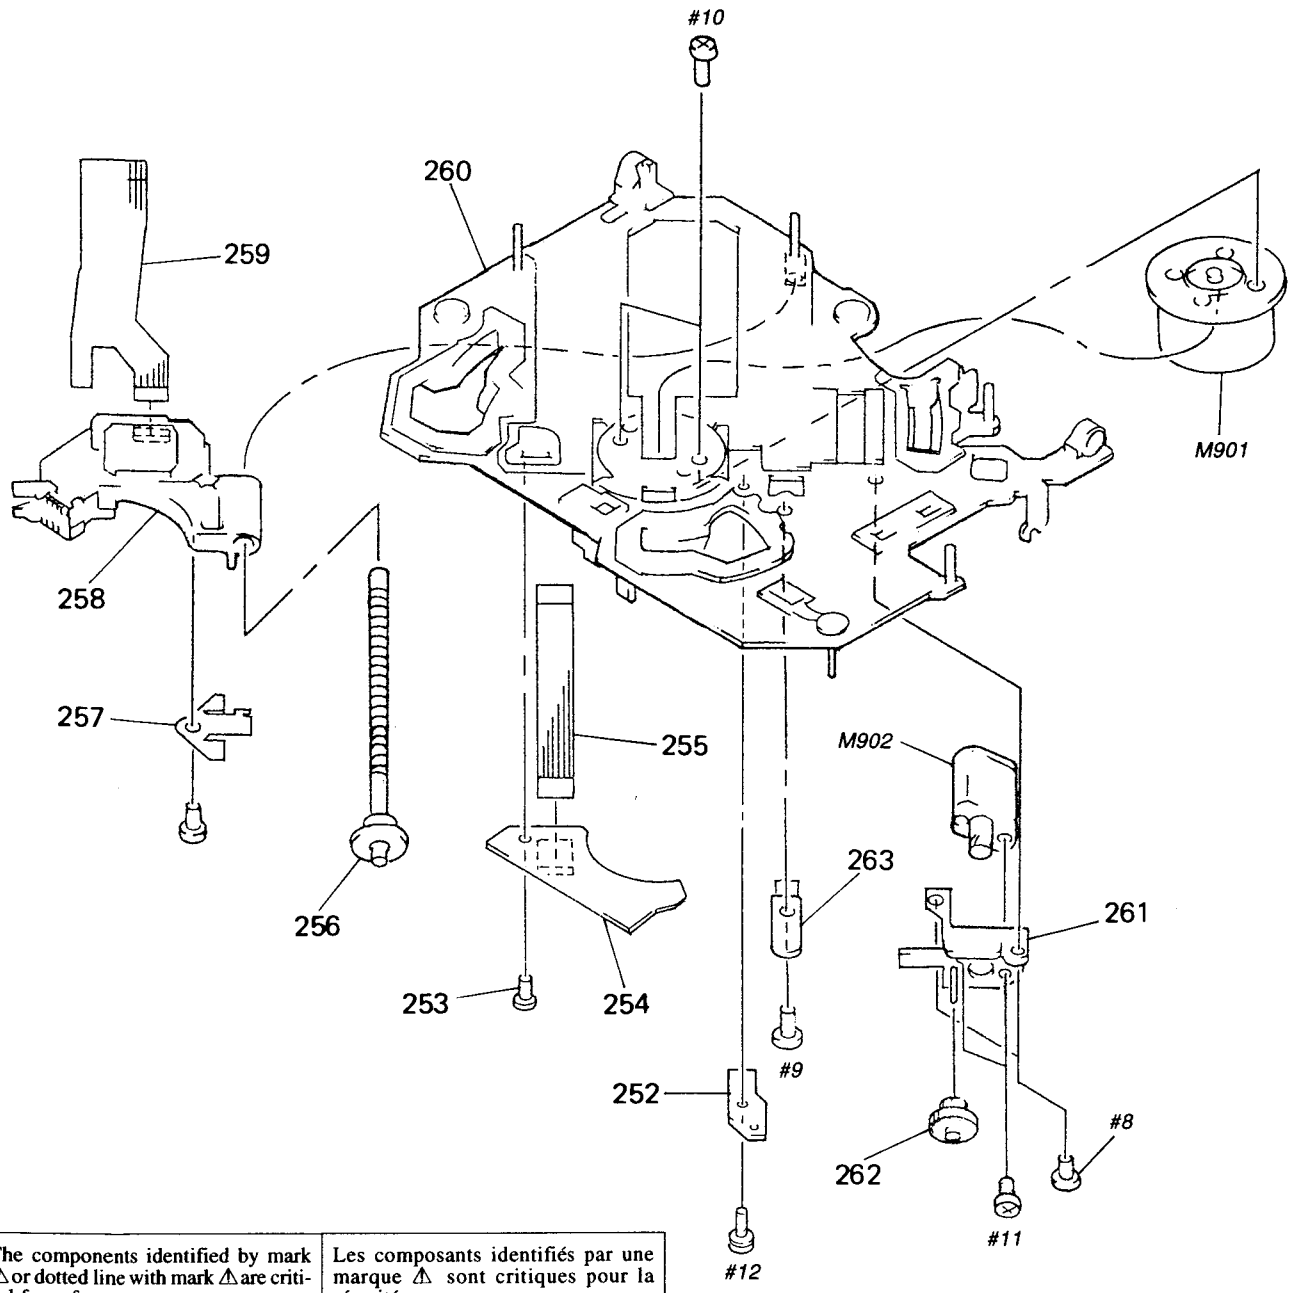

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only wiyh part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le neméro spécifié.

Ref. No.	Part No.	Description	Remark
* 252	1-659-835-12	LIMIT SW BOARD	
253	3-909-607-01	SCREW	
* 254	1-659-834-11	SUB BOARD	
255	1-659-880-11	MOTOR FLEXIBLE BOARD	
256	A-3291-571-A	SHAFT (FEED) ASSY	
257	3-931-834-01	SPRING (FEED), PLATE	
⚠258	8-848-402-02	OPTICAL PICK-UP KSS-520A	
259	1-659-881-11	PICK-UP FLEXIBLE BOARD	
* 260	X-3371-503-1	CHASSIS (OP) (O/S) ASSY	
261	X-3371-504-1	BASE (DRIVING) ASSY	
262	3-931-832-01	GEAR (SL MIDWAY)	
263	3-931-829-01	SPRING (SL), PLATE	
M901	X-3371-665-1	MOTOR ASSY (SPINDLE)	
M902	A-3291-574-A	MOTOR ASSY, SLED	

DISC IN SW | EL | JACK | KEY

SECTION 7
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description			Remark
*	1-659-836-11	DISC IN SW BOARD			
		**********			
		< SWITCH >			
SW1	1-572-288-11	SWITCH, PUSH (DISC IN)			
SW2	1-572-288-11	SWITCH, PUSH (SELF)			
**********					
*	1-661-551-11	EL BOARD			
		********			
		< CAPACITOR >			
C950	1-126-963-11	ELECT	4.7uF	20%	50V
C951	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
C952	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
C953	1-126-933-11	ELECT	100uF	20%	16V
C954	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
C955	1-126-941-11	ELECT	470uF	20%	25V
C956	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
		< CONNECTOR >			
* CN950	1-506-989-11	PIN, CONNECTOR (PC BOARD) 7P			
		< DIODE >			
D950	8-719-977-32	DIODE	DTZ11B		
D951	8-719-976-96	DIODE	DTZ4.7C		
		< COIL >			
L951	1-414-712-21	INDUCTOR	1mH		
		< TRANSISTOR >			
Q950	8-729-106-68	TRANSISTOR	2SD1615A-GP		
Q951	8-729-106-68	TRANSISTOR	2SD1615A-GP		
Q952	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
		< RESISTOR >			
R950	1-216-017-00	METAL GLAZE	47	5%	1/10W
R951	1-216-075-00	METAL CHIP	12K	5%	1/10W
R952	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R953	1-216-001-00	METAL CHIP	10	5%	1/10W
		< TRANSFORMER >			
T950	1-429-657-11	TRANSFORMER, EL INVERTER			
**********					
*	1-661-536-11	JACK BOARD			
		**********			
		< CAPACITOR >			
C907	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C908	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
		< CONNECTOR >			
* CN906	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P			
		< JACK >			
CNJ901	1-566-822-41	JACK (REMOTE IN)			
**********					
		KEY BOARD			
		*********			
	1-778-197-11	CONNECTOR, INTER			
	3-327-119-01	SPACER (A)			
*	3-934-395-01	ILLUMINATOR (LCD)			
	3-934-412-01	PLATE (LCD), GROUND			
		< CAPACITOR >			
C770	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C771	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description	Remark
C772	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C773	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
		< CONNECTOR >	
CN701	1-778-183-11	PLUG, CONNECTOR 18P	
		< DIODE >	
D750	8-719-422-49	DIODE MA8056-L	
D770	8-719-422-43	DIODE MA8051-H	
D772	8-719-422-43	DIODE MA8051-H	
D774	8-719-404-49	DIODE MA111	
		< EL LUMINOUS ELEMENT >	
EL701	1-517-557-11	LIGHT, ELECTRO LUMINESCENT	
		< IC >	
IC701	8-759-331-68	IC uPD16432AGC-011-9EU	
IC702	8-759-397-71	IC uPD16432AGC-012-9EU	
IC703	8-749-012-17	IC RS-140-T	
		< LIQUID CRYSTAL DISPLAY >	
LCD701	1-801-281-11	DISPLAY PANEL, LIQUID CRYSTAL	
		< LED >	
LED751	8-719-052-72	DIODE CL-220HR-C (ENTER)	
LED752	8-719-052-72	DIODE CL-220HR-C (BTM)	
LED753	8-719-052-72	DIODE CL-220HR-C (◀II▶)	(C910RDS)
LED754	8-719-052-72	DIODE CL-220HR-C (◴)	(C910RDS)
LED755	8-719-052-72	DIODE CL-220HR-C (←)	
LED756	8-719-052-72	DIODE CL-220HR-C (SET UP)	
LED757	8-719-052-72	DIODE CL-220HR-C (P.MODE)	
LED758	8-719-052-72	DIODE CL-220HR-C (→)	
LED761	8-719-987-45	DIODE CL-155Y/PG-CD	
LED762	8-719-987-45	DIODE CL-155Y/PG-CD	
LED763	8-719-987-45	DIODE CL-155Y/PG-CD	
LED764	8-719-987-45	DIODE CL-155Y/PG-CD	
LED765	8-719-987-45	DIODE CL-155Y/PG-CD	
LED766	8-719-987-45	DIODE CL-155Y/PG-CD	
LED767	8-719-987-45	DIODE CL-155Y/PG-CD	
LED768	8-719-987-45	DIODE CL-155Y/PG-CD	
		< SWITCH >	
LSW700	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(OPEN ⏏)
LSW701	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(TIR) (C910RDS)
LSW702	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(DSPL)
LSW703	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(LIST)
LSW704	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(AF/TA) (C910RDS)
LSW705	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(10)
LSW706	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(9)
LSW707	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(8)
LSW708	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(7) (C910)
LSW708	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(7/◀II▶) (C910RDS)
LSW709	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(6/BTM)
LSW710	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(5/ENTER)
LSW711	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(OFF)
LSW712	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(SOURCE)
LSW713	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(SOUND)
LSW714	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(⏭ ▶▶+)
LSW715	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(⏮ ◀◀-)
LSW716	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(SHIFT)
LSW717	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(1/←)
LSW718	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(2/SET UP)
LSW719	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(3/P.MODE)
LSW720	1-762-620-11	SWITCH, KEY BOARD (WITH LED)	(4/→)
		< TRANSISTOR >	
Q750	8-729-106-68	TRANSISTOR 2SD1615A-GP	
Q774	8-729-904-66	TRANSISTOR DTD113EK	
Q775	8-729-904-66	TRANSISTOR DTD113EK	
		< RESISTOR >	
R701	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R702	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R703	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R704	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R705	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R706	1-218-851-11	METAL CHIP 1.5K 0.50% 1/16W	
R707	1-218-700-11	METAL CHIP 2.2K 0.50% 1/16W	
R708	1-218-704-11	METAL CHIP 3.3K 0.50% 1/16W	
R709	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W	
R710	1-218-867-11	METAL CHIP 6.8K 0.50% 1/16W	
R712	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R713	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R714	1-218-688-11	METAL CHIP 680 0.50% 1/16W	
R715	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R716	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R717	1-218-851-11	METAL CHIP 1.5K 0.50% 1/16W	
R718	1-218-700-11	METAL CHIP 2.2K 0.50% 1/16W	
R719	1-218-704-11	METAL CHIP 3.3K 0.50% 1/16W	
R720	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W	
R721	1-216-037-00	METAL CHIP 330 5% 1/10W	
R722	1-216-041-00	METAL CHIP 470 5% 1/10W	

KEY **LAMP** **LIMIT SW** **LOAD SW**

Ref. No.	Part No.	Description			Remark
R723	1-216-033-00	METAL CHIP	220	5%	1/10W
R724	1-216-027-00	METAL CHIP	120	5%	1/10W
R725	1-216-037-00	METAL CHIP	330	5%	1/10W
R726	1-216-021-00	METAL CHIP	68	5%	1/10W
R727	1-216-021-00	METAL CHIP	68	5%	1/10W
R728	1-216-033-00	METAL CHIP	220	5%	1/10W
R729	1-216-033-00	METAL CHIP	220	5%	1/10W
R730	1-216-033-00	METAL CHIP	220	5%	1/10W
R731	1-216-029-00	METAL CHIP	150	5%	1/10W
R732	1-216-029-00	METAL CHIP	150	5%	1/10W
R733	1-216-029-00	METAL CHIP	150	5%	1/10W
R734	1-216-029-00	METAL CHIP	150	5%	1/10W
R735	1-216-033-00	METAL CHIP	220	5%	1/10W
R736	1-216-027-00	METAL CHIP	120	5%	1/10W
R737	1-216-033-00	METAL CHIP	220	5%	1/10W
R750	1-216-041-00	METAL CHIP	470	5%	1/10W
R751	1-216-045-00	METAL CHIP	680	5%	1/10W
R752	1-216-045-00	METAL CHIP	680	5%	1/10W
R753	1-216-045-00	METAL CHIP	680	5%	1/10W (C910RDS)
R754	1-216-045-00	METAL CHIP	680	5%	1/10W (C910RDS)
R755	1-216-045-00	METAL CHIP	680	5%	1/10W
R756	1-216-045-00	METAL CHIP	680	5%	1/10W
R757	1-216-045-00	METAL CHIP	680	5%	1/10W
R758	1-216-045-00	METAL CHIP	680	5%	1/10W
R770	1-216-041-00	METAL CHIP	470	5%	1/10W
R772	1-216-041-00	METAL CHIP	470	5%	1/10W
R773	1-216-025-00	METAL GLAZE	100	5%	1/10W
R774	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R779	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R780	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R781	1-216-841-11	METAL CHIP	47K	5%	1/16W
R786	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R787	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R788	1-216-841-11	METAL CHIP	47K	5%	1/16W
R789	1-216-845-11	METAL CHIP	100K	5%	1/16W
R790	1-216-845-11	METAL CHIP	100K	5%	1/16W
R791	1-216-841-11	METAL CHIP	47K	5%	1/16W
R792	1-216-841-11	METAL CHIP	47K	5%	1/16W
R797	1-216-025-00	METAL GLAZE	100	5%	1/10W
R798	1-216-295-00	CONDUCTOR, CHIP (2012)			
R799	1-216-295-00	CONDUCTOR, CHIP (2012)			
		< COMPOSITION CIRCUIT BLOCK >			
RB701	1-239-426-11	NETWORK RESISTOR (CHIP)	2.2K		
RB702	1-239-426-11	NETWORK RESISTOR (CHIP)	2.2K		
RB703	1-239-426-11	NETWORK RESISTOR (CHIP)	2.2K		
RB704	1-239-426-11	NETWORK RESISTOR (CHIP)	2.2K		

Ref. No.	Part No.	Description	Remark
		< ENCODER >	
RE701	1-473-644-11	ENCODER, ROTARY	
**********			
*	1-661-535-11	LAMP BOARD	
		**********	
		< CONNECTOR >	
CN905	1-691-742-11	PIN, CONNECTOR (PC BOARD) 4P	
		< DIODE >	
D906	8-719-052-72	DIODE CL-220HR-C (TIR INDICATOR)	(C910RD)
D907	8-719-987-41	DIODE CL-150Y-CD (OPEN END DETECT)	
		< TRANSISTOR >	
Q906	8-729-900-53	TRANSISTOR DTC114EK (C910RDS)	
Q907	8-729-027-49	TRANSISTOR DTC123EKA	
		< RESISTOR >	
R910	1-216-041-00	METAL CHIP 470 5% 1/10W	(C910RDS)
R911	1-216-041-00	METAL CHIP 470 5% 1/10W	
**********			
*	1-659-835-12	LIMIT SW BOARD	
		**********	
		< SWITCH >	
SW3	1-572-688-11	SWITCH, PUSH (1 KEY) (LIMIT)	
**********			
*	1-659-837-11	LOAD SW BOARD	
		**********	
		< SWITCH >	
SW4	1-572-288-11	SWITCH, PUSH (DOWN)	
**********			

Ref. No.	Part No.	Description			Remark
*	A-3294-081-A	MAIN BOARD, COMPLETE (C910)			
*	A-3309-378-A	MAIN BOARD, COMPLETE (C910RDS:AEP, UK)			
*	A-3309-386-A	MAIN BOARD, COMPLETE (C910RDS:German)			
		**********			
*	3-934-508-01	CASE (COIL 1)			
*	3-934-509-01	CASE (COIL 2)			
*	3-934-510-01	BRACKET (POWER)			
		< CAPACITOR >			
C1	1-104-952-11	ELECT	22uF	20%	16V
C2	1-104-952-11	ELECT	22uF	20%	16V
C3	1-104-952-11	ELECT	22uF	20%	16V
C4	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C6	1-104-952-11	ELECT	22uF	20%	16V
C7	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C8	1-163-152-00	CERAMIC CHIP	5PF	0.25PF	50V
C9	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C10	1-163-159-00	CERAMIC CHIP	12PF	5%	50V
C11	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C12	1-115-651-61	ELECT	100uF	20%	16V
C13	1-124-122-11	ELECT	100uF	20%	50V
C14	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C15	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C16	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C17	1-115-650-61	ELECT	47uF	20%	16V
C18	1-115-650-61	ELECT	47uF	20%	16V
C19	1-115-651-61	ELECT	100uF	20%	16V
C20	1-115-651-61	ELECT	100uF	20%	16V
C21	1-115-650-61	ELECT	47uF	20%	16V
C22	1-115-651-61	ELECT	100uF	20%	16V
C23	1-115-650-61	ELECT	47uF	20%	16V
C24	1-115-651-61	ELECT	100uF	20%	16V
C25	1-115-650-61	ELECT	47uF	20%	16V
C26	1-115-650-61	ELECT	47uF	20%	16V
C29	1-115-650-61	ELECT	47uF	20%	16V
C30	1-115-650-61	ELECT	47uF	20%	16V
C31	1-124-910-11	ELECT	47uF	20%	50V
C32	1-124-122-11	ELECT	100uF	20%	50V
C33	1-115-651-61	ELECT	100uF	20%	16V
C34	1-115-651-61	ELECT	100uF	20%	16V
C35	1-162-806-11	CERAMIC	0.1uF	10%	50V
C36	1-162-806-11	CERAMIC	0.1uF	10%	50V
C37	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C38	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C39	1-124-910-11	ELECT	47uF	20%	50V
C45	1-124-910-11	ELECT	47uF	20%	50V
C46	1-124-910-11	ELECT	47uF	20%	50V
C47	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C48	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C49	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C50	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C51	1-130-467-00	MYLAR	470PF	5%	50V
C52	1-130-467-00	MYLAR	470PF	5%	50V
C53	1-130-467-00	MYLAR	470PF	5%	50V
C54	1-130-467-00	MYLAR	470PF	5%	50V
C55	1-130-475-00	MYLAR	0.0022uF	5%	50V
C56	1-130-475-00	MYLAR	0.0022uF	5%	50V
C57	1-130-479-00	MYLAR	0.0047uF	5%	50V
C58	1-130-479-00	MYLAR	0.0047uF	5%	50V
C59	1-136-161-00	FILM	0.047uF	5%	50V
C60	1-136-161-00	FILM	0.047uF	5%	50V
C61	1-130-479-00	MYLAR	0.0047uF	5%	50V
C62	1-130-479-00	MYLAR	0.0047uF	5%	50V
C63	1-124-721-21	ELECT	10uF	20%	50V
C64	1-124-721-21	ELECT	10uF	20%	50V
C65	1-130-481-00	MYLAR	0.0068uF	5%	50V
C66	1-130-481-00	MYLAR	0.0068uF	5%	50V
C67	1-104-946-11	ELECT	10uF	20%	35V
C68	1-104-946-11	ELECT	10uF	20%	35V
C69	1-137-193-11	FILM	0.39uF	5%	50V
C70	1-137-193-11	FILM	0.39uF	5%	50V
C71	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C72	1-162-806-11	CERAMIC	0.1uF	10%	50V
C73	1-162-806-11	CERAMIC	0.1uF	10%	50V
C74	1-115-650-61	ELECT	47uF	20%	16V
C75	1-115-650-61	ELECT	47uF	20%	16V
C76	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C77	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C78	1-115-650-61	ELECT	47uF	20%	16V
C79	1-115-650-61	ELECT	47uF	20%	16V
C80	1-115-650-61	ELECT	47uF	20%	16V
C81	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C82	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C83	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C84	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C85	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C86	1-124-721-21	ELECT	10uF	20%	50V
C87	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C88	1-115-655-61	ELECT	10uF	20%	35V
C89	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C90	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C91	1-124-721-21	ELECT	10uF	20%	50V
C92	1-115-655-61	ELECT	10uF	20%	35V
C93	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V

MAIN

Ref. No.	Part No.	Description			Remark
C94	1-104-946-11	ELECT	10uF	20%	35V
C95	1-104-946-11	ELECT	10uF	20%	35V
C96	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C97	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C98	1-164-346-11	CERAMIC CHIP	1uF		16V
C99	1-162-806-11	CERAMIC	0.1uF	10%	50V
C100	1-162-806-11	CERAMIC	0.1uF	10%	50V
C102	1-124-122-11	ELECT	100uF	20%	50V
C103	1-124-122-11	ELECT	100uF	20%	50V
C104	1-124-563-11	ELECT	2200uF	20%	25V
C105	1-136-960-11	FILM	0.1uF	10%	160V
C106	1-126-027-11	ELECT	1000uF	20%	25V
C107	1-104-664-11	ELECT	47uF	20%	25V
C108	1-126-027-11	ELECT	1000uF	20%	25V
C116	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C117	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C120	1-163-193-00	CERAMIC CHIP	330PF		50V
C121	1-163-193-00	CERAMIC CHIP	330PF		50V
C122	1-163-003-11	CERAMIC CHIP	330PF		50V
C123	1-163-003-11	CERAMIC CHIP	330PF		50V
C124	1-163-003-11	CERAMIC CHIP	330PF		50V
C125	1-163-003-11	CERAMIC CHIP	330PF		50V
C126	1-163-003-11	CERAMIC CHIP	330PF		50V
C202	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C203	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C204	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C206	1-126-933-11	ELECT	100uF	20%	10V
C207	1-126-933-11	ELECT	100uF	20%	10V
C208	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C209	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C210	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C213	1-104-554-11	FILM CHIP	0.018uF	5%	16V (C910RDS)
C213	1-104-555-11	FILM CHIP	0.022uF	5%	16V (C910)
C214	1-104-554-11	FILM CHIP	0.018uF	5%	16V (C910RDS)
C214	1-104-555-11	FILM CHIP	0.022uF	5%	16V (C910)
C220	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V (C910RDS)
C221	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V (C910)
C221	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V (C910RDS)
C222	1-104-664-11	ELECT	47uF	20%	25V
C223	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C224	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C225	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C226	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C227	1-110-351-11	MYLAR	0.001uF	5%	50V (C910RDS)
C228	1-136-165-00	FILM	0.1uF	5%	50V (C910RDS)
C229	1-130-475-00	MYLAR	0.0022uF	5%	50V
C230	1-104-952-11	ELECT	22uF	20%	16V
C231	1-136-169-00	FILM	0.22uF	5%	50V (C910RDS)
C232	1-136-161-00	FILM	0.047uF	5%	50V (C910RDS)
C233	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C234	1-136-159-00	FILM	0.033uF	5%	50V (C910RDS)
C234	1-136-171-00	FILM	0.33uF	5%	50V (C910)
C235	1-163-104-00	CERAMIC CHIP	30PF		50V
C237	1-126-933-11	ELECT	100uF	20%	16V
C238	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C239	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C240	1-163-104-00	CERAMIC CHIP	30PF		50V
C241	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C242	1-164-346-11	CERAMIC CHIP	1uF		16V
C243	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C244	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C245	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C246	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V
C247	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C248	1-165-128-11	CERAMIC CHIP	0.22uF		16V
C249	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C250	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (C910RDS)
C251	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V
C252	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C253	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C254	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C255	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C256	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C257	1-164-346-11	CERAMIC CHIP	1uF		16V
C259	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C263	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C264	1-104-942-11	ELECT	1uF	20%	50V
C265	1-104-942-11	ELECT	1uF	20%	50V
C267	1-104-942-11	ELECT	1uF	20%	50V
C268	1-104-942-11	ELECT	1uF	20%	50V
C269	1-104-942-11	ELECT	1uF	20%	50V
C270	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C271	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C272	1-163-083-00	CERAMIC CHIP	1PF		50V (C910RDS)

Ref. No.	Part No.	Description		Remark
C273	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C274	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V (C910RDS)
C275	1-104-951-11	ELECT	10uF	20% 16V (C910RDS)
C276	1-164-161-11	CERAMIC CHIP	0.0022uF	10% 100V
C277	1-107-826-11	CERAMIC CHIP	0.1uF	10% 16V
C278	1-163-127-00	CERAMIC CHIP	270PF	5% 50V (C910RDS)
C279	1-164-232-11	CERAMIC CHIP	0.01uF	50V (C910RDS)
C281	1-104-951-11	ELECT	10uF	20% 16V (C910RDS)
C282	1-163-989-11	CERAMIC CHIP	0.033uF	10% 25V (C910RDS)
C283	1-164-232-11	CERAMIC CHIP	0.01uF	50V (C910RDS)
C284	1-163-237-11	CERAMIC CHIP	27PF	5% 50V (C910RDS)
C285	1-163-237-11	CERAMIC CHIP	27PF	5% 50V (C910RDS)
C286	1-163-083-00	CERAMIC CHIP	1PF	50V (C910RDS)
C289	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V (C910RDS)
C290	1-104-942-11	ELECT	1uF	20% 50V (C910RDS)
C291	1-104-942-11	ELECT	1uF	20% 50V (C910RDS)
C295	1-104-952-11	ELECT	22uF	20% 16V (C910RDS)
C296	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V (C910RDS)
C297	1-126-933-11	ELECT	100uF	20% 10V
C298	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C401	1-163-227-11	CERAMIC CHIP	10PF	0.5PF 50V
C402	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C403	1-163-231-11	CERAMIC CHIP	15PF	5% 50V
C404	1-104-851-11	TANTAL. CHIP	10uF	20% 10V
C405	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V
C409	1-126-154-11	ELECT	47uF	20% 6.3V
C410	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V
C411	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V
C600	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
C601	1-104-952-11	ELECT	22uF	20% 16V
C602	1-107-826-11	CERAMIC CHIP	0.1uF	10% 16V
C605	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C606	1-125-701-11	CAPACITOR	0.047F	
C607	1-104-952-11	ELECT	22uF	20% 16V
C608	1-104-952-11	ELECT	22uF	20% 16V
C609	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C610	1-126-163-11	ELECT	4.7uF	20% 50V
C611	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C612	1-104-952-11	ELECT	22uF	20% 16V
C614	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
C616	1-104-952-11	ELECT	22uF	20% 16V
C617	1-126-163-11	ELECT	4.7uF	20% 50V
		< CONNECTOR >		
CN1	1-764-617-12	PIN, CONNECTOR (PC BOARD) 30P		
* CN2	1-506-991-11	PIN, CONNECTOR (PC BOARD) 9P		
CN4	1-695-546-11	PLUG, CONNECTOR (BUS OUT DIGITAL)		
* CN201	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P		
CN401	1-778-047-21	CONNECTOR, FPC		
* CN402	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P		
CN403	1-580-907-31	PLUG, CONNECTOR (BUS CONTROL IN)		
* CN404	1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P		
* CN405	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P		
* CN407	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P		
* CN408	1-695-442-21	PIN, CONNECTOR (PC BOARD) 10P		
		< COMPOSITION CIRCUIT BLOCK >		
CP202	1-519-504-11	GAP, DISCHARGE		
		< DIODE >		
D1	8-719-977-23	DIODE	DTZ9.1A	
D2	8-719-977-22	DIODE	DTZ9.1	
D3	8-719-988-62	DIODE	1SS355	
D4	8-719-158-15	DIODE	RD5.6S-B	
D202	8-719-976-88	DIODE	DTZ3.9B	
D203	8-719-914-43	DIODE	DAN202K	
D204	8-719-158-15	DIODE	RD5.6S-B	
D205	8-719-977-22	DIODE	DTZ9.1	
D207	8-719-988-62	DIODE	1SS355	
D401	8-719-988-62	DIODE	1SS355	
D402	8-719-105-99	DIODE	RD6.2M-B1	
D403	8-719-105-99	DIODE	RD6.2M-B1	
D404	8-719-105-99	DIODE	RD6.2M-B1	
D406	8-719-988-62	DIODE	1SS355	
D407	8-719-105-99	DIODE	RD6.2M-B1	
D408	8-719-988-62	DIODE	1SS355	
D409	8-719-988-62	DIODE	1SS355	
D410	8-719-988-62	DIODE	1SS355	
D411	8-719-988-62	DIODE	1SS355	
D412	8-719-056-83	DIODE	UDZ-TE-17-6.8B	
D413	8-719-056-83	DIODE	UDZ-TE-17-6.8B	
D414	8-719-056-83	DIODE	UDZ-TE-17-6.8B	
D416	8-719-056-83	DIODE	UDZ-TE-17-6.8B	
D417	8-719-056-83	DIODE	UDZ-TE-17-6.8B	

MAIN

Ref. No.	Part No.	Description	Remark
D419	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D420	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D421	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D422	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D423	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D425	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D426	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D601	8-719-977-22	DIODE DTZ9.1	
D602	8-719-975-40	DIODE RB411D	
D603	8-719-977-04	DIODE DTZ5.6C	
D604	8-719-988-62	DIODE 1SS355	
D605	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D606	8-719-914-43	DIODE DAN202K	
D607	8-719-978-69	DIODE DTZ-TT11-16B	
D608	8-719-056-88	DIODE UDZ-TE-17-11B	
D609	8-719-056-88	DIODE UDZ-TE-17-11B	
D611	8-719-988-62	DIODE 1SS355	
D612	8-719-914-43	DIODE DAN202K	
D613	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D614	8-719-988-62	DIODE 1SS355	
D615	8-719-988-62	DIODE 1SS355	
D616	8-719-988-62	DIODE 1SS355	
		< DD CONVERTER >	
DD1	1-473-682-21	CONVERTER UNIT, DC/DC	
		< IC >	
IC1	8-759-348-81	IC SM5843AS1-E2	
IC2	8-759-242-70	IC TC7WU04F	
IC3	8-759-231-53	IC TA7805S	
IC4	8-759-425-06	IC PCM1702U-K-T1	
IC5	8-759-425-06	IC PCM1702U-K-T1	
IC6	8-759-231-53	IC TA7805S	
IC7	8-759-064-92	IC NJM5532M-D	
IC8	8-759-245-79	IC TA79005S	
IC9	8-759-711-85	IC NJM4580E-D	
IC10	8-759-711-85	IC NJM4580E-D	
IC11	8-752-071-19	IC CXA1946Q	
IC12	8-759-346-20	IC NJM78L06UA-TE1	
IC13	8-759-346-19	IC NJM79L06UA-TE1	
IC14	8-759-064-92	IC NJM5532M-D	
IC15	8-759-064-92	IC NJM5532M-D	
IC202	8-759-242-66	IC TC4W66F (C910RDS)	
IC203	8-759-823-81	IC LC7216M	
IC204	8-759-367-11	IC HA12181FP-EL	
IC205	8-759-008-67	IC MC14066BF (C910RDS)	
IC206	8-759-428-04	IC MN1883220S4C2 (C910RDS)	

Ref. No.	Part No.	Description	Remark
IC206	8-759-428-05	IC MN1883220S4B3 (C910)	
IC207	8-759-344-91	IC RN5VD23AA-TL	
IC208	8-759-075-66	IC TA75S01F	
IC209	8-759-163-63	IC TDA7330BD-013TR (C910RDS)	
IC210	8-759-180-46	IC MSM6685JSDR1 (C910RDS)	
IC211	8-759-374-66	IC MSM6688GS-2K (C910RDS)	
IC401	8-759-394-63	IC uPD78058GC-231-3B9	
IC402	8-759-096-16	IC MM1175XFF	
IC601	8-759-363-81	IC XC61AN4002PR	
		< CHIP CONDUCTOR >	
JC201	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC202	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC205	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC206	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC209	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC210	1-216-295-00	CONDUCTOR, CHIP (2012)	
		< COIL >	
L1	1-410-946-31	INDUCTOR CHIP 22uH	
L2	1-410-946-31	INDUCTOR CHIP 22uH	
L3	1-414-400-11	INDUCTOR 22uH	
L4	1-414-400-11	INDUCTOR 22uH	
L10	1-414-398-11	INDUCTOR 10uH	
L201	1-410-946-31	INDUCTOR CHIP 22uH	
L203	1-410-946-31	INDUCTOR CHIP 22uH	
L205	1-410-204-31	INDUCTOR CHIP 10uH (C910RDS)	
L208	1-410-946-31	INDUCTOR CHIP 22uH (C910RDS)	
L401	1-410-946-31	INDUCTOR CHIP 22uH	
L600	1-410-946-31	INDUCTOR CHIP 22uH	
		< IC LINK >	
PS1	1-533-397-11	RINK, CHIP IC	
PS601	1-533-674-11	RINK, CHIP IC	
		< TRANSISTOR >	
Q1	8-729-922-65	TRANSISTOR 2SD1760F5-PQR	
Q2	8-729-922-65	TRANSISTOR 2SD1760F5-PQR	
Q3	8-729-921-25	TRANSISTOR FMC2	
Q4	8-729-921-25	TRANSISTOR FMC2	
Q5	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q6	8-729-900-53	TRANSISTOR DTC114EK	
Q12	8-729-920-21	TRANSISTOR DTC314TKH04	
Q13	8-729-920-21	TRANSISTOR DTC314TKH04	
Q14	8-729-920-21	TRANSISTOR DTC314TKH04	
Q15	8-729-920-21	TRANSISTOR DTC314TKH04	
Q16	8-729-920-21	TRANSISTOR DTC314TKH04	
Q17	8-729-920-21	TRANSISTOR DTC314TKH04	

Ref. No.	Part No.	Description		Remark
Q18	8-729-920-21	TRANSISTOR	DTC314TKH04	
Q19	8-729-920-21	TRANSISTOR	DTC314TKH04	
Q20	8-729-921-25	TRANSISTOR	FMC2	
Q21	8-729-922-65	TRANSISTOR	2SD1760F5-PQR	
Q202	8-729-900-53	TRANSISTOR	DTC114EK (C910RDS)	
Q203	8-729-021-94	TRANSISTOR	2SK1657-T1B	
Q204	8-729-920-85	TRANSISTOR	2SD1664-QR	
Q205	8-729-920-85	TRANSISTOR	2SD1664-QR	
Q207	8-729-920-21	TRANSISTOR	DTC314TKH04	
Q208	8-729-920-21	TRANSISTOR	DTC314TKH04	
Q209	8-729-920-21	TRANSISTOR	DTC314TKH04	
Q210	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q401	8-729-027-23	TRANSISTOR	DTA114EKA-T146	
Q402	8-729-027-23	TRANSISTOR	DTA114EKA-T146	
Q403	8-729-027-23	TRANSISTOR	DTA114EKA-T146	
Q405	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q407	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q408	8-729-027-23	TRANSISTOR	DTA114EKA-T146	
Q601	8-729-904-48	TRANSISTOR	DTB113EK (C910RDS)	
Q602	8-729-027-52	TRANSISTOR	DTC124EKA-T146 (C910RDS)	
Q603	8-729-904-07	TRANSISTOR	FMG2	
Q604	8-729-904-48	TRANSISTOR	DTB113EK	
Q605	8-729-904-48	TRANSISTOR	DTB113EK	
Q606	8-729-922-65	TRANSISTOR	2SD1760F5-PQR	
Q607	8-729-027-52	TRANSISTOR	DTC124EKA-T146	
Q608	8-729-822-84	TRANSISTOR	2SB1202FAST	
Q609	8-729-106-60	TRANSISTOR	2SB1115A	
Q610	8-729-920-85	TRANSISTOR	2SD1664-QR	
Q611	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q612	8-729-900-53	TRANSISTOR	DTC114EK	
Q613	8-729-904-48	TRANSISTOR	DTB113EK	
Q614	8-729-900-53	TRANSISTOR	DTC114EK	
Q615	8-729-920-85	TRANSISTOR	2SD1664-QR	
Q616	8-729-920-85	TRANSISTOR	2SD1664-QR	
Q617	8-729-027-52	TRANSISTOR	DTC124EKA-T146	
Q618	8-729-920-82	TRANSISTOR	2SB1188-QR	
Q619	8-729-920-41	TRANSISTOR	FMC3	
Q620	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q621	8-729-026-49	TRANSISTOR	2SA1037AK-T146-R	
Q622	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q623	8-729-027-52	TRANSISTOR	DTC124EKA-T146	

< RESISTOR >

Ref. No.	Part No.	Description				Remark
R1	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R2	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R3	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R4	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R5	1-260-032-11	CARBON MELF	1M	2%	1/8W	
R6	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R7	1-216-043-00	METAL GLAZE	560	5%	1/10W	
R8	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R9	1-216-043-00	METAL GLAZE	560	5%	1/10W	
R10	1-259-995-11	CARBON MELF	1K	2%	1/8W	
R12	1-216-295-00	CONDUCTOR, CHIP (2012)				
R14	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R16	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R17	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R18	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R19	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R20	1-216-208-00	METAL GLAZE	2.7K		1/8W	
R21	1-216-208-00	METAL GLAZE	2.7K		1/8W	
R22	1-208-512-11	METAL GLAZE	12K	2%	1/8W	
R23	1-208-512-11	METAL GLAZE	12K	2%	1/8W	
R24	1-208-512-11	METAL GLAZE	12K	2%	1/8W	
R25	1-208-512-11	METAL GLAZE	12K	2%	1/8W	
R26	1-216-210-00	METAL GLAZE	3.3K		1/8W	
R27	1-216-210-00	METAL GLAZE	3.3K		1/8W	
R28	1-216-210-00	METAL GLAZE	3.3K		1/8W	
R29	1-216-210-00	METAL GLAZE	3.3K		1/8W	
R30	1-208-486-61	METAL GLAZE	1K	2%	1/8W	
R31	1-208-486-61	METAL GLAZE	1K	2%	1/8W	
R32	1-208-486-61	METAL GLAZE	1K	2%	1/8W	
R33	1-208-486-61	METAL GLAZE	1K	2%	1/8W	
R35	1-216-065-00	METAL CHIP	4.7K		1/10W	(EXCEPT US, Canadian)
R36	1-216-065-00	METAL CHIP	4.7K		1/10W	(EXCEPT US, Canadian)
R37	1-216-065-00	METAL CHIP	4.7K		1/10W	(EXCEPT US, Canadian)
R38	1-216-065-00	METAL CHIP	4.7K		1/10W	(EXCEPT US, Canadian)
R41	1-216-295-00	CONDUCTOR, CHIP (2012)				(US, Canadian)
R41	1-216-061-00	METAL CHIP	3.3K		1/10W	(AEP, UK, E)
R41	1-216-069-00	METAL CHIP	6.8K		1/10W	(German)
R42	1-216-295-00	CONDUCTOR, CHIP (2012)				(US, Canadian)
R42	1-216-051-00	METAL CHIP	1.2K		1/10W	(EXCEPT US, Canadian)
R45	1-216-295-00	CONDUCTOR, CHIP (2012)				(US, Canadian)
R45	1-216-051-00	METAL CHIP	1.2K		1/10W	(EXCEPT US, Canadian)
R46	1-216-295-00	CONDUCTOR, CHIP (2012)				(US, Canadian)
R46	1-216-061-00	METAL CHIP	3.3K		1/10W	(AEP, UK, E)
R46	1-216-069-00	METAL CHIP	6.8K		1/10W	(German)
R47	1-260-004-11	CARBON MELF	4.7K	2%	1/8W	

MAIN

Ref. No.	Part No.	Description			Remark
R48	1-260-004-11	CARBON MELF	4.7K	2%	1/8W
R49	1-260-004-11	CARBON MELF	4.7K	2%	1/8W
R50	1-260-004-11	CARBON MELF	4.7K	2%	1/8W
R51	1-260-008-11	CARBON MELF	10K	2%	1/8W
R52	1-260-008-11	CARBON MELF	10K	2%	1/8W
R53	1-260-008-11	CARBON MELF	10K	2%	1/8W
R54	1-260-008-11	CARBON MELF	10K	2%	1/8W
R55	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R56	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R57	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R58	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R59	1-216-174-00	METAL GLAZE	100	2%	1/8W
R60	1-216-174-00	METAL GLAZE	100	2%	1/8W
R61	1-216-174-00	METAL GLAZE	100	2%	1/8W
R62	1-216-174-00	METAL GLAZE	100	2%	1/8W
R63	1-216-174-00	METAL GLAZE	100	2%	1/8W
R64	1-216-174-00	METAL GLAZE	100	2%	1/8W
R65	1-216-174-00	METAL GLAZE	100	2%	1/8W
R66	1-216-174-00	METAL GLAZE	100	2%	1/8W
R67	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R68	1-216-230-00	METAL GLAZE	22K	2%	1/8W
R69	1-216-230-00	METAL GLAZE	22K	2%	1/8W
R70	1-216-230-00	METAL GLAZE	22K	2%	1/8W
R71	1-216-230-00	METAL GLAZE	22K	2%	1/8W
R72	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R73	1-208-399-61	METAL GLAZE	27	2%	1/8W
R74	1-208-399-61	METAL GLAZE	27	2%	1/8W
R75	1-208-399-61	METAL GLAZE	27	2%	1/8W
R76	1-208-399-61	METAL GLAZE	27	2%	1/8W
R77	1-208-399-61	METAL GLAZE	27	2%	1/8W
R78	1-208-399-61	METAL GLAZE	27	2%	1/8W
R79	1-208-399-61	METAL GLAZE	27	2%	1/8W
R80	1-208-399-61	METAL GLAZE	27	2%	1/8W
R81	1-208-399-61	METAL GLAZE	27	2%	1/8W
R82	1-208-399-61	METAL GLAZE	27	2%	1/8W
R83	1-208-399-61	METAL GLAZE	27	2%	1/8W
R84	1-208-399-61	METAL GLAZE	27	2%	1/8W
R85	1-208-399-61	METAL GLAZE	27	2%	1/8W
R86	1-208-399-61	METAL GLAZE	27	2%	1/8W
R87	1-216-101-00	METAL CHIP	150K	5%	1/10W
R88	1-216-210-00	METAL CHIP	3.3K		1/8W
R89	1-216-210-00	METAL CHIP	3.3K		1/8W
R201	1-216-073-00	METAL CHIP	10K	5%	1/10W
R202	1-216-849-11	METAL CHIP	220K	5%	1/16W
R203	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R205	1-216-073-00	METAL CHIP	10K	5%	1/10W
R210	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R212	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R213	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R214	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R215	1-216-073-00	METAL CHIP	10K	5%	1/10W
R217	1-216-065-00	METAL CHIP	4.7K	5%	1/10W (C910RDS)
R218	1-216-073-00	METAL CHIP	10K	5%	1/10W (C910RDS)
R219	1-216-073-00	METAL CHIP	10K	5%	1/10W
R220	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R221	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R222	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R223	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R224	1-216-077-00	METAL CHIP	15K	5%	1/10W
R225	1-216-845-11	METAL CHIP	100K	5%	1/16W
R226	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R227	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R228	1-216-841-11	METAL CHIP	47K	5%	1/16W
R229	1-216-834-11	METAL CHIP	12K	5%	1/16W
R230	1-216-835-11	METAL CHIP	15K	5%	1/16W
R231	1-216-850-11	METAL CHIP	270K	5%	1/16W
R232	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R233	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R235	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R236	1-216-073-00	METAL CHIP	10K	5%	1/10W
R237	1-216-041-00	METAL CHIP	470	5%	1/10W
R238	1-216-041-00	METAL CHIP	470	5%	1/10W
R239	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R240	1-216-025-00	METAL GLAZE	100	5%	1/10W
R241	1-216-025-00	METAL GLAZE	100	5%	1/10W
R243	1-216-081-00	METAL CHIP	22K	5%	1/10W
R244	1-216-081-00	METAL CHIP	22K	5%	1/10W
R245	1-216-081-00	METAL CHIP	22K	5%	1/10W
R247	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R248	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R249	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R250	1-216-845-11	METAL CHIP	100K	5%	1/16W (E, German)
R251	1-216-119-00	METAL CHIP	820K	5%	1/10W
R252	1-216-113-00	METAL CHIP	470K	5%	1/10W
R254	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R255	1-216-845-11	METAL CHIP	100K	5%	1/16W (C910)
R256	1-216-113-00	METAL CHIP	470K	5%	1/10W
R257	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R258	1-216-841-11	METAL CHIP	47K	5%	1/16W
R259	1-216-841-11	METAL CHIP	47K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R260	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R261	1-216-081-00	METAL CHIP	22K	5%	1/10W
R262	1-216-057-00	METAL CHIP	2.2K	5%	1/10W (C910RDS)
R263	1-216-129-00	METAL CHIP	2.2M	5%	1/10W (C910RDS)
R264	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R265	1-216-089-00	METAL CHIP	47K	5%	1/10W (C910RDS)
R266	1-216-851-11	METAL CHIP	330K	5%	1/16W (C910RDS)
R267	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R268	1-216-033-00	METAL CHIP	220	5%	1/10W (C910RDS)
R269	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R270	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R271	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910RDS)
R273	1-216-097-00	METAL GLAZE	100K	5%	1/10W (C910)
R280	1-216-295-00	CONDUCTOR, CHIP (2012) (C910)			
R281	1-216-295-00	CONDUCTOR, CHIP (2012) (C910)			
R282	1-216-295-00	CONDUCTOR, CHIP (2012) (C910)			
R283	1-216-097-00	METAL CHIP	100K	5%	1/10W (C910)
R284	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R285	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R286	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R287	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R288	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R289	1-216-089-00	METAL GLAZE	47K	5%	1/10W (C910RDS)
R401	1-216-025-00	METAL GLAZE	100	5%	1/10W
R402	1-216-025-00	METAL GLAZE	100	5%	1/10W
R403	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R404	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R405	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R406	1-216-025-00	METAL GLAZE	100	5%	1/10W
R407	1-216-025-00	METAL GLAZE	100	5%	1/10W
R408	1-216-081-00	METAL CHIP	22K	5%	1/10W
R409	1-216-081-00	METAL CHIP	22K	5%	1/10W
R410	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R411	1-216-025-00	METAL GLAZE	100	5%	1/10W
R412	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R413	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R414	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R415	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R419	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R420	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R421	1-216-025-00	METAL GLAZE	100	5%	1/10W
R422	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R424	1-216-025-00	METAL GLAZE	100	5%	1/10W
R425	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R426	1-216-845-11	METAL CHIP	100K	5%	1/16W
R427	1-216-025-00	METAL GLAZE	100	5%	1/10W
R431	1-216-073-00	METAL CHIP	10K	5%	1/10W
R432	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R433	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R434	1-208-806-11	METAL CHIP	10K	0.50%	1/10W
R435	1-208-806-11	METAL CHIP	10K	0.50%	1/10W
R436	1-208-806-11	METAL CHIP	10K	0.50%	1/10W
R437	1-208-806-11	METAL CHIP	10K	0.50%	1/10W
R445	1-216-025-00	METAL GLAZE	100	5%	1/10W
R446	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R447	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R448	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R449	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R450	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R451	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R452	1-216-025-00	METAL GLAZE	100	5%	1/10W
R453	1-216-025-00	METAL GLAZE	100	5%	1/10W
R454	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R455	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R457	1-216-025-00	METAL GLAZE	100	5%	1/10W
R458	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R459	1-216-841-11	METAL CHIP	47K	5%	1/16W
R460	1-216-025-00	METAL GLAZE	100	5%	1/10W
R461	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R601	1-216-041-00	METAL CHIP	470	5%	1/10W
R602	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R603	1-216-073-00	METAL CHIP	10K	5%	1/10W
R604	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R605	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R606	1-216-073-00	METAL CHIP	10K	5%	1/10W
R607	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R608	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R609	1-216-041-00	METAL CHIP	470	5%	1/10W
R610	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R611	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R612	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R613	1-216-083-00	METAL CHIP	27K	5%	1/10W
R614	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R615	1-216-057-00	METAL CHIP	2.2K	5%	1/10W

MAIN **MOTOR** **POSITION**

Ref. No.	Part No.	Description			Remark
R616	1-216-073-00	METAL CHIP	10K	5%	1/10W
R617	1-216-041-00	METAL CHIP	470	5%	1/10W
R618	1-216-073-00	METAL CHIP	10K	5%	1/10W
R619	1-216-073-00	METAL CHIP	10K	5%	1/10W
R620	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R621	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R622	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R623	1-216-081-00	METAL CHIP	22K	5%	1/10W
R624	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R625	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R626	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R627	1-216-073-00	METAL CHIP	10K	5%	1/10W
R628	1-216-073-00	METAL CHIP	10K	5%	1/10W
R629	1-216-073-00	METAL CHIP	10K	5%	1/10W
		< VARIABLE RESISTOR >			
RV201	1-238-716-11	RES, ADJ, METAL GLAZE 100K (C910RDS)			
		< SWITCH >			
S202	1-572-272-11	SWITCH, SLIDE (FREQUENCY SELECT) (E)			
S401	1-572-272-11	SWITCH, SLIDE (POWER SELECT)			
S402	1-692-431-21	SWITCH, TACTILE (RESET)			
S407	1-572-272-11	SWITCH, SLIDE (DIGITAL/ANALOG SELECT)			
		< VIBRATOR >			
X1	1-567-908-11	VIBRATOR, CRYSTAL (16.9MHz)			
X201	1-577-126-51	VIBRATOR, CRYSTAL (7.2MHz)			
X202	1-579-952-21	VIBRATOR, CERAMIC (8MHz)			
X203	1-760-556-11	VIBRATOR, CRYSTAL (4.332MHz) (C910RDS)			
X204	1-579-465-13	VIBRATOR, CRYSTAL (4.19MHz) (C910RDS)			
X401	1-579-886-21	VIBRATOR, CRYSTAL (32.768kHz)			
X402	1-760-489-11	VIBRATOR, CERAMIC (5.0MHz)			
**********					
*	1-661-539-11	MOTOR BOARD			
		**********			
		< BUZZER >			
BZ901	1-504-468-21	SOUNDER, PIEZOELECTRIC			
		< CAPACITOR >			
C904	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C905	1-126-157-11	ELECT	10uF	20%	16V
C906	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C999	1-113-987-11	TANTAL. CHIP	4.7uF	20%	25V

Ref. No.	Part No.	Description	Remark
		< CONNECTOR >	
CN903	1-750-862-21	PIN, CONNECTOR (PC BOARD) 5P	
* CN904	1-691-741-21	PIN, CONNECTOR (PC BOARD) 2P	
		< DIODE >	
D902	8-719-914-43	DIODE DAN202K	
D903	8-719-977-28	DIODE DTZ10B	
D904	8-719-988-62	DIODE 1SS355	
D905	8-719-988-62	DIODE 1SS355	
D920	8-719-105-99	DIODE RD6.2M-B1	
		< IC >	
IC901	8-759-276-89	IC BA6285FP-E2	
		< TRANSISTOR >	
Q903	8-729-900-53	TRANSISTOR DTC114EK	
Q904	8-729-921-25	TRANSISTOR FMC2	
Q905	8-729-920-85	TRANSISTOR 2SD1664-QR	
Q920	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
		< RESISTOR >	
R908	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R909	1-216-821-11	METAL CHIP 1K 5%	1/16W
R997	1-216-833-11	METAL CHIP 10K 5%	1/16W
R999	1-216-864-11	CONDUCTOR, CHIP (1608)	
**********			
*	1-661-538-11	POSITION BOARD	
		**********	
		< CONNECTOR >	
CN901	1-695-440-21	PIN, CONNECTOR (PC BOARD) 6P	
		< RESISTOR >	
R901	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R902	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R903	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R904	1-216-097-00	METAL GLAZE 100K 5%	1/10W
		< SWITCH >	
S901	1-572-288-11	SWITCH, PUSH (20 DEGREE SETTING)	
S902	1-572-288-11	SWITCH, PUSH (10 DEGREE SETTING)	
S903	1-572-688-11	SWITCH, PUSH (1 KEY) (CLOSE END DETECT)	
S904	1-572-288-11	SWITCH, PUSH (OPEN END DETECT)	
**********			

Ref. No.	Part No.	Description			Remark
*	1-661-546-11	POWER BOARD			
		**********			
		(Included in MAIN BOARD, COMPLETE)			
		< CAPACITOR >			
C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C910	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
		< CONNECTOR >			
CN907	1-778-292-11	CONNECTOR, BOARD TO BOARD 6P			
CN908	1-778-291-11	CONNECTOR, BOARD TO BOARD 4P			
CN909	1-569-146-11	CONNECTOR			
		< DIODE >			
D908	8-719-028-74	DIODE NSQ03A04			
D909	8-719-313-73	DIODE SFPB-52			
		< COIL >			
L902	1-411-402-11	COIL, CHOKE	1000uH		
L903	1-411-404-11	COIL, CHOKE	680uH		
L904	1-411-403-11	COIL, CHOKE	470uH		
		< THERMISTOR >			
TH901	1-809-148-11	THERMISTOR PTH8L07AR2ROM1B510			
TH902	1-809-148-11	THERMISTOR PTH8L07AR2ROM1B510			
**********					
*	A-3309-546-A	SERVO BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C2	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C101	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C102	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C105	1-111-253-11	TANTAL. CHIP	100uF	20%	6.3V
C106	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C107	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C108	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C109	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C110	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C111	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C112	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C113	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C114	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C115	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
C116	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C117	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C118	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C119	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C120	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C121	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C122	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C123	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C124	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C125	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C126	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C203	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C204	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C205	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C206	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C207	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C208	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C209	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C301	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C302	1-110-456-11	SOLID CHIP	47uF	20%	16V
C303	1-164-336-11	CERAMIC CHIP	0.33uF		25V
C304	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C305	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C306	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C307	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C308	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C309	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V
C310	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C311	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C312	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C313	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C330	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C331	1-110-456-11	SOLID CHIP	47uF	20%	16V
C332	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C334	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C335	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C336	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
		< CONNECTOR >			
CN1	1-764-616-12	HOUSING, CONNECTOR (PC BOARD) 30P			
CN2	1-766-491-11	CONNECTOR, FPC 17P			
CN3	1-764-439-21	CONNECTOR, FPC 11P			
CN4	1-770-347-21	CONNECTOR, FPC 6P			
CN5	1-569-775-21	PIN, CONNECTOR 5P			
CN6	1-580-055-21	PIN, CONNECTOR 2P			
		< IC >			
IC1	8-752-069-29	IC CXA1791N			
IC2	8-752-369-78	IC CXD2545Q			

SERVO SUB

Ref. No.	Part No.	Description				Remark
IC3	8-752-373-27	IC	CXD2512AQ			
IC4	8-759-342-14	IC	uPD424400GS-60-9JD			
IC5	8-752-873-71	IC	CXP84332-031Q			
IC6	8-759-823-87	IC	LB1638M			
IC7	8-759-370-18	IC	BA6797FP-E2			
IC8	8-759-349-32	IC	BA6840AFS-T1			
		< COIL >				
L101	1-412-060-11	INDUCTOR CHIP	22uH			
L102	1-412-060-11	INDUCTOR CHIP	22uH			
L103	1-412-060-11	INDUCTOR CHIP	22uH			
		< TRANSISTOR >				
Q1	8-729-901-05	TRANSISTOR	DTA124EK			
Q2	8-729-011-95	TRANSISTOR	RN-2426			
Q3	8-729-141-48	TRANSISTOR	2SB624-BV345			
		< RESISTOR >				
R101	1-216-295-00	CONDUCTOR, CHIP		(2012)		
R102	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R103	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R104	1-216-103-00	METAL CHIP	180K	5%	1/10W	
R105	1-216-103-00	METAL CHIP	180K	5%	1/10W	
R106	1-216-001-00	METAL CHIP	10	5%	1/10W	
R108	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R109	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R110	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R111	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R112	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R113	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R114	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R115	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R116	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R117	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R118	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R119	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R120	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R121	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R122	1-216-033-00	METAL CHIP	220	5%	1/10W	
R123	1-216-033-00	METAL CHIP	220	5%	1/10W	
R124	1-216-033-00	METAL CHIP	220	5%	1/10W	
R125	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R127	1-216-033-00	METAL CHIP	220	5%	1/10W	
R129	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R132	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R133	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R140	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R141	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R142	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R143	1-216-091-00	METAL CHIP	56K	5%	1/10W	
R203	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R204	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R207	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R208	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R209	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R210	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R211	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R212	1-216-295-00	CONDUCTOR, CHIP		(2012)		
R213	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R214	1-216-295-00	CONDUCTOR, CHIP		(2012)		
R217	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R218	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R301	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R302	1-216-037-00	METAL CHIP	330	5%	1/10W	
R303	1-216-308-00	METAL CHIP	4.7	5%	1/10W	
R304	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R305	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R306	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R307	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R308	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R309	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R310	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R311	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R312	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R313	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R314	1-216-103-00	METAL CHIP	180K	5%	1/10W	
R315	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R316	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R317	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R318	1-208-814-11	METAL CHIP	22K	0.50%	1/10W	
R319	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R320	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R330	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R331	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R332	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R333	1-217-671-11	METAL CHIP	1	5%	1/10W	
		< VIBRATOR >				
X1	1-760-365-11	VIBRATOR, CERAMIC (10MHz)				
**********						
*	1-659-834-11	SUB BOARD				
		*********				
		< CONNECTOR >				
CN1	1-770-347-21	CONNECTOR, FPC 6P				
**********						

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
29	1-777-180-21	CORD (WITH CONNECTOR) (EL)	
30	1-777-397-11	CORD, ILLUMI	
⚠258	8-848-402-02	OPTICAL PICK-UP KSS-520A	
ANT1	1-777-246-11	CORD (WITH CONNECTOR) (ANT) (MAIN/SUB)	
CNP900	1-696-624-41	CORD (WITH CONNECTOR) (AUDIO) (LINE OUTPUT/AUX INPUT)	
EL701	1-517-557-11	LIGHT, ELECTRO LUMINESCENT	
F1	1-532-731-11	FUSE (BRADE TYPE) (AUTO FUSE) (3A)	
F2	1-532-731-11	FUSE (BRADE TYPE) (AUTO FUSE) (3A)	
LCD701	1-801-281-11	DISPLAY PANEL, LIQUID CRYSTAL	
M901	X-3371-665-1	MOTOR ASSY (SPINDLE)	
M902	A-3291-574-A	MOTOR ASSY, SLED	
M903	A-3291-576-A	MOTOR SUB ASSY, LO (LOADING)	
M905	X-3372-497-1	MOTOR ASSY (OPEN/CLOSE)	
**********			
		**********	
		HARDWARE LIST	
		**********	
#1	7-627-553-68	SCREW, PRECISION +P 2X6	
#2	7-621-770-67	SCREW +PTT 2.6X6 (S)	
#3	7-621-773-95	SCREW +PTT 2.6X6 (S)	
#4	7-621-259-25	SCREW +P 2.6X4	
#5	7-624-104-04	RETAINING, RING E-1.9	
#6	7-627-553-28	SCREW, PRECISION +P 2X2.5	
#7	7-685-105-19	SCREW +P 2X8 TYPE2 NON-SLIT	
#8	7-627-553-37	PRECISION SCREW +P 2X3 TYPE 3	
#9	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3	
#10	7-627-000-00	SCREW, PRECISION +P 1.7X2.2 TYPE 3	
#11	7-627-850-28	SCREW, PRECISION +P 1.4X3	
#12	7-628-253-00	SCREW +PS 2X4	
**********			
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-473-067-31	REMOTE COMMANDER (RM-X2S)	
	3-370-129-01	CASE (for FRONT PANEL)	
	3-856-714-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, CHINESE) (C910:E)	
	3-856-714-21	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (C910:US, Canadian)	
	3-856-715-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, CHINESE) (C910:E)	
	3-856-715-21	MANUAL, INSTRUCTION (ENGLISH) (C910:US, Canadian)	
	3-856-715-31	MANUAL, INSTRUCTION (FRENCH) (C910:Canadian)	
	3-856-716-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH, ITALIAN, GERMAN) (C910RDS)	
	3-856-716-21	MANUAL, INSTRUCTION, INSTALL (SPANISH, DUTCH, SWEDISH, PORTUGUESE) (C910RDS:AEP, UK)	
	3-856-717-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN) (C910RDS)	
	3-856-717-21	MANUAL, INSTRUCTION (ITALIAN, SPANISH) (C910RDS)	
	3-856-717-31	MANUAL, INSTRUCTION (DUTCH, SWEDISH, PORTUGUESE) (C910RDS:AEP, UK)	

****

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
		PARTS FOR INSTALLATION AND CONNECTIONS	
		**********	
501	3-916-161-42	FRAME, FITTING	
502	3-914-406-01	SUPPORT (ND), FITTING (C910:US, Canadian)	
503	X-3368-725-1	SCREW ASSY, FITTING (C910:US, Canadian)	
504	7-682-560-04	SCREW +P 4X6 (C910:US, Canadian)	
505	3-934-325-01	SCREW, +K (5X8) TAPPING	
506	3-934-788-01	FRAME, ORNAMENTAL	
507	3-934-787-01	SPRING, FITTING	
508	1-777-247-21	CORD, POWER (C910:US/C910RDS)	
509	X-3369-817-1	BRACKET ASSY	
510	1-775-543-11	CORD, GROUND	
511	3-344-561-21	SCREW (M4X4)	
512	X-3366-405-1	SCREW ASSY (EXP), FITTING (C910:E/C910RDS:AEP, UK, German)	
513	3-386-828-01	SCREW, FITTING (C910:E/C910RDS:AEP, UK, German)	
514	3-349-410-01	BUSHING (C910:E/C910RDS:AEP, UK, German)	

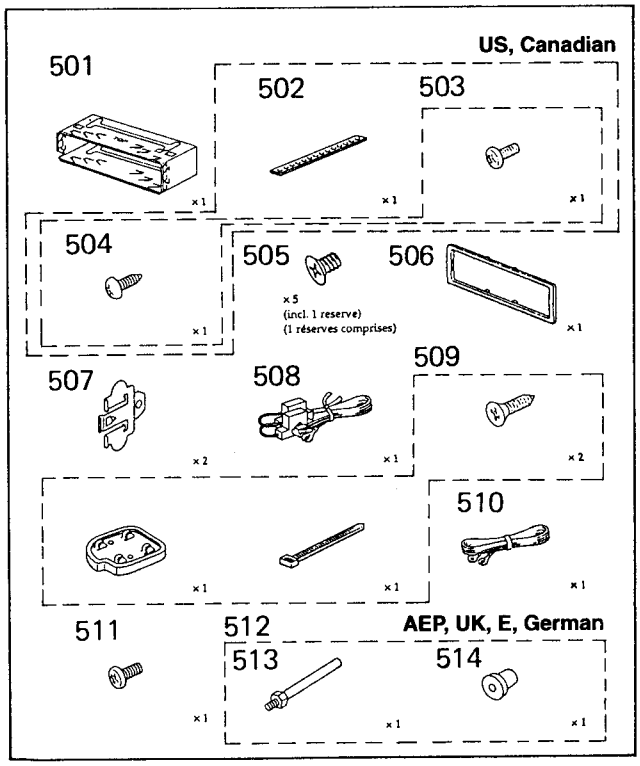

English
96F0579-1
Printed in Japan
© 1996. 6
Published by Quality Assurance Dept.

CDX-C910/C910RDS

SONY

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

SUPPLEMENT-1

File this supplement with the service manual.

Subject : Notes on Cleaning The Objective Lens

NOTES ON CLEANING THE OBJECTIVE LENS

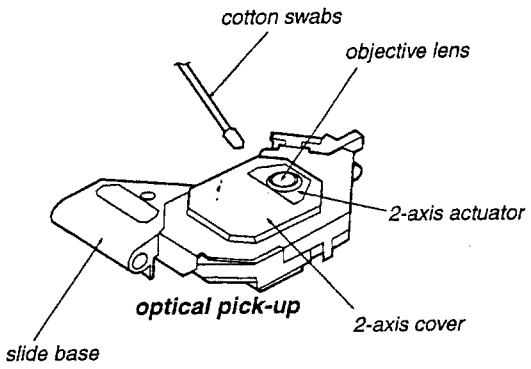

Apply CD lens cleaner B-4 (Part No.: J-2501-000-A) to cotton swabs (narrow type) (Part No.: J-2501-023-A) to be lightly wet. Use a force (about 5 g (0.18 oz)) to make the objective lens in contact with the bottom lightly, and clean the lens by spirals as following below.
Replace the cotton swab and repeat this cleaning two or three times.

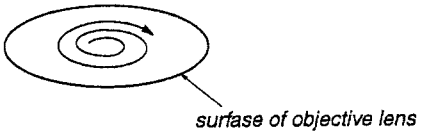

Notes:
Do not force to push the objective lens. Otherwise, the plate spring supporting the objective lens will be bent, causing a deteriorated RF waveform.
Never touch anything other than the objective lens. Otherwise, a significant deterioration occurs in the RF waveform.

9-923-549-81

Sony Corporation
Personal & Mobile Communication Company

English
96H0480-1
Printed in Japan

©1996.8

Published by Quality Assurance Dept.

CDX-C910/C910RDS

8068

SONY

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-1

Correct your service manual as shown below.

☛ : indicates corrected portion.

Page	INCORRECT			CORRECT		
	No.	Part No.	Description	No.	Part No.	Description
59	153	3-701-439-11	WASHER			
	*154	3-322-413-01	SPACER, INSULATING			

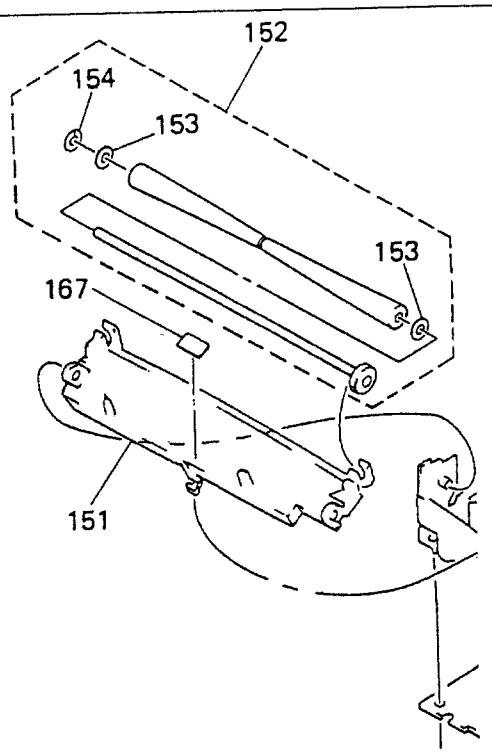

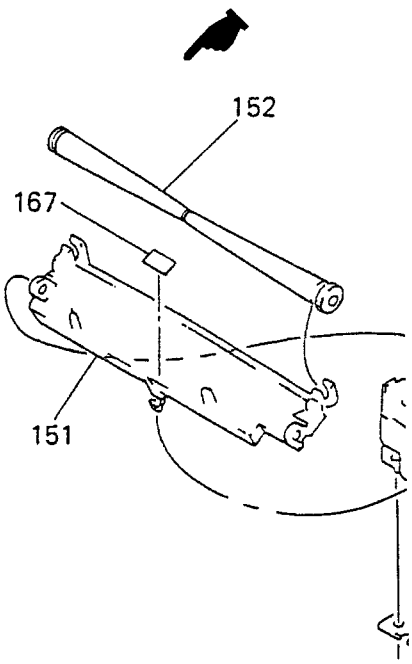

(SPM-96051)

9-923-549-91

Sony Corporation
Personal & Mobile Communication Company

English
9610480-1
Printed in Japan

©1996.9

Published by Quality Assurance Dept.

CDX-C910/C910RDS

SONY

SERVICE MANUAL

8068

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-2

Correct your service manual as shown below.

☛ : Indicate corrected portion

<table>
<tr><th>Page</th><th>INCORRECT</th><th>CORRECT</th></tr>
<tr><td></td><td>Ref. No. Part No. Description Remark</td><td>Ref. No. Part No. Description Remark
34 1-778-182-11 SOCKET, CONNECTOR 18P ☛</td></tr>
<tr><td>56</td><td> 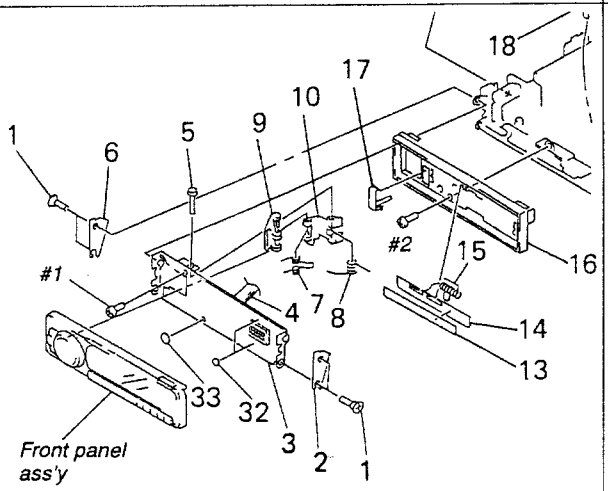
</td><td> 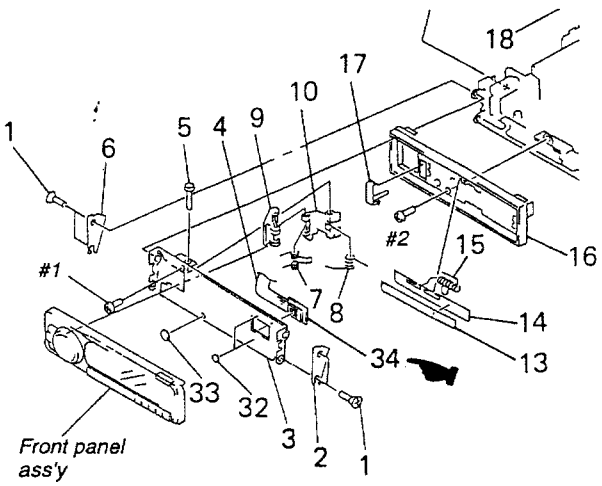
</td></tr>
<tr><td>75</td><td>Ref. No. Part No. Description Remark</td><td>Ref. No. Part No. Description Remark
34 1-778-182-11 SOCKET, CONNECTOR 18P ☛</td></tr>
</table>

(SPM-97001)

9-923-549-92

Sony Corporation
Personal & Mobile Communication Company

97B0581-1
Printed in Japan © 1997. 2
Published by Quality Assurance Dept.

06C

CDX-C910/C910RDS

SONY

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-3

Correct your service manual as shown below.

☛ : indicates corrected portion.

Page	INCORRECT			CORRECT		
	No.	Part No.	Description	No.	Part No.	Description
68	DD1	1-473-682-21	CONVERTER UNIT, DC/DC	DD1	1-473-682-31 ☛	CONVERTER UNIT, DC/DC

(ENG-97006)

9-923-549-93

Sony Corporation
Personal & Mobile Communication Company

97C0481-1
Printed in Japan ©1997.3
Published by Quality Assurance Dept.

CDX-C910/C910RDS

SONY

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-4

Correct your service manual as shown below.

Page	INCORRECT			CORRECT		
	No.	Part No.	Description	No.	Part No.	Description
56	9	3-934-756-01	ARM (LOCK)	9	3-934-757-01	HOLDER (LOCK)
	10	3-934-757-01	HOLDER (LOCK)	10	3-934-756-01	ARM (LOCK)

(RPC-98002)

9-923-549-94

Sony Corporation
Personal & Mobile Communication Company

98C0575-1
Printed in Japan © 1998.3
Published by Quality Assurance Dept.

CDX-C910/C910RDS

8068

SONY

SERVICE MANUAL

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-5

Correct your service manual as shown below.

Page	INCORRECT			CORRECT		
	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
72	———	———	———	TU201	A-3282-020-A	TUNER UNIT (TUX-009(E))

(SPM-98045)

9-923-549-95

Sony Corporation
Personal & Mobile Communication Company

9810576-1
Printed in Japan © 1998. 9
Published by Quality Assurance Dept.

CDX-C910/C910RDS

2032131

SONY

SERVICE MANUAL

3068

US Model
Canadian Model
E Model
CDX-C910
AEP Model
UK Model
CDX-C910RDS

CORRECTION-6

Correct your service manual as shown below.

☛ : Indicate corrected portion

Page	INCORRECT	CORRECT
34	Location : L-35 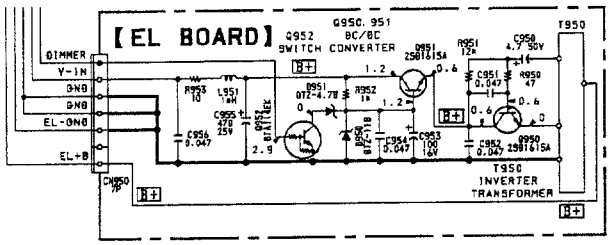	Location : L-35 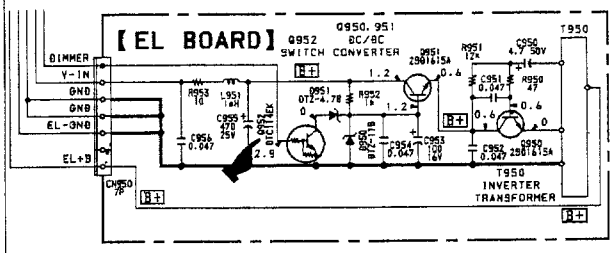
62	Ref. No. Part No. Description Q952 8-729-027-23 TRANSISTOR DTA114EKA-T146	Ref. No. Part No. Description Q952 8-729-900-53 TRANSISTOR DTC114EK

(SPM-00003)

9-923-549-96

Sony Corporation
Mobile Electronics Division Company

2000B0574-1
Printed in Japan © 2000. 2
Published by General Engineering Dept.